


Please read instructions carefully before use. Retain for future reference.

PACKAGE CONTENTS:

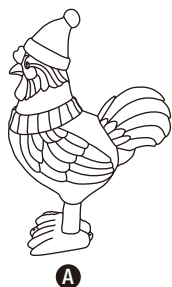


Part	Description	Quantity
A	Blow Mold Rooster	1
B	Ground Stakes	2



WARNING: This is not a toy and is for decorative purposes only. For indoor and outdoor use. This item is not intended for use by children under the age of 14 years. Do not place product near an open fire or heat source such as a radiator, stove, etc.

INSTALLATION:

Insert 2x Ground Stakes (B) in Blow Mold Rooster foots (A). Secure into level & firm ground for outdoor stability.

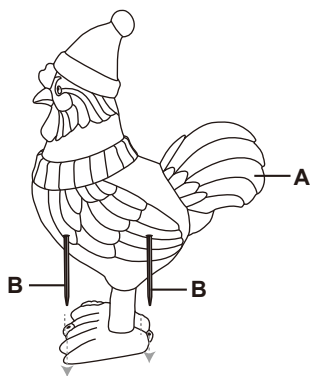

THIS PRODUCT INCLUDES A REMOVABLE "TRY-ME" BUTTON FOR IN-STORE DEMONSTRATION. THE WIRE LEADING FROM THE TRY-ME BUTTON SHOULD BE REMOVED AFTER PURCHASE.

INSTRUCTIONS:

Requires (3) AA batteries (Included). Please note that the included batteries are for in-store TRY-ME demonstration purposes only. Batteries should be replaced after purchase with quality alkaline batteries to ensure the item's proper operation.

1. Carefully remove product from package and properly discard of any fasteners, tags or bags with care.
2. The battery case is located under the hip.
3. Using a small screwdriver, remove the safety screw located on the battery compartment cover.
4. Remove cover and clean both ends of the battery contacts and also the contacts of the device prior to installing the batteries. Insert (3) AA batteries with correct polarity. Replace cover and safety screw.
5. The ON/OFF switch is located on the battery case. Move the switch to the "ON" position to activate the LED Lights and Timer feature. When the Timer feature is activated, the lights will automatically turn ON for 6 hours and shut OFF for 18 hours. Switch to the "OFF" position to activate the Try Me feature, Press the TRY-ME button for a short version demonstration.
6. Replace the batteries if the LED lights becomes dim.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

BATTERY USAGE:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium, ni-mh etc.) batteries.
3. Alkaline batteries are suggested for longer life.
4. Remove exhausted batteries from the product.
5. Dispose of exhausted batteries with care.
6. Do not dispose of batteries in fire. Batteries may explode or leak.

CAUTION: Remove batteries if consumed or if the product is to be left unused for a long period of time.

RECYCLE YOUR BATTERIES: To help protect the environment, all batteries should be recycled. A local recycling center can be located at: <http://earth911.com/haz-ardous/single-use-batteries>. Or, in the United States call 1-800-CLEANUP for a recycling location near you.

WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather. To prevent damage, you must move this product indoors before severe weather is forecast. Damage caused by failure to follow these instructions is not covered by the warranty.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connect.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

"(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Responsible Party-U.S. Contact Information

TRACTOR SUPPLY COMPANY 5401 VIRGINIA WAY, BRENTWOOD TN 37027

For Customer Support

Call:1-888-376-9601

For Decoration Only.

Not a Toy.

Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY

5401 Virginia Way, Brentwood TN 37027

For customer support call 1-888-376-9601

www.TractorSupply.com

MADE IN Cambodia