



R10 10,000 mAh
LITHIUM BATTERY



R5 5,000 mAh
LITHIUM BATTERY

FLEXPACK INSTRUCTION MANUAL

Table of Contents

3	Introduction
4	Quick Start Guide
4	How to Charge
6	Get to Know Your FlexPack Power System
6	What's Included
	FlexPack Anatomy
7	General Features & FAQs
7	General Features
7	FAQs
9	Specifications
9	Electrical
10	FCC Regulations

INTRODUCTION

Congratulations on your purchase of the REVEAL FlexPack™! We truly value your business and strive to provide you with exceptional customer service. Check out our other products at [Tactacam.com](https://tactacam.com). These important safety instructions should be read and followed before using this device. Save these instructions for future reference.

Note: You must charge this FlexPack with the included USB-C charging cable for a minimum of 4 hours before use.

QUICK START GUIDE

HOW TO CHARGE:

1. Ensure the battery and charging cable are in good condition:
 - a. Inspect the battery for any visible damage or swelling. If damaged, do not charge and dispose of it properly.
 - b. Inspect the charging cable for any frayed wires or defects.
2. Connect the battery to the charging cable's USB-C connector. Insert the other end of the USB-C cable into the adaptor port. Ensure it is securely connected.
3. Connect the charging adaptor to a power outlet and ensure the outlet provides a stable power supply.
4. Once the battery reaches a full charge (all LEDs are illuminated and not blinking), disconnect the battery from the charger.
5. Store the battery properly after charging. If not using the battery immediately, store it in a cool, dry place. Avoid leaving the battery fully charged or completely discharged for extended periods, as this can reduce its lifespan.

Note: The camera door must be opened all the way to get the battery tray or FlexPack R5 or R10 power system in/out.

READ BEFORE USING!

Use only the included charging cable: Always use the supplied charging cable and a 5V, 2A+ USB-C charging adapter.

Charge in a safe location: Charge the FlexPack in a cool, dry area away from flammable materials or extreme temperatures. Do not charge the battery on a bed, sofa, or in any area where airflow is restricted.

Avoid overcharging: Overcharging can reduce battery life and pose safety risks. Do not exceed the recommended charging time or voltage.

Charge at room temperature: Avoid charging the battery in temperatures below 32F (0C) or above 113F (45C), as this may damage the battery or affect its performance.

Do not charge if damaged: If the battery has been dropped, exposed to liquid, or shows signs of damage, do not charge it and contact Tactacam customer service for assistance.

When possible, avoid partial charges: Frequent partial charges can shorten the battery's lifespan. When possible, charge the battery fully.

Storage: If you plan to store the battery for an extended period, it's recommended to store it at around 40–60% charge. Avoid leaving it in a fully charged or empty state for long periods.


Get to Know Your FlexPack Power System

What's Included:

- REVEAL FlexPack™ R5 or R10
- USB-C charging cable

FlexPack Anatomy:

- 1 FlexPack R5
- 2 FlexPack R10
- 3 Battery Level Check Button
- 4 Battery Level LED Indicator
- 5 Camera Connection Port
- 6 USB-C Port
- 7 External Battery In/DC Port
- 8 1/4-20 Accessory
- 9 Cord Retention Receptacle

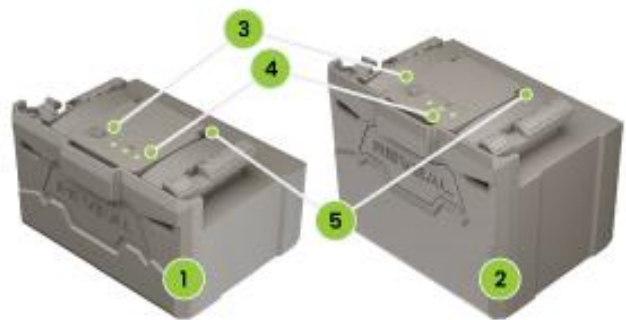

The FlexPack R5 and R10 modular batteries are compatible with: REVEAL Pro 4.0, REVEAL X 4.0, and REVEAL Pro 4.0 Solar.

GENERAL FEATURES

Extended Runtime:

Stay in the field longer with reliable, long-lasting power and fewer battery swaps

Cost-Savings:

The FlexPack R5 replaces up to 1,000 disposable AA batteries while the FlexPack R10 replaces up to 2,000 disposable AA batteries, reducing waste and saving you money

Quick-Swap Convenience:

Easy to install and remove

Durable and Weather Resistant:

Built tough to handle harsh field conditions season after season

FAQs:

Question:

Does the FlexPack R5 or R10 work with my REVEAL 3.0 camera?

Answer:

The REVEAL FlexPack™ R5 or R10 only works with REVEAL Pro 4.0 and REVEAL X 4.0 cameras.

Question:

Why am I having trouble getting the FlexPack R5 or R10 out of my 4.0 camera?

Answer:

Make sure that the camera door is open all the way when trying to get a FlexPack or battery tray in or out.

Question:

How many batteries does the FlexPack replace?

Answer:

The FlexPack R5 replaces up to 1,000 disposable AA batteries while the Flexpack R10 replaces up to 2,000 disposable AA batteries.

SPECIFICATIONS

Electrical:

Output Voltage/Current (DC Barrel)	N/A
Lithium-Ion Battery	5,000 mAh @7.2V Lithium battery(2 x 21,700 cells) 10,000 mAh @7.2V Lithium battery (4 x 21,700 cells)
Charging Time	When using a 5V 3A source, roughly 3.5 hours for the R5 and 6.5 hours for the R10
Output Plug	DC Barrel Jack

Dimensions	R5: 94 x 52 x 71 mm R10: 94 x 72 x 71 mm
Weight	R5: 9 oz R10: 15 oz

Operating Temperature	4~+140°F/-20~+60°C
Operation Humidity	5-95%

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experience radio/ TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FlexPack R5 or R10: CAUTION: Risk of fire and burns. Do not open, crush, heat above (45C (113F) while charging or 60C (140F) while discharging) or incinerate. Follow the manufacturer's instructions.



REVEAL
AMERICA'S #1
TRAIL CAMERA BRAND

★ ★ ★ ★ ★
BY TACTACAM