 


Please read instructions carefully before use. Retain for future reference.

PACKAGE CONTENTS:

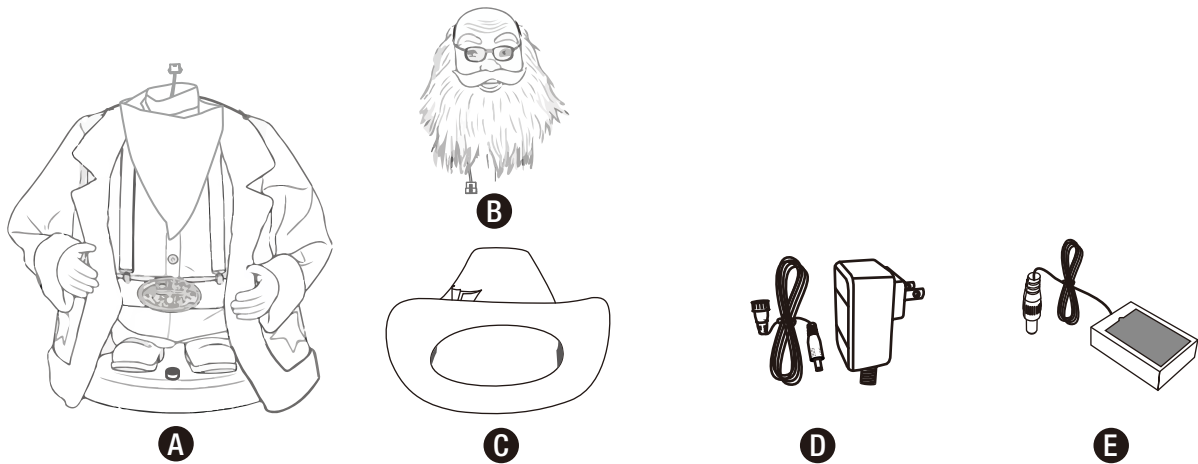


Part	Description	Quantity
A	Santa body	1
B	Head	1
C	Hat	1
D	AC/DC Adapter and Cable	1
E	Battery Box and Cable	1

WARNING: This is not a toy and is for decorative purposes only. For indoor and outdoor covered use. This item is not intended for use by children under the age of 14 years. Do not place product near an open fire or heat source such as a radiator, stove, etc.
ACTUAL ITEM MAY VARY SLIGHTLY FROM PHOTO.

IMPORTANT: This item can be operated by UL listed DC 5V, 2A adapter or 3 x "D" batteries (ADAPTER AND BATTERIES ARE INCLUDED). Adapter should be plugged into 100-240V household outlet.


INSTALLATION:

Step 1

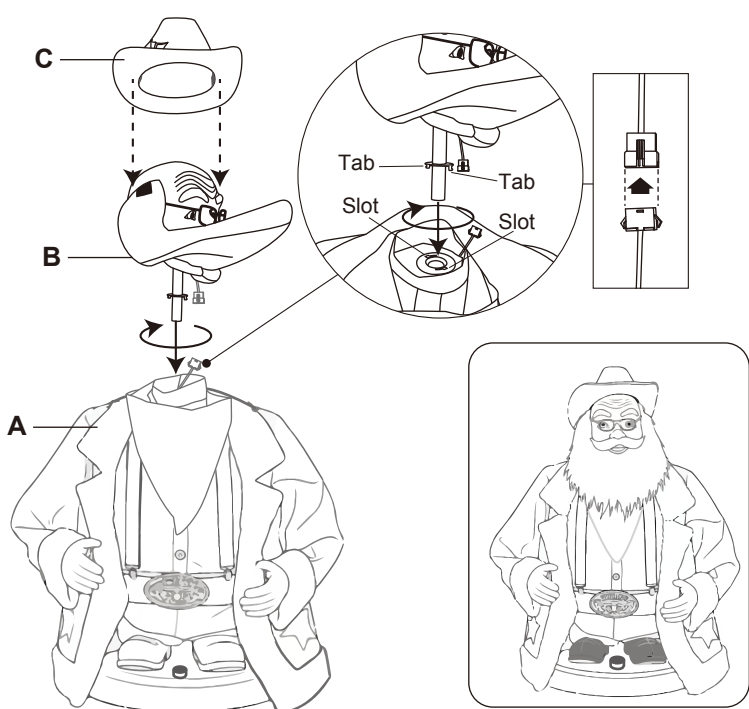

Align the tab on the bottom of the head (B) with the slot on the top of the body (A), then rotate clockwise to secure it in place. Secure Hat (C) to Santa Head (B) by connecting the Hook & Loop strips on both parts together.


Step 2

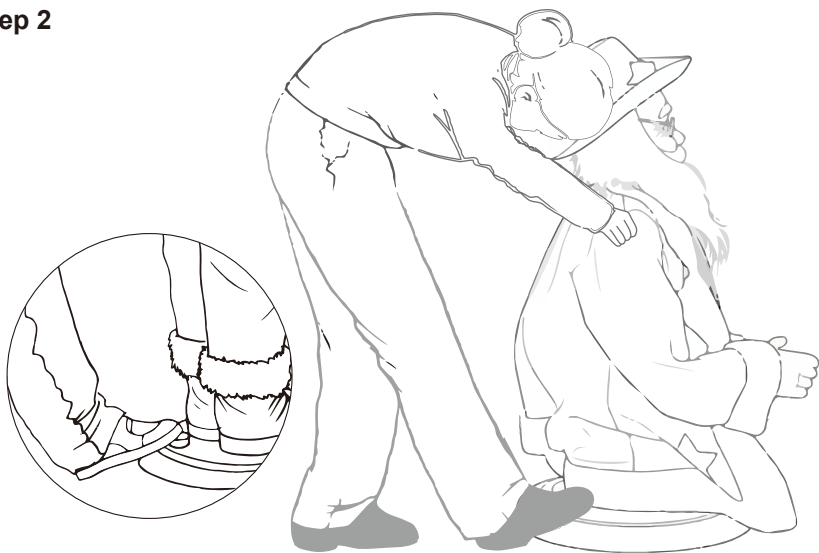

Carefully step on the "release button" located behind Santa's feet. While pressing the button, hold Santa by both shoulders and gently lift the figure straight up. Once the figure begins to rise, remove your foot from the "release button" and continue lifting from the shoulders until you hear the body section "click" into place. This indicates that the figure is fully extended and locked in position.


NOTE: If the figure gets stuck while lifting or lowering, take your foot off the "release button," then try the operation again.

Step 3

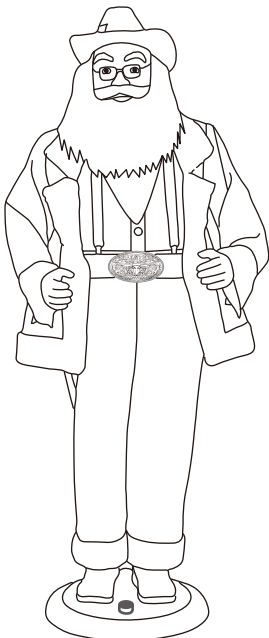

Once the Dancing Santa is assembled, it can be placed in the desired location. If placed outdoors, then item must be put in a covered location. Santa's costume can also be straightened and the arms posed to your liking to give him a more festive look.


Step 4

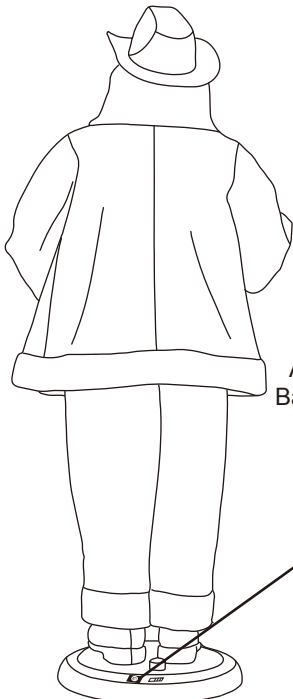

This product operates on 3 "D" batteries or the included AC/DC Adapter. Insert Cable Jack into DC Jack on base.

NOTE: The included 3 x "D" batteries are for "Try Me" demonstration purposes only. If the product performance becomes weak, please replace with fresh batteries or operate using the included AC/DC adapter.

Back View

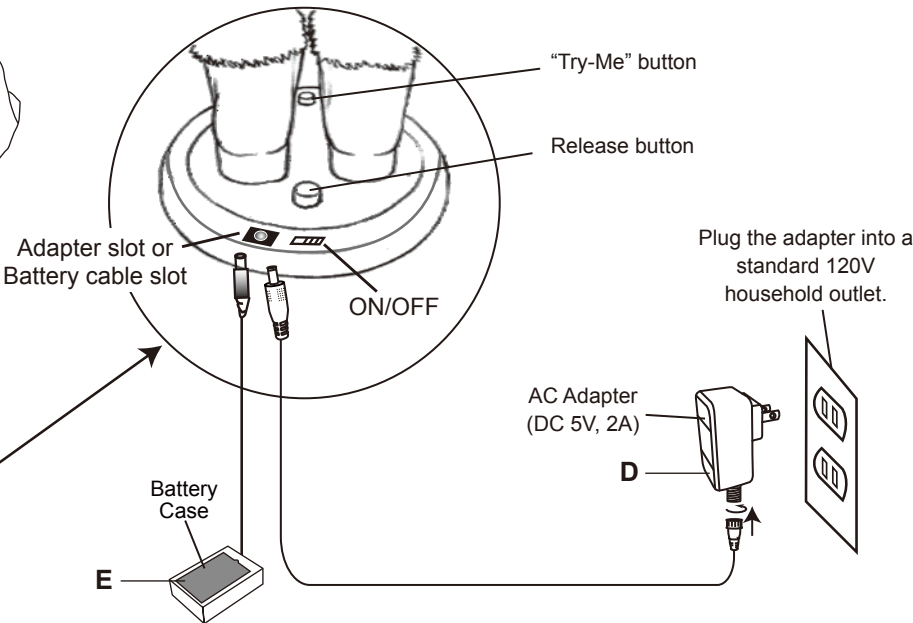

OPERATION INSTRUCTIONS:

BATTERY REPLACEMENT

- 1. The battery box compartment is located on the end of the cable.
- 2. Open cover and clean both ends of the battery contacts and also the contacts of the device prior to installing the batteries. Insert (3) D batteries with correct polarity.
- 3. Close the battery case cover.
- 4. Replace batteries if movement slows.
- 5. Remove batteries if the item will not be used for an extended period of time.

ITEM FUNCTION:

ON	Move the switch into the “ON” position to activate the “Motion Activated” function. When activated, the unit will come to life. The unit will play the full version of sound, motion. (Note: The “Motion Sensor” is activated at angle 120° and the detection zone within 9.8 feet).
OFF	Move the switch into the “OFF” position and press the “Try-Me” button, which is located on the front of the “base section”, to activate Santa's “dancing” motion with arm and body movement and to play the seasonal music.

TROUBLE SHOOTING:

Problem	Solution
The product does not work	1. Check all wire connections and make sure all parts are securely attached.
	2. Check and make sure the ON/OFF switch is in the “ON” position.
	3. When using the batteries: Check to see if the positive and negative terminals of the batteries are installed correctly. The batteries could be drained. Replace with new batteries and try again.
	4. When using the Adapter: Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 120V household outlet.
The Motion Sensor does not work	1. Check to see that the switch is placed in the “ON” position only. 2. Change the product placement environment and try again. 3. Check to see if the ambient temperature is too high. Place the product in a normal temperature environment.

WARNING

- This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.
- 1. Please use the adapter supplied by manufacturer.
 - 2. Please assemble item according to instructions. Connect all wires.
 - 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.
 - 4. Strangulation Hazard: This product contains long cords. To prevent strangulation, do not place the reins around the neck. Keep away from young children. This is not a toy.

SAFETY INSTRUCTIONS:

- 1. All cautions in these operating instructions should be followed completely.
- 2. Do not display figure near any heat source such as radiators, stoves, fireplaces, etc.
- 3. Display should be set up by a qualified person only. Do not attempt to set up this unit beyond what is described in the operating instructions.
- 4. Take extra care when displaying any figure that may contain small parts around small children.
- 5. Use of this decoration should always be supervised by an adult.
- 6. Unplug AC/DC adapter when not in use.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical products, basic precautions should always be practiced including the following:
- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
 - 2. Read and follow all instructions that are on the product or provided with the product.
 - 3. Do not use an extension cord.
 - 4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
 - 5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
 - 6. Do not install or use within 10 feet of a pool.
 - 7. Do not use in a bathroom.
 - 8. **WARNING:** Risk of Electric Shock. When used shelter outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
 - 9. **WARNING:** Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
 - 10. **WARNING:** Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
 - 11. Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather. To prevent damage, you must move this product indoors before severe weather is forecast. Damage caused by failure to follow these instructions is not covered by the warranty.

BATTERY USAGE:

- 1. Battery hazardous if swallowed. Keep battery away from children. This product is not a toy.
- 2. Ensure battery contacts are clean and free of debris.
- 3. Install battery according to correct polarity (+/-).
- 4. DO NOT mix old and new battery.
- 5. DO NOT mix alkaline, standard (carbon-zinc) or other battery.
- 6. DO NOT mix rechargeable and non-rechargeable battery.
- 7. Remove battery when consumed or while product is not in use for extended period of time.
- 8. Battery must be recycled or disposed of properly, in accordance with all state and local regulations. DO NOT crush, puncture, or incinerate.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to: <http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

“(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

Responsible Party-U.S. Contact Information
TRACTOR SUPPLY COMPANY 5401 VIRGINIA WAY, BRENTWOOD TN 37027
For Customer Support
Call:1-888-376-9601

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA

For Decoration Only.
Not a Toy.
Not intended for children.