

# STANDARD SOLAR LAMP

## Instruction Manual

Please read instructions carefully before use. Retain for future reference.

### OPERATION:

#### 1. Initial Setup (Fig.1)

- Remove the solar box from the iron mount.
- Locate the ON/OFF switch and set it to "ON" position to enable charging.

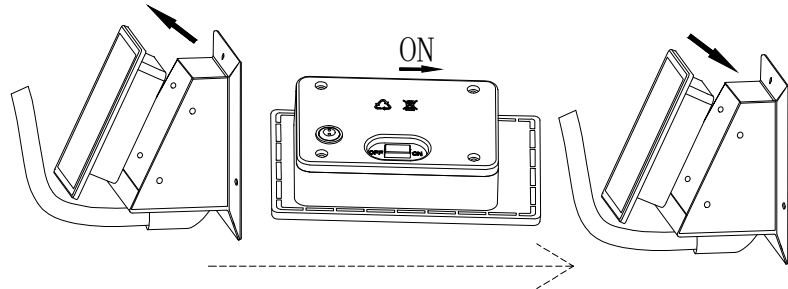 


Fig.1

#### 2. Battery Replacement (Fig.2)

- Remove the solar box from the iron mount.
- Turn the switch to "OFF" position.
- Unscrew and open the battery compartment cover. (*Screwdriver not included*).
- Remove the old battery and replace with a new rechargeable battery of the same type.

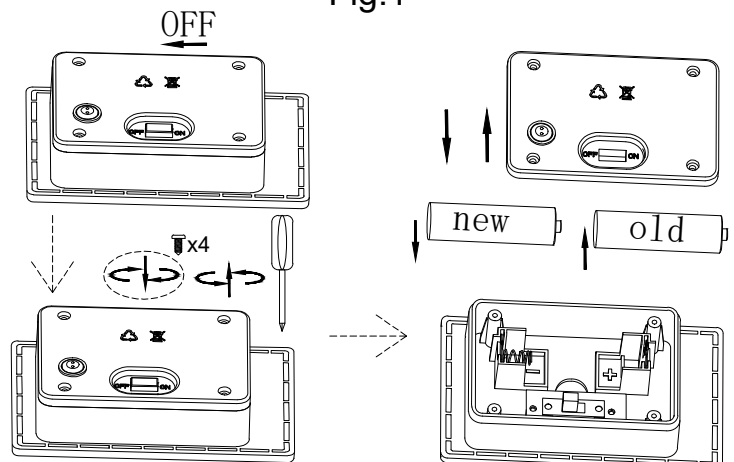 


Fig.2

### USAGE GUIDELINES:

- To use or charge the light, ensure the ON/OFF switch is set to "ON" position.
- Install the solar lamp in an unobstructed, open location where the solar panel remains free from shadows cast by buildings, vegetation, poles, or any other objects throughout the day, ensuring a minimum of 10 hours of direct sunlight for charging each day. (Fig.3)

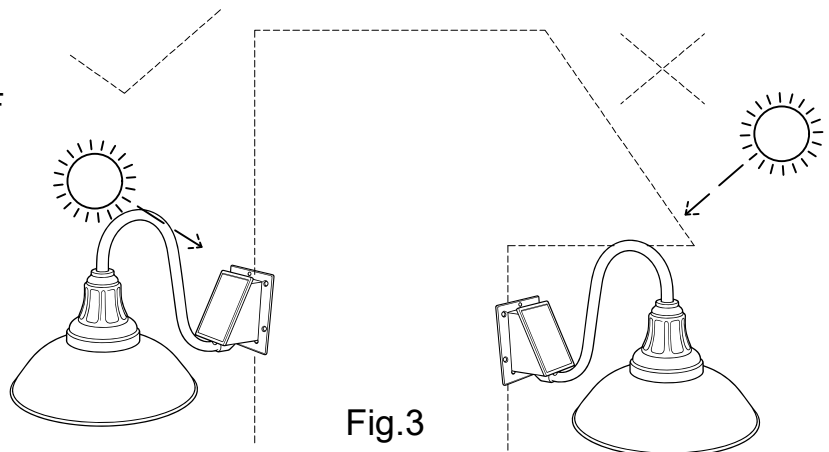 


Fig.3

### Troubleshooting:

If the lamp fails to illuminate at night, check the following:

- Make sure the ON/OFF switch is in the "ON" position.
- Make sure the solar panel is fully exposed to direct sunlight for charging at least 10 hours each day.