 


Please read instructions carefully before use. Retain for future reference.

PACKAGE CONTENTS:

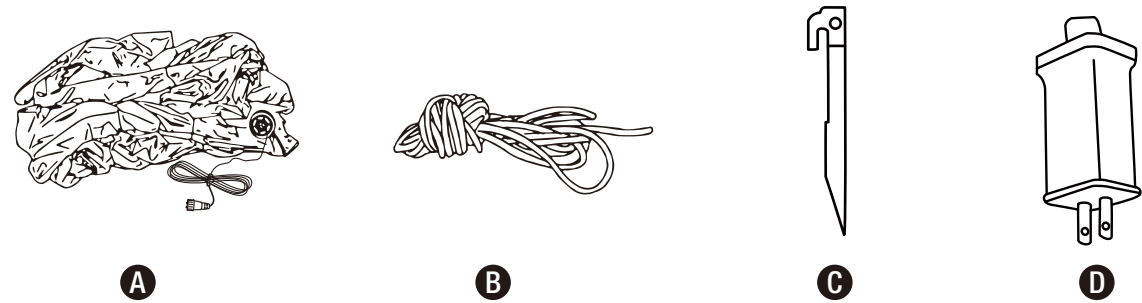


Part	Description	Quantity
A	Inflatable chicken coop	1
B	Tethers	4
C	Ground Stakes	8
D	AC/DC Adapter	1

WARNING: This is not a toy and is for decorative purposes only. For outdoor use. This item is not intended for use by children under the age of 14 years. Do not place product near an open fire or heat source such as a radiator, stove, etc.


INSTALLATION:

 Step 1

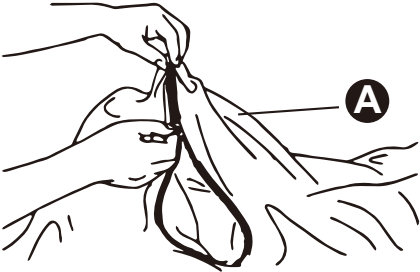


Ensure that the air intake on the inflatable unit (A) is clear of fabric and other obstructions and that the zipper is fully closed. Some inflatables have more than one zipper.

 Step 2

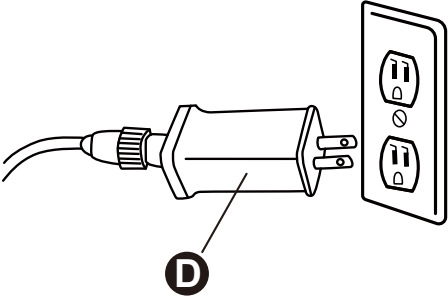

Connect the ETL-Listed power supply (D) to the fan connector, then plug the power supply into a standard wall outlet.

 Step 3

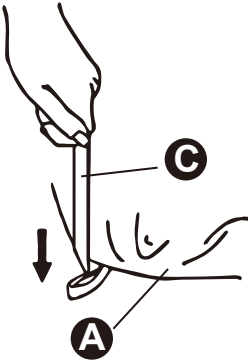


Using the loops attached at the bottom of the inflatable unit (A), insert stakes (C) into the ground. Adjust weight-bag at the base to position your inflatable as desired.

Step 4




Once fully inflated, clip (or tie) the nylon tethers (B) to each of the attached nylon loops on the side of the inflatable (A).

 Step 5

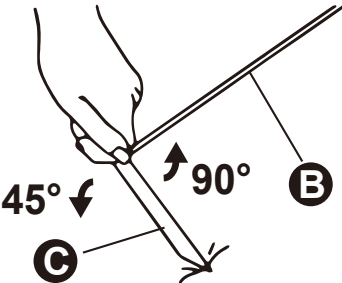

Drive the stakes (C) into the ground at a 45-degree angle.

 Step 6

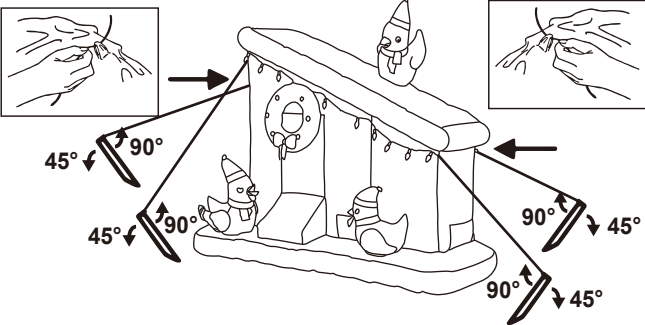

For maximum stability, bring the tether down to a 45-degree angle from the inflatable as shown in the illustration. In order to achieve this you may need to wrap the excess tether around the top of the stake.

Step 7



Do's and Don'ts

1. Do check your inflatable daily and adjust to stand up straight.
2. Do not attempt to operate your inflatable in unusually strong winds (see caution).
3. Do not unplug by pulling on cord. For faster deflation, unzip the zipper after unplugging power supply.

IMPORTANT: This product can be powered by a ETL Listed, DC 12V, 2.5A adapter (included). Adapter should be plugged into 100-120V household outlet.

To Set Up and Use:

- 1. Remove contents from packaging.
- 2. Plug the adapter into the connection at the base of the inflatable figure. When using indoors, plug the adapter plug into a standard wall outlet. When using outdoors, a GFCI outlet must be used.
- 3. Be sure the zipper is closed so the figure will fully inflate.
- 4. For quicker inflation, lift the figure up while the fan is blowing.
- 5. Use the tether ropes to secure the inflatable figure outdoors. Fasten each end of tether rope to the ribbon tab of the figure and stake, then insert the stake into the ground.
- 6. To deflate, unplug the fan. For faster deflation, unzip the zipper after unplugging the adapter.

IMPORTANT SAFETY INSTRUCTIONS:

- 1. This is a seasonal decoration and is not intended for permanent installation or year-round use. It is recommended not to use for more than 90 consecutive days.
- 2. This is an electric product - not a toy. Keep the product out of the reach of children and pets to avoid the risk of fire, burns, electrical shock, or serious personal injury. Extra caution is necessary when using this product near children. Do not allow children or pets to play near the product.
- 3. Always unplug the product from the electrical outlet when leaving the house, retiring for the night, or when it is not in use.
- 4. Do not mount or place near gas or electric heaters, fireplaces, candles, or similar sources of heat.
- 5. Do not use attachments not recommended or sold by the product manufacturers, as these may have a risk of fire, electrical shock, or serious personal injury.
- 6. Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.
- 7. Do not expose the product to sharp items, as these may cause rupture and damage.
- 8. Inspect the power cord for damage before each use. If the power cord shows wear and tear, do not use it. The rating for any extension cord and should be at least as great as the electrical rating of the product. Use only extension cords rated for both indoor and outdoor use.
- 9. Always connect the product to a Ground Fault Circuit Interrupter (GFCI) electrical outlet when using the product in outdoor applications. Contact a qualified electrician to have a GFCI electrical outlet installed if one is not available.
- 10. Do not hang ornaments or other objects from the cord, wire, or light string.
- 11. Do not close a door or window on the power cord or extension cords, as this may damage the product's wire insulation.
- 12. When in use, do not cover the product with cloth, paper, or any material that is not part of the product.
- 13. Do not secure the wiring of the product with staples, nails or other sharp objects, or place wiring on sharp hooks or nails.

WARNING: SEVERE WEATHER USE

Do not expose this product to high winds, heavy rain, or blizzards. It is not designed for use in severe weather. To prevent damage, you must move this product indoors before severe weather is forecast. Damage caused by failure to follow these instructions is not covered by the warranty.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connect.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

“(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

Responsible Party-U.S. Contact Information
TRACTOR SUPPLY COMPANY 5401 VIRGINIA WAY, BRENTWOOD TN 37027
For Customer Support
Call:1-888-376-9601

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical products, basic precautions should always be practiced including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- 2. Read and follow all instructions that are on the product or provided with the product.
- 3. For a cord-connected or direct plug-in power unit, do not use an extension cord.
- 4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
- 5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- 6. Do not install or use within 10 feet of a pool.
- 7. Do not use in a bathroom.
- 8. WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
- 9. WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
- 10. WARNING: Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
- 11. WARNING: Not to use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

Care and Maintenance:

- 1. Periodically check to ensure there are no holes or tears in the inflatable figure. If you find any tears in the fabric, you can repair them with needle and regular thread. No special thread is necessary.
- 2. Always keep the air vent of the motor base unobstructed and free from dirt and/or debris.
- 3. Periodically unplug the product from the electrical outlet and allow the adapter and fan to cool to avoid overheating and/or product damage.
- 4. Fold and store the product in a cool, dry location that is away from sunlight or heat sources.

Troubleshooting Guide:

Item will not fully inflate.	Ensure zippers on the back of each inflatable figure is closed. Ensure fabric collar is securely attached to the fan outlet. Inspect fabric for tears and holes; repair if necessary. Ensure fan air vent is free of debris. Unplug fan from the electrical outlet and let cool completely before clearing debris.
Fan does not operate.	Ensure fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet). Fan may be overheated. Unplug fan from the electrical outlet and let cool completely. Fan may be short-circuited. Only operate fan in a protected location away from rain and snow.

For Decoration Only.
Not a Toy.
Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA

