

# 44 IN. ANIMATED COWBOY GINGERBREAD MAN

Instruction Manual

SKU# 6059070



Please read instructions carefully before use. Retain for future reference.

## PARTS LIST:

1. Metal Base
2. Left Arm
3. Body
4. Support Bar
5. Cotter Pins (2)
6. Try Me Button
7. 6V 2A DC Adapter



## INSTRUCTIONS:

1. Insert and snap lock the body into the metal base.  
(MATCH A to A) See Fig. 1



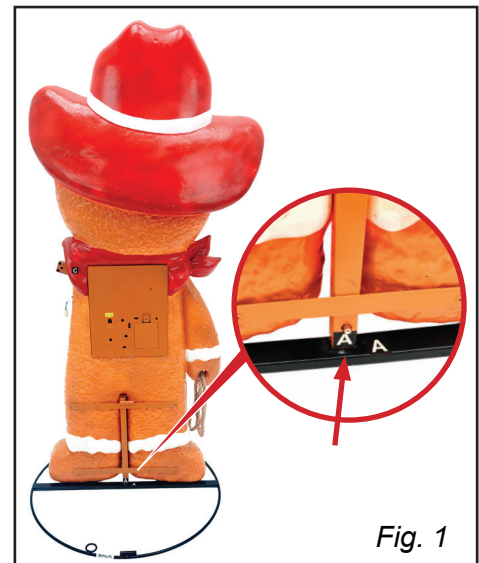


Fig. 1


2. Connect the left arm wire to the wire located on the body.  
(MATCH B to B - LED) See Fig. 2

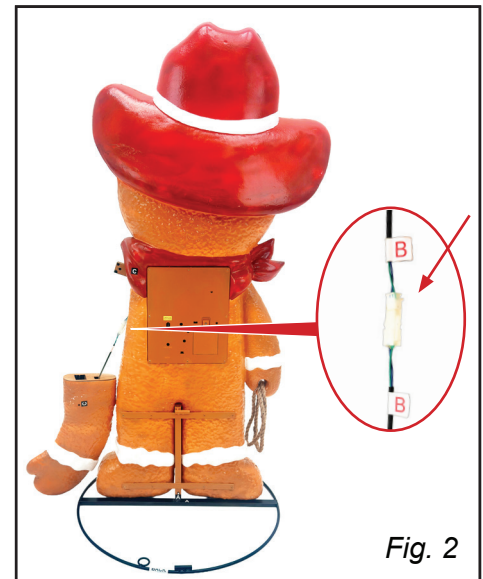


3. Insert and snap lock the left arm into the body.  
(MATCH C to C) See Fig. 3

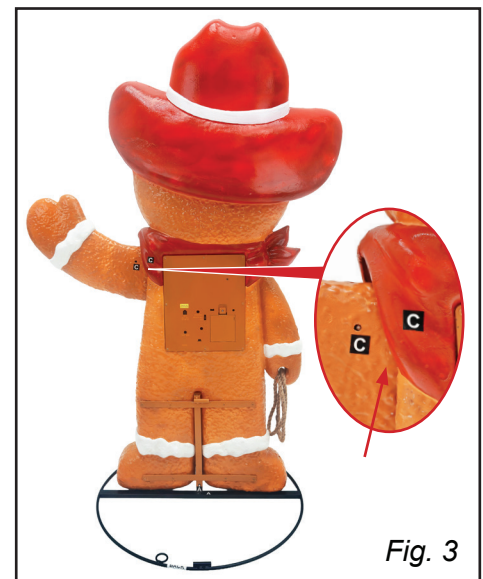

4. Attach the support bar to the body and metal base as shown in the diagram. Secure each end of the support bar with a cotter pin (two total). See Fig. 4

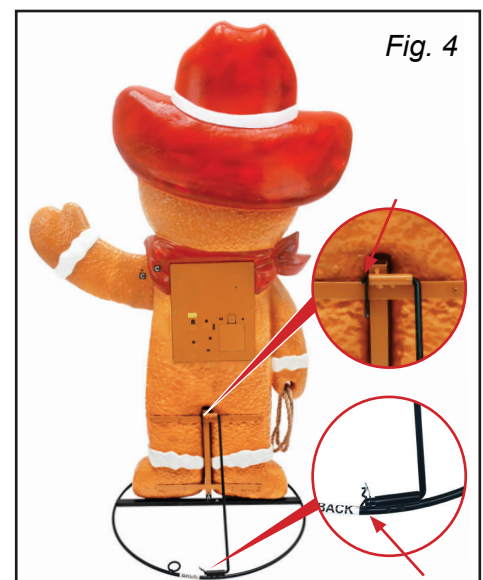

5. Insert a ground stake (not included) into each metal loop (two total) located on the metal base for added ground stability. See Fig. 5

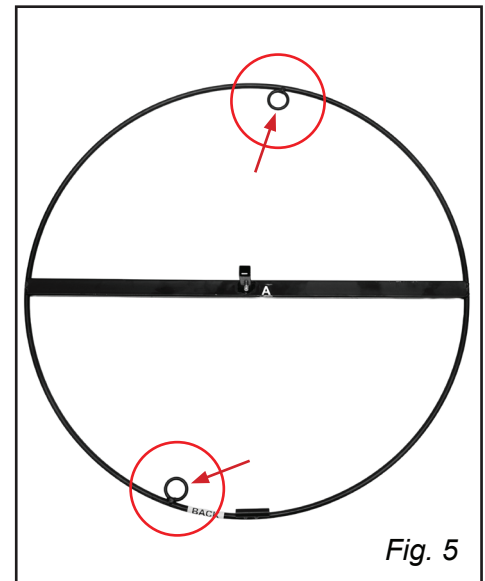


Insert the 6V 2A DC Adapter (included) into the control box, or insert 4 AA batteries (included for demo purposes only) into the control box battery compartment.

Move the switch to the ON position. Make a sound (clap), or move in front of the item to activate it.

For motion activation only, move the switch to the MOTION ONLY position.


Move the switch to the OFF (TRY ME) position when not in use. See Fig. 6

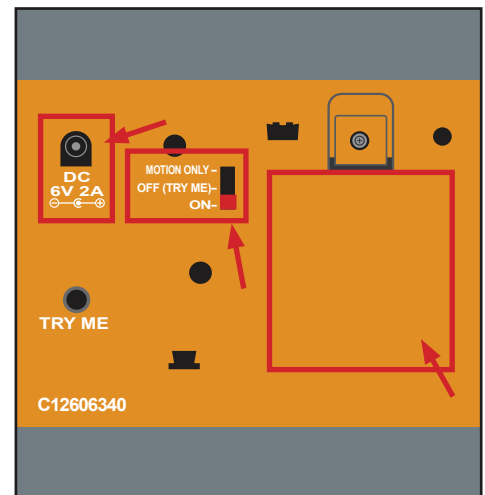

### BATTERY WARNING:

- Contains (4) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed. Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.

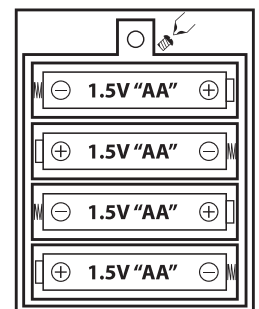

**4AA**

### BATTERIES INCLUDED

Batteries included for "try me" demo purposes only.

**6V 2A DC ADAPTER INCLUDED**

## FCC INSTRUCTIONS:

**WARNING:** Adjustment to this unit or replacement of any transmitter component (crystal, semi-conductor, etc.) to this unit that could result in a violation of the rules.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## USE AND CARE INSTRUCTIONS:

FOR SHELTERED OUTDOOR AND INDOOR USE ONLY.

Take item indoors during inclement weather.

ALL NEW MATERIALS: plastic, fabric, metal.  
Surface washable only.

ACTUAL DIMENSIONS:

29.53 in. L x 20.08 in. W x 44.09 in. H  
(75 cm L x 51 cm W x 112 cm H)

Includes: (1) 44 IN. ANIMATED COWBOY  
GINGERBREAD MAN decoration.

Display on level surface.

Actual item may vary from the photographs and/or illustrations on packaging.

## TO ACTIVATE:

ON /  
OFF (TRY ME) /  
MOTION ONLY

 **WARNING!** CHOKING HAZARD—Small parts. This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger. Please keep away from flame and direct heat sources.

 **WARNING!** This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP), which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

For Decoration Only.  
Not a Toy.  
Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY  
5401 Virginia Way, Brentwood TN 37027  
For customer support call 1-888-376-9601  
[www.TractorSupply.com](http://www.TractorSupply.com)  
MADE IN CHINA