

XMAS ROOSTER WITH STRING LIGHTS

SKU#6065324

Please read instructions carefully before use. Retain for future reference.

SETUP & OPERATING INSTRUCTIONS

1. Light String Installation

The string lights are packaged separately. Carefully unwrap and arrange them around the rooster as desired.

2. Battery Installation

- Open the battery compartment cover.
- Insert 3 × AA 1.5V batteries (not included), ensuring correct polarity as indicated inside the compartment.
- Close the battery compartment cover securely to its original position.



3. Operating Modes

Press the power button to cycle through the following modes:

- (1) 1st press - Timer Mode (6 hours on, 18 hours off. Cycle repeats daily.)
- (2) 2nd press - On (Lights remain on continuously. The string will flash once to confirm activation.)
- (3) 3rd press - Off (Lights turn off.)

4. Battery Maintenance

If the lights begin to dim, replace the same or equivalent batteries with correct polarity as indicated.

5. Safety Note

Ensure the battery compartment cover is fully closed and secured during use.

BATTERY WARNING

- DO NOT dispose of batteries in fire; they may leak or explode.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- DO NOT mix old and new batteries.
- Remove exhausted batteries from product.
- Remove batteries if product will be unused for an extended period of time.
- Dispose of batteries properly.