

Do not plug the light string into an outlet until this item is fully assembled and the light strings are properly connected. Please read the enclosed important safety instructions and cautions carefully prior to use.

Enclosed Parts

- * 2 Body Section with Legs, Head with Hat, 2 Ears, Tail
- * 4 Cotter Pins
- * 2 Lawn Stakes


Spare Parts

- * 2 Spare Bulbs
- * 1 Spare Fuse
- * 1 Cotter Pin


Assembly Instructions

1. Carefully remove item from the protective wrap to avoid damaging any of the light bulbs or parts.

2. Combine the 2 body sections by inserting the rods into the holes, then secure with cotter pins.

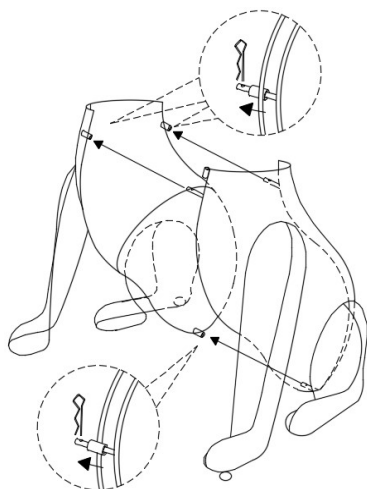


3. Attach head onto the combined body sections by inserting the mounting clips on one side, then insert the rod into the hole on the other side. Secure with a cotter pin.

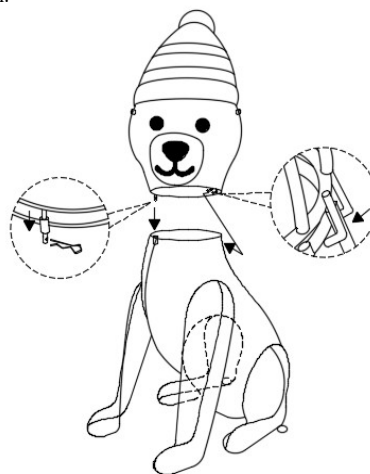

4. Attach the 2 ears to both sides of the head by inserting the rods into the holes.

5. Attach the tail onto the back of the body section by inserting the rod into the hole.

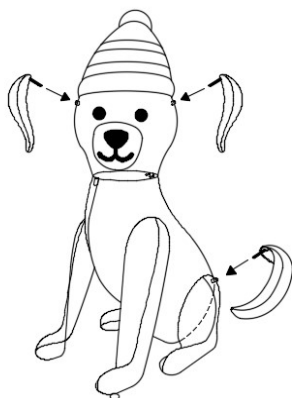

6. Secure the item firmly into the ground by pushing lawn stakes through the rings on the feet.



Trouble Shooting

If certain lights do not light:

1. Replace any broken or loose bulbs.
2. Check each bulb one at a time by removing it from its socket and replace it with a bulb that works.

If no lights light up:

1. Check the outlet to make sure the power is on.
2. Check the extension cord to make sure the power is on.
3. Check the fuse on the male plug of the light set.
4. Replace the fuse if it is blown, using 3 amp fuse for the light string.
5. Check for any broken or loose bulbs, replace any damaged bulbs with new ones.