



**RS 6.5IN
WOOD BOWL WITH
TREES WAX WARMER**
Instruction Manual
SKU# 6067920

Please read instructions carefully before use. Retain for future reference.

ELECTRIC WAX WARMER

INSTRUCTIONS FOR USE

SAVE THESE INSTRUCTIONS-INTENDED FOR HOUSEHOLD USE ONLY

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

**⚠ WARNING:DO NOT LIGHT WAX WHEN USING THIS WARMER.
TO REDUCE THE RISK OF FIRE,ELECTRIC SHOCK AND EXCESSIVE
UV RADIATION,FOLLOW THESE DIRECTIONS FOR USE:**

- Read all instructions,including these important safeguards in this manual.
- Turn off and unplug wax warmer when not in use or before cleaning.
- Keep out of reach of children and pets.
- Surface temperature is hot;do not allow hot plate to come in contact with skin.
- Some waxes tend to overflow while melting.Watch carefully.
- Do not move warmer when supporting container of hot wax.
- Do not allow cord to hang over edge of table or counter or touch hot surfaces.

IMPORTANT SAFEGUARDS

**WARNING:WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAU-
TIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:**

- Do not use appliance for other than intended use.
- Read all instructions before using the product.
- Do not place appliance or cord on or near a hot gas or electric burner or in an oven.
- Use of accessory attachments not recommended by manufacturer may cause injuries.
- Do not operate when appliance is not working properly or when it has been damaged in any manner.
- Do not use warmer if power cord is frayed or damaged or if bare wires are exposed.
- Do not attempt to repair appliance yourself.Service should only be performed by an authorized service representative.
- To protect against risk of electrical shock do not put cord,plug or lamp in water or other liquid.
- To reduce the risk of injury,close supervision is necessary when a product is used near children and pets.
- Do not use outdoors.Do not put finger or hands into the products.
- To disconnect,grip plug and pull from wall outlet.Never pull on cord to disconnect.
- A short cord set is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock,the wax warmer has a polarized plug(one blade is wider than the other).This plug will fit in a polarised outlet only one way.If the plug does not fit into outlet,reverse the plug. If you do not have polarized outlets contact a qualified electrician to install the proper outlet .Do not change the plug in any way .
a) A short power-supply cord (or short detachable power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords (or longer detachable power-supply cords) are available and can be used if care is exercised,especially in the presence of children.
c) if an extension cord (or a long detachable power-supply cord) is used:The marked electrical rating of the detachable power-supply cord or extension cord shall be at least as great as the electrical rating of the appliance.

OPERATION

- Place on a level,heat resistant,stain resistant surface.
- Place wax cube in the top fragrance tray of the wax warmer.
- Insert the plug into the wall outlet.
- Turn on the switch.
- Once wax melts,fragrance will fill your room.
- Turn off the appliance when not in use or when left unattended.
- Remove the plug from the wall outlet.

TIPS

- If wax is not melting make sure that the indicator light is on.
- If wax spills on a wax warmer use a plastic spatula to scrape the wax off once unit has cooled.Use a paper towel to rub off any remaining wax once burner unit has cooled. Do not use metal or any other sharp objects to scrape off melted wax.
- Make sure that your wax chips,tarts,etc.are in the melter tray.If not ,the wax will melt onto the base.
- Do not add water or any other liquids to the top fragrance tray in conjunction with the wax melts.
- Once wax has been melted by the wax warmer,do not handle the unit until it is completely cooled.

TO CLEAN

Unplug unit.Wait for unit to completely cool before cleaning.Discard unused wax.Use a warm,moist ,soapy sponge or soft cloth to clean inside and out. NEVER SUBMERGE UNIT IN WATER,Wipe dry with a soft cloth.Do not use abrasive cleaners to clean burner.

For Decoration Only.
Not a Toy.
Not intended for children.

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN CHINA