

Typical starter assemblies include a pull start cord wound around a starter spring. Replacing the starter cord requires accessing the starter assembly and unwinding the rope while the recoil spring maintains tension. For commercial equipment and applications replacing a pull cord should only be done by a qualified and trained technician. For private or home equipment refer to the instruction manual for your specific make and model or consult a professional.

How to replace a pull cord on a lawn mower:

- 1 Remove the starter assembly
- 2 Pull rope out of the starter, careful not to lose tension in the spring
- 3 Remove rope from pulley
- 4 Remove rope from handle
- 5 Ensure pulley is at full tension
- 6 Thread the starter rope through the eyelet and pulley
- 7 Slowly allow the pulley to recoil, causing the rope to retract
- 8 Attach the handle to the new rope

recoil
arter
tension.
ould
ome-use
d model

a pulley