

USER MANUAL



6072148

2-in-1 Worktable



SPECIFICATIONS	
Load Capacity	130 lbs (59 kg)
Adjustable Height	31.1 in. to 47.9 in. (78.99 cm to 121.67 cm)
Removable Worktable Size	29 in. x 18 in. x 5 in. (73.66 cm x 45.72 cm x 12.7 cm)

WARNING INFORMATION



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ WARNING

WARNING: Indicates a hazardous situation which if not avoided, could result in death or serious injury.



IMPORTANT: READ THESE INSTRUCTIONS BEFORE USE.

Before using this worktable, read this manual completely and thoroughly, understand its operating procedures, safety warnings and maintenance requirements.

USE PRECAUTIONS!

- ✓ This product is not a toy. Do not allow children to play with or near this item and store out of reach of children.
- ✓ Use the table and accessories as intended and in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the table for operations different from those intended could result in a hazardous situation.
- ✓ Inspect before every use; do not use if parts are loose or damaged.
- ✓ Do not exceed weight capacity of 130 lb (59 kg).
- ✓ Store idle equipment. When not in use, this product must be stored in a dry location to inhibit rust.
- ✓ The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.
- ✓

⚠ WARNING

BEFORE USING, READ AND UNDERSTAND ALL WARNINGS AND OPERATING INSTRUCTIONS.

- ✓ Do not exceed the 130 lb. (59kg) rated capacity of this unit in the center.
- ✓ Do not exceed the 22 lb. (10kg) rated capacity of this unit on corners.
- ✓ When lowering table position, hold table with one hand and slowly release pressure of locking device with other hand.
- ✓ Be aware of dynamic loading! Sudden shifts in the load may briefly create excess load, which may result in product failure.
- ✓ Inspect before every use, do not use if parts are loose or damaged.
- ✓ This product is not a toy. Keep out of reach of children.
- ✓ Failure to heed these markings may result in personal injury and/or property damage.

⚠ WARNING

This product can expose you to chemicals including Di(2-ethylhexyl)phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠ WARNING

Contains lead. May be harmful if eaten or chewed. May generate dust containing lead. Keep out of the reach of children.

INSPECTION


- Inspect the 2-in-1 worktable and accessories carefully before use. Ensure the table and accessories are not damaged, excessively worn, or missing parts.
- Inspect the work area before each use. Make sure it is free and clear of any potential hazards.

DO NOT OPERATE OR REPAIR THIS EQUIPMENT WITHOUT READING THIS MANUAL.

To maintain the table and user safety, the responsibility of the owner is to read and follow these instructions.

- Inspect the table for proper operation and function.
- Keep instructions readily available for equipment operators.
- Make certain all equipment operators are properly trained; understand how to safely and correctly operate the unit.
- Allow unit operation only with all parts in place and operating properly.
- Carefully inspect the unit on a regular basis and perform all maintenance as required.
- Store this instruction manual in case of any use in the future.


PARTS LIST

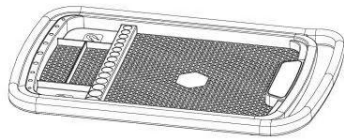


1 Worktable




2 Vertical Support

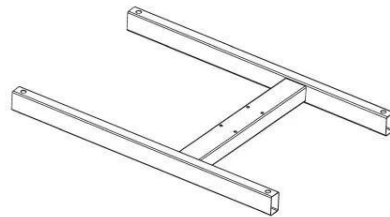

3 Wheel Base

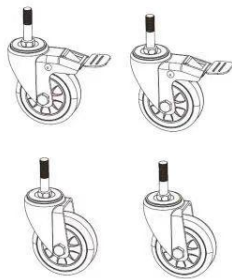

4 3" Caster

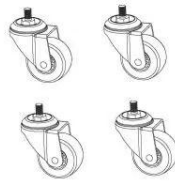

5 2" Caster




6 M6 Inner Hexagon Screw



7 M10 Tube Nut




8 M6 Lock Nut

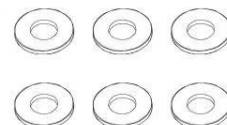

9 M6 Flat Washer




10 M6 Hex Head Bolt

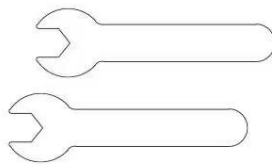

11 10mm Open End Wrench



 
12 5mm Hex Wrench




13 14mm Open End Wrench



14 6mm Hex Wrench

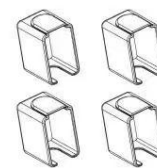

15 Plug

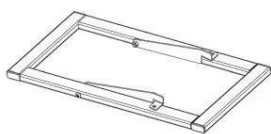

16 Support Frame



17 16mm Open End Wrench

PARTS LIST


No.	Description	Qty.	No.	Description	Qty.
1	Worktable	1	10	M6 Hex Head Bolt	4
2	Vertical Support	1	11	10mm Open End Wrench	2
3	Wheel Base	1	12	5mm Hex Wrench	1
4	3" Caster	4	13	14mm Open End Wrench	1
5	2" Caster	4	14	6mm Hex Wrench	1
6	M6 Inner Hexagon Screw	2	15	Plug	4
7	M10 Tube Nut	4	16	Support Frame	1
8	M6 Lock Nut	6	17	16mm Open End Wrench	1
9	M6 Flat Washer	6			

Note:


Before assembling this product, make sure all parts are present. While unpacking, compare parts with the parts list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

ASSEMBLY INSTRUCTIONS


- A. Pass the tube nuts (7) through the square tube hole of the wheel base (3), insert the 3" casters (4) up through the bottom hole, and tighten with 6mm hex wrench(14) and 16mm open end wrench(17). Add the plugs (15) to the ends of the frame.

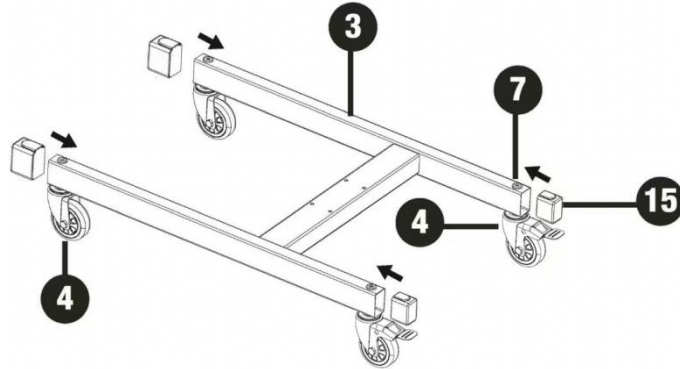


- B. Place the vertical support (2) assembly on the wheel base (3) as shown, pay attention to the front and rear orientation. Pass M6 hex head bolts (10) through screw holes and secure with M6 flat washers (9) and M6 lock nuts (8). Tighten with 10mm open end wrench(11).

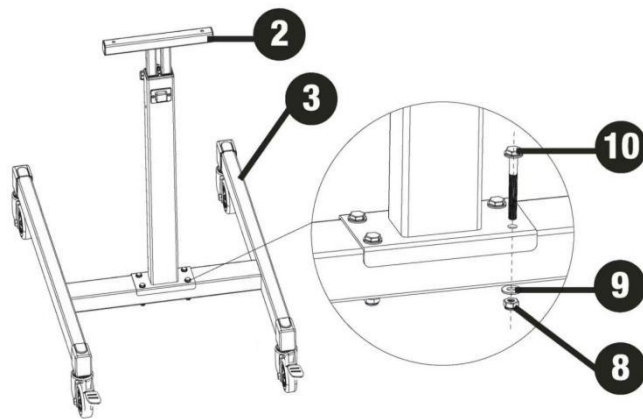

- C. Remove the support frame (16) from the bottom of the worktable (1) by rotating the lock and sliding the support frame to the left.

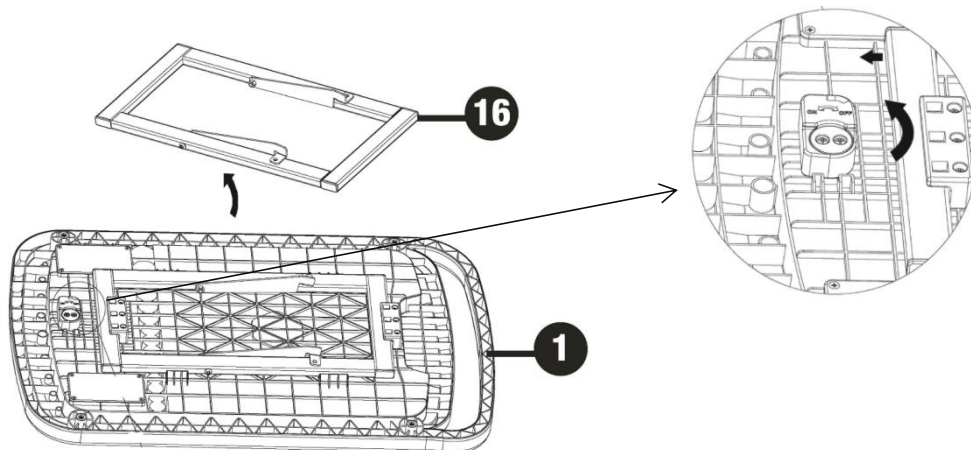


- D. Attach the support frame (16) to the vertical support (2) as shown using M6 inner hexagon screws (6), M6 flat washers (9) and M6 lock nuts (8). Tighten with 5mm hex wrench(12) and 10mm open end wrench(11).

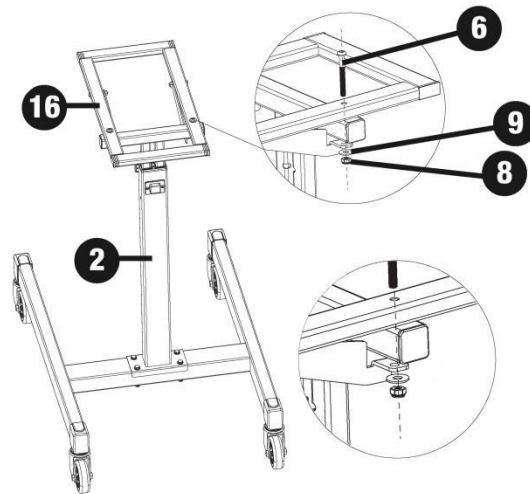


Rotate the support rod of the support frame (16) so that it clips the square tube of the vertical support (2), and aligns the holes.

- E. Install the 2" casters (5) into the screw holes on the worktable (1) as shown and tighten with 14mm open end wrench(13).

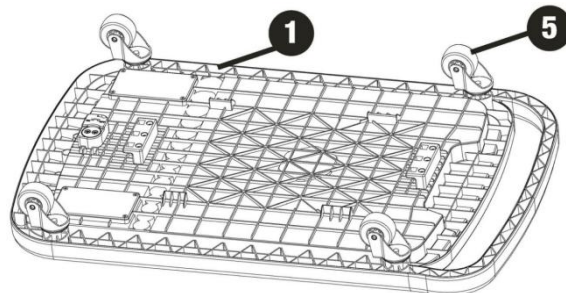


- F. Install the worktable (1) assembly on the support frame (16) as shown, by rotating the lock to secure the worktable to the support frame.

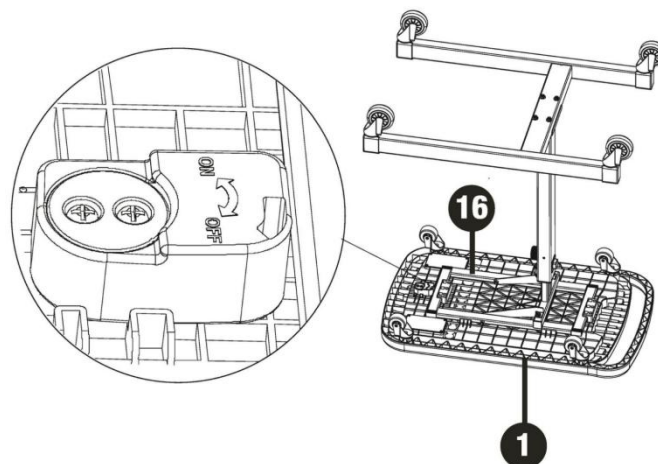


OPERATION INSTRUCTIONS

A. To adjust the height, first open the trigger to the left as shown in the figure to unlock, and at the same time loosen the hand screw counter-clockwise.

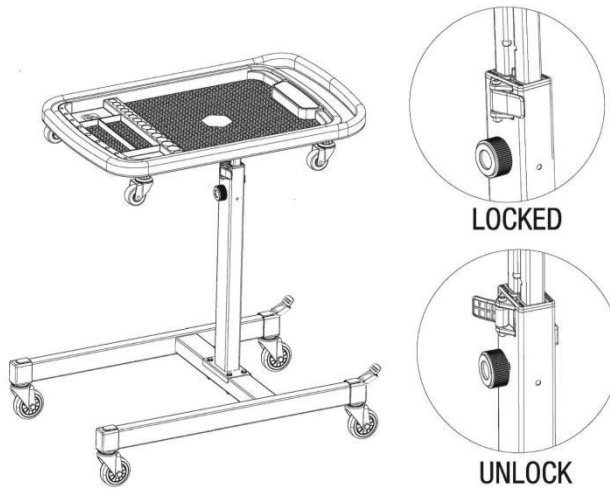

B. Press the unlock button first and then pull the worktable(1) up or down to adjust the height.

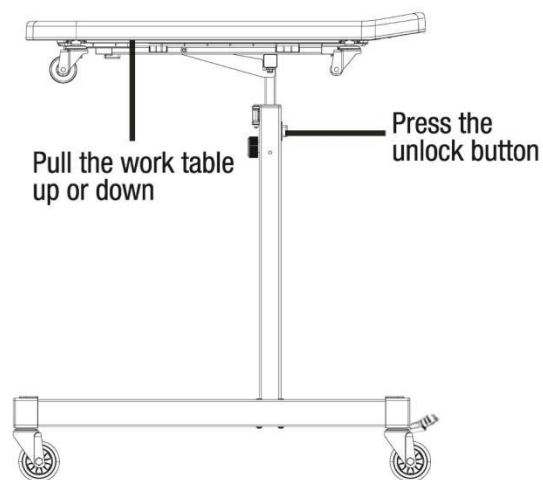

C. Adjustment is completed with a “click” sound, close the trigger and tighten the hand screw clockwise to secure the worktable.



MAINTENANCE & STORAGE

- Periodically check that all of the fasteners are tight.
- Keep the product clean. Wash it with a mild soap and dry immediately.
- After each use, store it in a safe place where it will not disturb or hinder others.

Distributed by:

TRACTOR SUPPLY COMPANY

5401 VIRGINIA WAY BRENTWOOD, TN 37027

For customer support

Call: 1-888-376-9601

www.TractorSupply.com

MADE IN THAILAND