

TM / T
(Tail / Marker):
Running lights,
taillights, and
side marker lights.

LT / L
(Left Turn / Brake):
Left turn signal
and left
brake light.

RT / R
(Right Turn / Brake):
Right turn signal
and right
brake light.

12V / AUX / B+
(12-Volt Auxiliary):
Continuous
12-volt power
to charge the
trailer battery
or run accessories.

BU / REV
(Back Up / Reverse):
Reverse or
backup lights.

BK / EB
(Brakes / Electric Brakes):
Electric trailer brake
controller output.

Part Number: UE700999

HOW TO USE

1. **Park securely:** Put your vehicle in park with the engine running.
2. **Connect the tester:** Push the tester into the vehicle's trailer socket.
3. **Check functions:** Have an assistant engage various lights and signals on the vehicle (running lights, brakes, left/right turn signals, and hazards).
4. **Read the results:** The corresponding indicator lights on the tester should illuminate or flash.
5. If a light does not turn on, you may have a wiring issue or a blown fuse on your vehicle.