

Rechargeable Handheld Fan - Instruction Manual

Sent 01.21.26

5x2.5in

alpha cool™


Rechargeable HANDHELD FAN

SKU: AC-HF-W | Model: N607

Precautions

1. Read all instructions and warnings before use.
2. Make sure to turn the power off when not in use.
3. Do not drop, strike, or subject the product to strong impact, as this may cause internal damage.
4. Do not disassemble, modify, or attempt to repair the product yourself.
5. Do not expose the product to fire or extreme heat to avoid the risk of danger.
6. If the product becomes excessively hot, deformed, or abnormal during charging, stop charging immediately.
7. Do not use while sleeping or unconscious.
8. Children should not use this product without adult supervision.
9. Unattended use of electric products on animals, children or incapacitated persons may be dangerous.
10. Do not use this product while charging.
11. In the rare event of experiencing any sensation of overheating or discomfort while using any AlphaCool™ product, immediately remove product and turn power off.
12. Avoid allowing hair near the air inlet to prevent hair from getting caught in the air cavity.
13. Do not attempt to touch internal turbines or components to avoid potential injury or damage to the product.
14. Do not use excessive force when unfolding the fan as this may damage the product.
15. Do not store below -4°F (-20°C) or above 120°F (49°C).
16. Do not allow fan or internal components to come into contact with water or other liquids.
17. If water or other liquids enter the fan's interior while in use immediately remove the fan and turn it off. Continue use of a potentially damaged product may result in fire or an electrical shock.
18. It is important to maintain at least 25% of your battery power when not in use. Failure to do this will result in performance problems and reduced battery life.
19. Recycle in accordance with local regulations.

Description

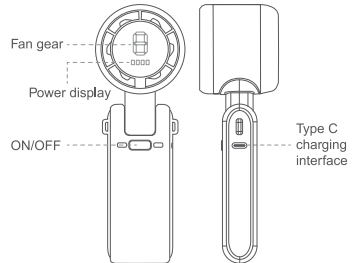

Instructions

1. Press the power button once to turn on the fan at Speed 1. The digital display will show "1."
 - Press the button again to switch to Speed 2 ("2").
 - Press again to switch to Speed 3 ("3").
 - Press again to switch to Speed 4 ("4").
 - Press again to switch to Speed 5 ("5").
 - Press once more to turn the fan off. The LED light will turn off. The fan cycles through speeds in this sequence.
2. When the fan is powered on, the green indicator lights show the remaining battery level:
 - 4 green lights on: 75–100%
 - 3 green lights on: 50–74%
 - 2 green lights on: 25–49%
 - 1 green light on: 4–24%
 - 1 green light flashing: 0–3% (device will shut off soon)
 - When the green lights turn off and the white light turns on, the battery is depleted and the device needs to be charged.
3. Charging Indicator:
 - 1 flashing green light: 0–24%
 - 2 flashing green lights: 25–50%
 - 3 flashing green lights: 51–74%
 - 4 flashing green lights: 75–99%
 - 4 solid green lights: 100% (fully charged)

Product Parameters

Input	5V---1A	Product size	6.7 x 2.3 x 2 in
Maximum power	7W	Product weight	192g
Battery Capacity	2400MAH	Working time	2-6 hours
Charging Time	2.5 hours	Product Color	White