

Remington®

Contents

- | | | | |
|-----------|--------------------------|-----------|---------------------------|
| 2 | Welcome to Remington | 12 | Security Code Setup |
| 3 | Important Information | 14 | Lockout Mode & Quiet Mode |
| 4 | Registration | 15 | Low Battery Warning |
| 5 | Unboxing & Inspection | 16 | Securing Your Safe |
| 5 | Keeping Your Safe Dry | 18 | Locked Out of Safe |
| 6 | Proper Placement of Safe | 18 | Maintenance |
| 7 | Moving Your Safe | 18 | Loading Your Safe |
| 8 | Understanding Your Safe | 19 | Lifetime Warranty |
| 9 | Initial Entry | | |
| 10 | Lock Face Installation | | |



Contact Customer Service at
cs@saproducts.com or 888.792.4264

Thank you for choosing a Remington Safe to protect your valuables. We are committed to securing, organizing, and protecting your most important documents, valuables, and keepsakes.

Your safe is built to last a lifetime. However, please understand that the locking mechanism has precision parts. If you experience ANY difficulty opening or closing your safe, DO NOT FORCE THE SAFE OPEN. Doing so may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience to you and may lead to a claim denial.

If you experience problems or challenges with your safe, please contact us. Many issues can be quickly resolved without the product being returned.

Important Information

Safety

Safe bodies and doors are extremely heavy, thus **SA Consumer Products requires a minimum of two people to ensure stability of the safe during installation.** Always ensure proper installation, as laid out in this manual, and do not open the door with the safe on an uneven or unstable floor. Ignoring this could result in serious injury or death.

DISCLAIMER: Please read this information carefully before operating your Remington safe. Do not lock this manual or the override keys in your safe.

Firearm Storage

If you choose to utilize this safe to store a firearm, always follow proper firearm and local laws. SA Consumer Products strongly recommends that you do not store loaded firearms. Always follow the firearm safety rules set out by the firearm's manufacturer.

A Remington Safe or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.

SA Consumer Products and its distributors of the Remington Safes do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.

Registration

Registering your safe is important to ensure we can help you with any challenges you may have.

By registering your Remington Safe, we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

The information you record on this page will be required in the event you cannot access the contents of your Remington Safe.

Please register your safe by visiting our website. Select “register your safe” from the menu in the upper right hand corner.

1www.saproducts.com**2**Register Your Safe 

Please have this information ready prior to calling for assistance at: cs@saproducts.com or 888.792.4264

Purchase Date**Purchase Price (before tax)****Model Number****Serial Number****Retailer Name****Key Number (if applicable)**

Unboxing & Inspection

Before discarding the package material, please be certain you have located and saved the Getting Started Box located in the front of the honeycomb corrugate protection panel.

Remove the packaging. If your safe is still on shipping feet you can simply lift the box up and off the safe once the strapping has been removed. You will want to have someone stabilize the safe when removing the cardboard and other packing material from underneath the safe.

Make sure to inspect your safe for shipping damage before accepting delivery. If you find any damage, please contact the delivery company (or carrier) immediately.

Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse. Any noted damage at the time of delivery must be resolved with the delivery company and/or retailer. Shipping damage is not warrantable by SA Consumer Products.

Keeping Your Safe Dry



We strongly encourage the use of an internal dehumidifier and/or desiccants to protect your contents from rust or mildew. Internal dehumidifiers should not be in direct contact with the side or back walls.



In areas of high humidity or frequent temperature fluctuations (like garages), it is recommended to take the appropriate precautions to ward against any kind of moisture damage.



Installing your safe in a place with climate control (heat in the winter and cooling in the summer) is highly recommended.

Proper Placement of Safe

The location of the safe is very important and the utmost care should be taken during this consideration.



To maximize fire protection of **your safe**, we recommend you place the safe in lower levels in your home where fire temperatures are lower and away from highly combustible materials.



We recommend that you store your **safe** in a closet, office, basement, bedroom, or any other location that is convenient for you but out of direct line of sight from prying eyes.



To maximize burglary protection and **stability**, securing the safe to the floor is recommended.



We require the **safe to be secured to the floor** to ensure the safe does not tip over in case of a flood. Failure to secure your safe properly to the floor will void the warranty.



HELPFUL HINT: To determine whether your safe will fit through doorways, stairs, or corners, take the empty safe box through to its final location.

Moving Your Safe


Safes are heavy and can be unstable on uneven ground. Please ensure extra caution when moving unsecured safes.

- **Using a dolly** capable of supporting the size and weight of your safe, move the safe to your desired location. Please take all necessary precautions to protect and prevent any damage to your flooring.
- **The safe should be installed adjacent** to a side wall with minimal space on either side of the safe.
- **Wherever possible, the safe should be flat against the wall and floor.** Remove the baseboard and/or wall trim if necessary.
- **Always ensure the safe is in an isolated and dry area.** Never place the safe in direct contact with a wet floor.
- **When installing your safe on a concrete floor,** use of a moisture/protective barrier is highly recommended. Failure to do so, or exposing the safe to chemicals or other adverse environments, may void the warranty.
- **If your safe seems unlevel, you may need to shim the bottom of the safe** to prevent the door from swinging open too quickly, or closing on itself.


CAUTION: The safe is designed with a non-removable door. Any attempt to tamper with or remove the door will void the warranty.

Understanding Your Safe


WARNING: Safes are heavy and can be unstable on uneven ground. Please ensure extra caution when dealing with or moving unsecured safes. While unboxing be sure to have a second person hold and stabilize the safe to keep it from tipping, causing injury, and/or damage to the safe and surrounding structures.

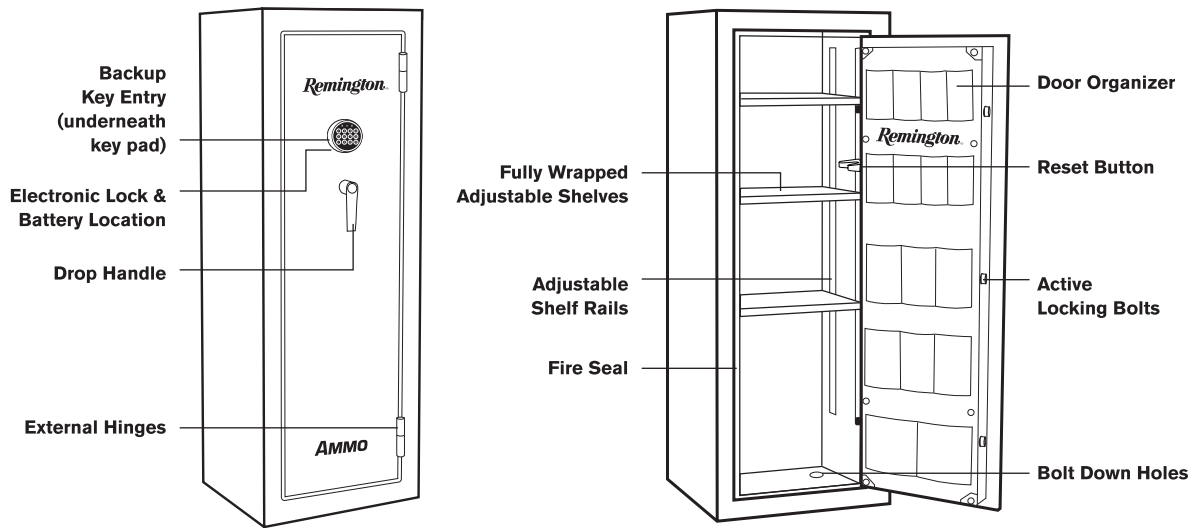

Initial Entry

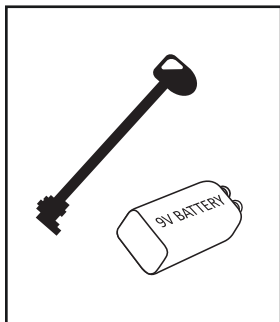


- 1** Locate backup key and battery inside the Getting Started box.

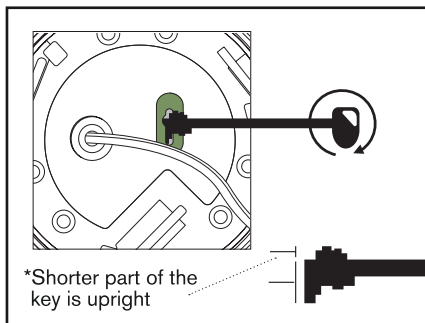


- 2** Locate the keyhole in the backer plate. Insert and turn the backup key clockwise to unlock.

Note: The shorter side of the key will be upright.

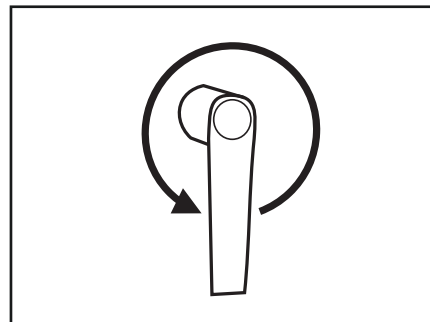


- 3** Turn the handle counter-clockwise until the safe door opens. Once open, turn the handle back to its starting position so the bolts are open and extended. Remove key.

Lock Face Installation

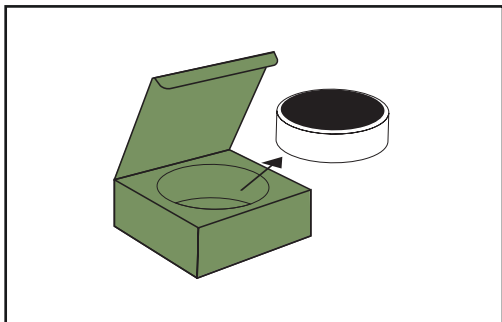


- 1 Remove the lock face from the Welcome Box.


WARNING: The batteries must be inserted with the correct polarity. Exhausted batteries must be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix alkaline or standard (carbon – zinc) batteries. Do not use rechargeable (nickel – cadmium) batteries.

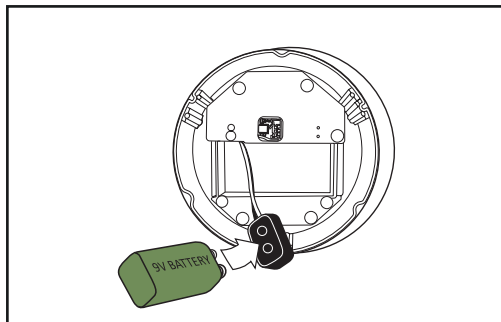

- 2 Locate the 9V alkaline battery. Insert the battery into the battery compartment on the back of the lock face. The lock face will beep when batteries are successfully installed.

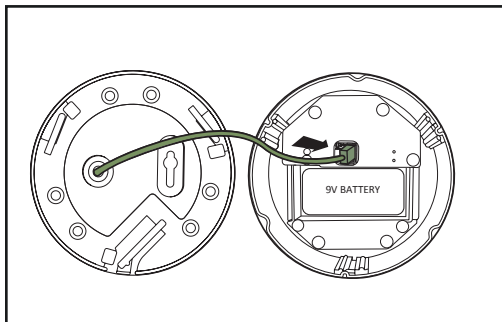

- 3** Plug the lock face cable into the back of the lock face. The cable connector will only fit one way into the lock face.

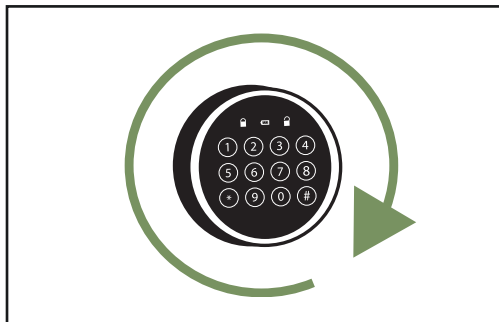

- 4** Install the lock face onto the safe door by aligning the lock face to the backer plate and turning clockwise until you feel the lock face click into place.

Security Code Setup

This unit comes in Default Mode. You are required to change the default code.

DEFAULT CODE

1 - 5 - 9 - #

NOTE: Verify your new code at least 3 times before closing the door to ensure the code has been programmed correctly.




It is necessary to reprogram your safe with a new security code that you have personally selected to provide maximum household security.

Do not shut the safe door until you have confirmed your new security code at least 3 times to ensure your code has been saved and you can open the door successfully.

NOTE: If the incorrect security code is entered 3 times you will have an automatic lockout for 30 seconds before you can enter your code again. If 3 additional failed attempts are made, the lock face will lockout for 5 minutes. Leave batteries in to go through lockout cycle. If batteries are removed the timer will restart zero.

Changing the Default Code

- 1** Tap the keypad to wake up the lock face. Input the default code of [**1 5 9 #**]. Do not use this code while securing items in your safe.
- 2** Inside of the safe door, locate the small cap. Unscrew and remove the cap to reveal the reset button. Press and release the reset button. You will hear 2 beeps and the yellow light on the lock face will illuminate indicating you are now in programming mode.
- 3** While the yellow light is illuminated, enter your new 3 to 8-digit security code followed by [*]. The lock face will beep twice indicating successful programming.
- 4** With the door still opened, re-enter your newly programmed security code followed by [#]. If successful, you will hear 2 beeps and the green light will illuminate.

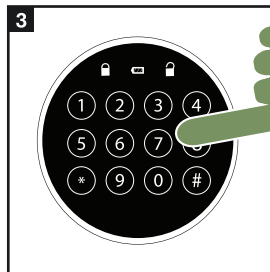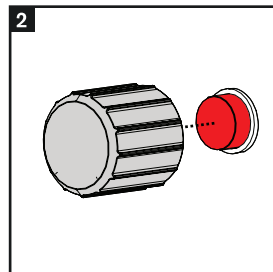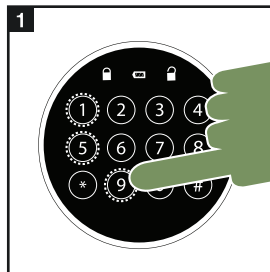

Lockout Mode & Quiet Mode



Lockout Mode

If the incorrect security code is entered 3 times you will have an automatic lockout for 30 seconds before you can enter your code again. If 3 additional failed attempts are made, the lock face will lockout for 5 minutes. Leave batteries in to go through lockout cycle. If batteries are removed the timer, will restart to zero.



Quiet Mode

By activating lock face quiet mode, the safe will no longer make audible sound when interacting with the safe, allowing for silent access.

To mute the lock face, enter the code [* 6 3 3].

To turn the sound back on, enter code [* 6 6].

Low Battery Warning

This lock face is equipped to alert you when the batteries are low.

The battery needs to be replaced if the light flashes red while any number is pressed on the key pad. Please replace the batteries immediately when receiving this warning.

Always test the batteries when installing or replacing. If the red light comes on when a button is pressed you know the batteries are not fully charged.



Red Light


Battery needs replaced if the light flashes red while pressing any of the keys.

Securing Your Safe

Failing to secure your safe will void the lifetime warranty.

Tools needed to bolt safe to a concrete surface:

- Drill/Hammer Drill
- Drill Bit - 5/16" (8mm)
- Wrench - 1/2" (13mm)
- Safety Glasses
- Hammer
- Gloves

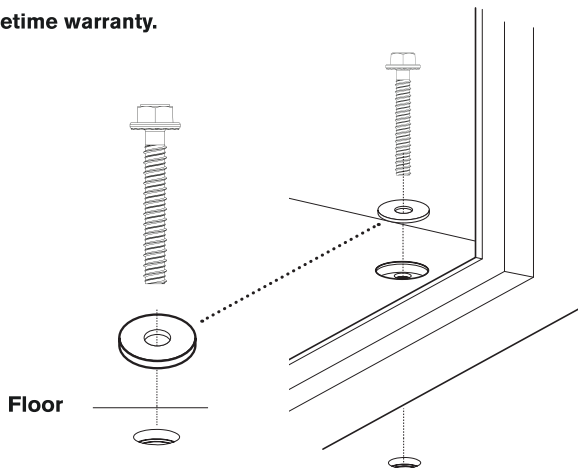

WARNING: Your safe is designed to support itself when the door is opened. However, caution should be used to avoid tipping. While securing your safe be sure to have a second person hold and stabilize the safe to keep it from tipping, causing injury, and/or damage to the safe and surrounding structures. Failure to do so will compromise the safety, security, and warranty of the safe.

Instructions for Securing Your Safe

- 1** Use the hardware provided or consult your hardware retailer for fastening hardware for your particular mounting surface.
- 2** Open your safe door and remove the four black caps on the safe floor. This will provide access to the factory drilled bolt down holes.
- 3** To secure your safe to the floor it will first be necessary to drill pilot holes in the floor surface. These should be aligned with/through the factory drilled bolt down holes.
- 4** Drill the appropriate diameter and depth of pilot holes based on the type of hardware being used and the type of floor surface. For the hardware provided (concrete floor installation) we recommend using a hammer drill and 5/16" concrete drill bit to drill the four (4) corresponding holes in the concrete floor.
- 5** Secure the safe by threading all 4 anchor bolts through the factory drilled bolt down holes in the bottom of the safe and ratcheting down tight.
- 6** Replace the four black caps onto the floor of the safe.

Locked Out of Your Safe

Locked out of your safe? Don't panic!

- 1** In the event you have forgotten the security code, use your backup keys in order to gain access to your safe and follow the Security Code Setup instructions.
- 2** If you have lost your backup keys, you will need to contact customer service at the number below. Proof of purchase is required to obtain keys.

Contact Customer Service at: cs@saproducts.com or +1 888 792.4264

Maintenance

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your safe may void your warranty. Always consult our customer service experts prior to doing so.

CAUTION: The safe is designed with a non-removable door. Any attempt to tamper with or remove the door will void the warranty.

Loading Your Safe



Store documents or heat sensitive items in the bottom of the safe for greatest protection against fire damage. Store ammunition separately from your firearms.



Do not put anything in your safe that will put pressure against the door when it is closed. As a good safety precaution, store heavier items either on the floor of the safe, or away from the middle of the shelves.



When placing firearms into your safe, make sure they rest securely against the cutouts provided in the barrel rests to prevent accidental tipping when the door is closed.

Lifetime Warranty



SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Remington Safe damaged by fire, forced entry, forced attack, or natural flood for the lifetime of the original owner. Lifetime warranty only applies to the original owner of the safe.

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Remington Safe with defective parts, paint, or lock for the lifetime or the original owner.

If SA Consumer Products, Inc. deems a replacement safe is to be sent, they will pay the freight costs to ship the replacement safe to the original owner.

This lifetime warranty is limited to the safe and expressly excludes any loss associated with the contents of the safe.

SA Consumer Products, Inc. reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowners statement of coverage. This warranty is not valid outside of the United States and Canada.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at

www.saproducts.com to register your safe.

SA Consumer Products, Inc. shall only be responsible and liable when the safe is used in compliance with the directions specified in your new Remington Safe User's Manual. Failing to secure your safe properly to the floor per instructions will void the Lifetime Warranty.

SA Consumer Products, Inc. requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products, Inc.'s sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is exclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose. This warranty is limited to the safe itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the safe.

Remington®



@remington_safes



saproducts.com



cs@saproducts.com



+1 888 792.4264

SA CONSUMER
PRODUCTS