 




VALLEY
SPORTSMAN

MODEL:1A-FS201S

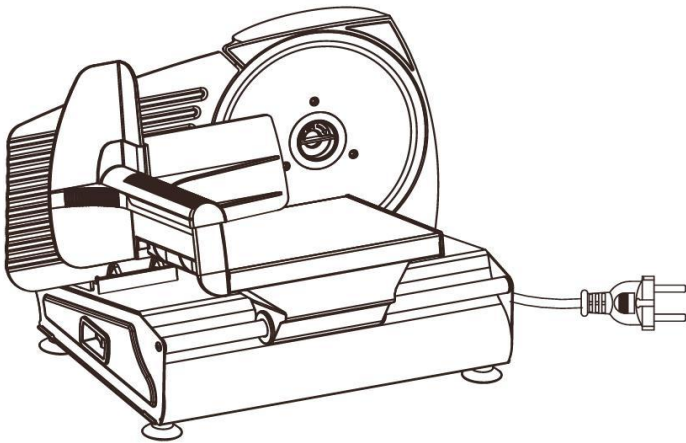

Instruction Manual

ELECTRIC SLICER

DESCRIPTION

- ✧ This appliance is designed for slicing foodstuff, e.g. meat, cheese, vegetables, bread, etc.
- ✧ The appliance is only intended for household indoor use. The appliance is not intended for any commercial or industrial use.
- ✧ Do not use the appliance for other purposes. Any other use might lead to damage of the appliance or personal injury.
- ✧ The manufacturer will accept no liability for damage or injuries resulting from improper use or non-compliance with this manual.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE OPERATING.**
2. The slicer must be connected to a 120V AC electricity supply.
3. Disconnect the power cord on the slicer; for cleaning, if the product appears to be malfunctioning; or when you're finished operating the appliance. To disconnect the device from the electricity supply, always pull directly on the plug - never pull the plug out using the power cord.
4. Indoor use only. Never allow this device to be exposed to rain or moisture. Do not submerge the appliance in water for any reason. If the device should fall into water, ensure the device is disconnected from a power source, then and only then, remove the device from the water. Afterwards, have the slicer examined by an authorized service center before further use.
5. Do not use the slicer if your hands are wet or if you are standing on a wet floor. Do not use the slicer if it is wet or moist.
6. The slicer is designed exclusively for domestic use and not for

commercial purposes.

7. Set up and store the slicer out of reach of children.
8. Do not leave the slicer unattended while the appliance is plugged in.
9. Always ensure that the slicer is safely set up or installed before you begin operating.
10. The sliding feed table and piece holder should always be in place while appliance is in use, unless this is not possible due to the size or shape of the food. Do not use the slicer to slice through bones or frozen food.
11. Do not use the slicer if it is damaged in any way. Have the slicer repaired immediately at an authorized service center by qualified personnel.
12. Only use the slicer with the accessories supplied by the manufacturer.
13. No claims under the guarantee or liability for damages will be accepted if they result from improper or incorrect use of the slicer.
14. Switch off before reaching near the blade.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
16. Always disconnect the appliance from the supply if it is left unattended, before assembling, disassembling, or cleaning.
17. Keep the appliance and its cord out of reach of pets and children.
18. Each operator should thoroughly read through this owner's manual before attempting to use this appliance. The operator should always be aware of the safety procedures mentioned in this manual.
19. This appliance is **NOT** intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
20. Children shall not play with the appliance. The slicer is not a toy.

SAVE THESE INSTRUCTIONS

OPERATION

WARNING! The appliance is suitable for a short time operation only. Refer to operating times and speed settings for accessories within this instruction manual. Let the appliance sufficiently cool down if the housing becomes too hot. Only operate the appliance again, after it has cooled. Do not overload the appliance.

WARNING! Danger of injury! Care shall be taken when handling the sharp cutting blade, especially during assembly, disassembly and cleaning. Keep hands or fingers away from the rotating cutting blade. Always use the food holder and food guide handle during operation.

Note: The cutting blade continues to rotate for a few seconds, after the appliance is switched off. Wait until the cutting blade comes to a complete stop before removing the foodstuffs.

Note: Only slice food that is thawed, unpacked and free from bones. Do not slice frozen food, bones or extremely hard foodstuff.

Note: Always set the slice thickness selector to the position **O** after each use, during storage and transport.

Note: During breaks from slicing, set the on/off switch to position **O** and wait until the cutting blade comes to a complete standstill.

Before First Use

Carefully, take the slicer out of its packaging. Remove all the packaging material and keep it together with the packaging. Clean the slicer before it comes into contact with any food.

Setting up the slicer

1. Never set the slicer up on a hot surface or near an open flame.
 2. Make sure that the power cord does not pass over hot or sharp edges.
 3. Do not allow the power cord to become kinked or trapped. Do not wind around the slicer.
- Set up the slicer on a flat, non-slip surface close to an electrical socket.
 - Unwind the required length of power cord and plug the appliance into a

proper electrical outlet.

- Push the piece holder (5) on to the sliding feed table (4).

Slicing

1. Never touch the blade while the slicer is on. Once the slicer is shut down, wait until the blade has stopped spinning before working near the blade.
2. Always use the piece holder (except perhaps for very large pieces of food). Press the piece of food to be sliced forward using the piece holder.
3. Use the slicer only for slicing normal household foods and no other purposes. Do not use the slicer for slicing frozen foods, bones, foods with large kernels, or packaged foods.
4. Never use the slicer for more than 10 minutes continuously.
5. The cutting blade (3) continues to rotate after the slicer has been switched off.
6. When finished using the appliance, always return the Thickness Selector to "0" before storing. Failure to do so may result in serious injury or chipping of the blade.

Operating the slicer

Switch the power to "ON" to power up the slicer. Ensure you do not operate for more than 10 minutes continuously.

During breaks from slicing, move the switch quickly to the "OFF" position and wait until the cutting blade comes to a complete standstill.

The slice thickness can be set between 0 and approximately 15mm. Set the required slice thickness using the knob (7). The settings on the scale do not correspond with the slice thickness in mm. For safety reasons, the blade is covered when set to thickness level "0".

Place the food to be sliced on to the sliding feed table. Lightly, press the

food with the piece holder (5) against the food support plate (8). Switch the device on and guide the food back and forth along the cutting blade (3) while applying light, downward pressure on the piece holder (5). After using the slicer, always set thickness to “0” so that the sharp blade is covered. The cutting blade (5) is ideally for cutting wafer-thin slices boiled ham cold-cuts. To safeguard your fingers, always use the sliding feed table (4) and the piece holder (5).

AFTER USE

Cleaning

Note: Clean the appliance regularly to keep it in a safe and hygienic working condition.

 
 
 
- ✧ Before cleaning, unplug the appliance and let it cool down completely.
- ✧ Do not clean the appliance with steel wool, strong chemicals, alkali, abrasive or disinfecting agents as they may damage its surface.
- ✧ Do not immerse the appliance in water or other liquids. Never hold the appliance under running water. Make sure that no water enters the appliance while cleaning it and that the electrical parts do not become wet or damp.
- ✧ Clean the inside and outside of the appliance with a soft damp cloth. Wipe with a dry soft cloth.
- ✧ Clean the cutting blade and food holder with a soft sponge in warm, soapy water. Wipe with a dry soft cloth.
- ✧ The appliance may only be used again after it is dried completely.

Storage


- ✧ Before storage, always make sure that the appliance is completely dry and cooled down.
- ✧ Store the appliance in a cool, dry place, protected from moisture and out of the reach of children.
- ✧ Preferably store the appliance in its original packaging.

Removing the Cutting Blade

- ✧ Rotate the locking piece in blade center clockwise, then pull out the blade. When taking out the blade, make sure that you handle it by the center. Hand-wash the blade in warm, soapy water (not in the dishwasher!). Clean the housing behind the blade with a dry cloth or a soft brush. Do NOT submerge the appliance in liquid!

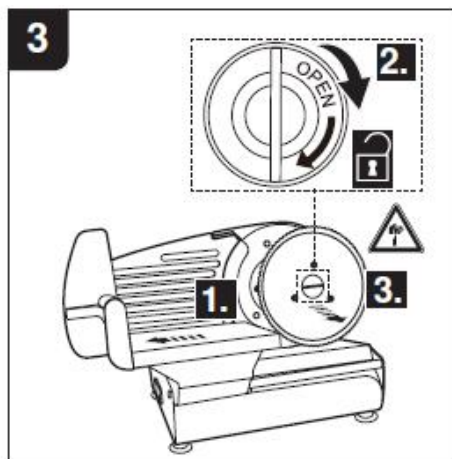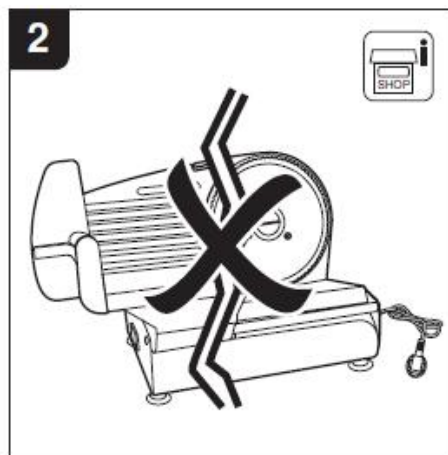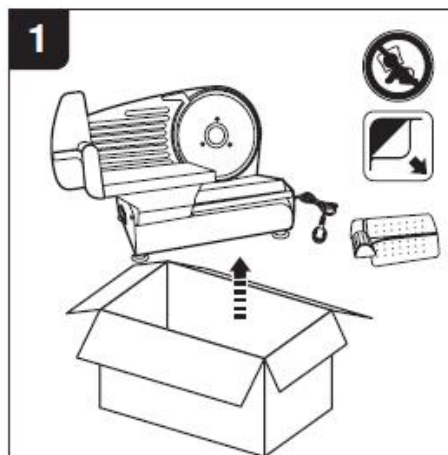


5

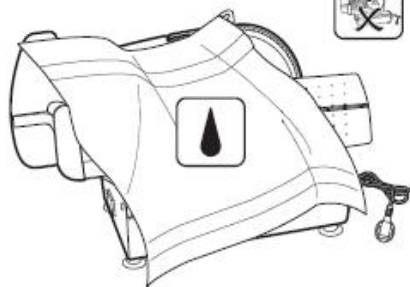 


6



 
7

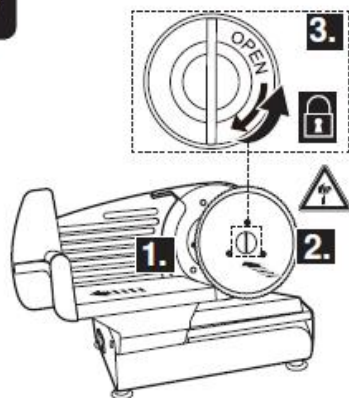


8





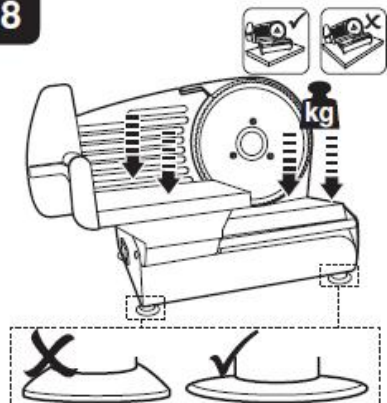 


9

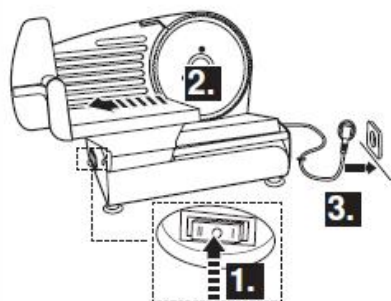 0
OFF

 10

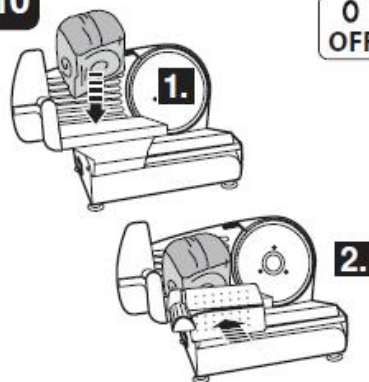
0
OFF

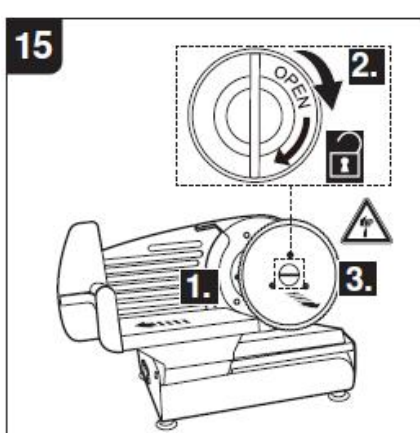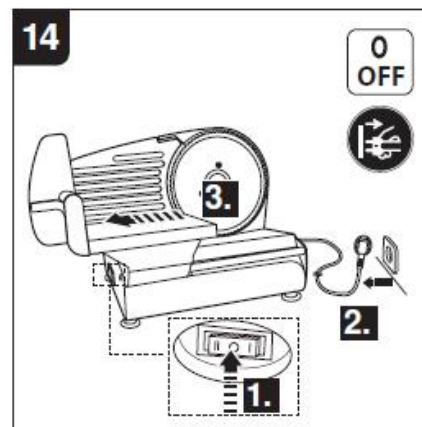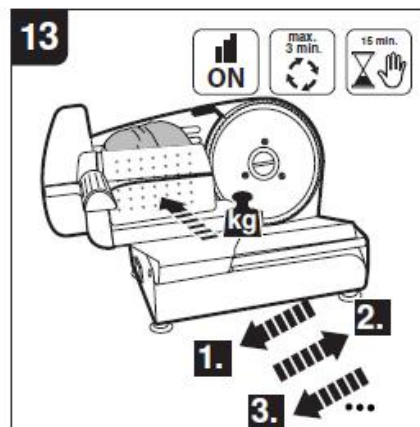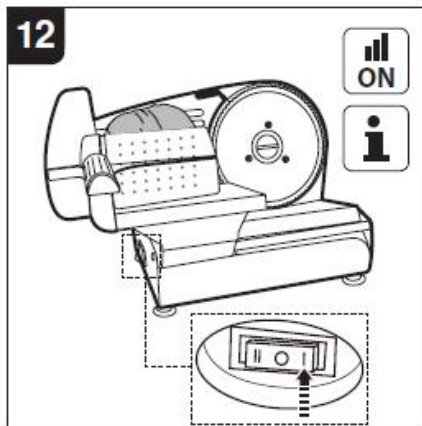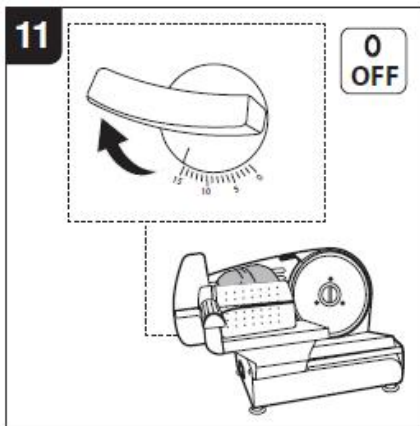     


17



 18

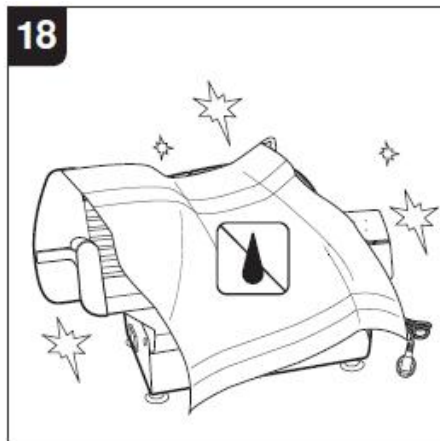

19

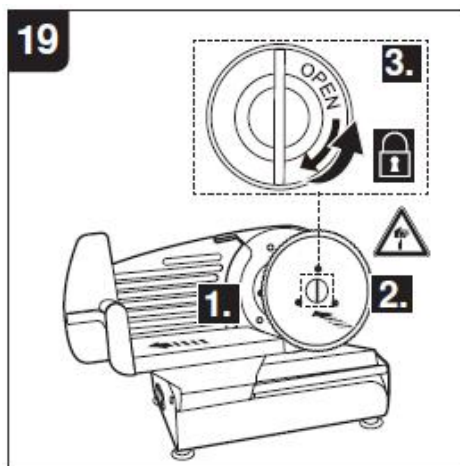 

20

