

DAPPER

User Manual

Walk-Behind Outdoor Hand Push Floor Sweeper

MODEL: DP-FS1103



Floor Sweeper

*For any service-related issues, please contact us:
Phone Number: 718-301-8243
Email address: support@dapper-supply.com*

SAFETY

Read all safety instructions, operating instructions, illustrations, and technical data provided with this device. Failure to follow the instructions can cause serious injury.



WARNING

Safety Precautions: When using this equipment, always observe safety precautions to prevent injury and damage. Carefully read these operating instructions and safety instructions. Keep them accessible for future reference. If you give the device to someone else, ensure they also receive these instructions. We are not liable for accidents or damage caused by not following these safety instructions.

Keep Away from Children: The device and its packaging are not toys. Children should not play with plastic bags, foils, or small parts, as these pose a risk of ingestion and asphyxiation.

Important Safety Information:

Before Installation and Use: Be sure to observe the instructions for use before installation and commissioning.

- Never clean the appliance with solvents.
- Do not leave the appliance unattended.
- Keep the appliance out of reach of children.
- Store the appliance in a dry room.
- Do not operate a defective device.
- Use the device only for its intended purpose.
- Use only original accessories and spare parts.
- We are not liable for any damage caused by improper repairs or handling.
- Replace defective parts immediately.
- Do not pick up glowing or harmful objects with the sweeper. Removal of gel-shaped, liquid, flammable, and explosive substances is not permitted.
- After removing metal, glass, or sharp objects, wear firm work gloves when emptying the waste container.

CONTENTS

 
 
ACCESSORY CONTENT

- Sweeper
- Upper push bar
- Feeding brushes (2x)
- Connection knob (2x)
- Support disc (2x)
- Screw (2x)
- Waste container
- Lower push bar
- Nut with quick release function (2x)
- Cap (2x)
- Original operating instructions

PRODUCT PARAMETER







Model	DP-FS1103
Sweeper Width	25.59 inches
Rubbish Bin Capacity	20L Vertical
Drive Type	Hand Push
Product Size	47.24"x 25.98"x38.39"(Maximum Gear)
Net Weight	20.3 lbs



PARTS LIST

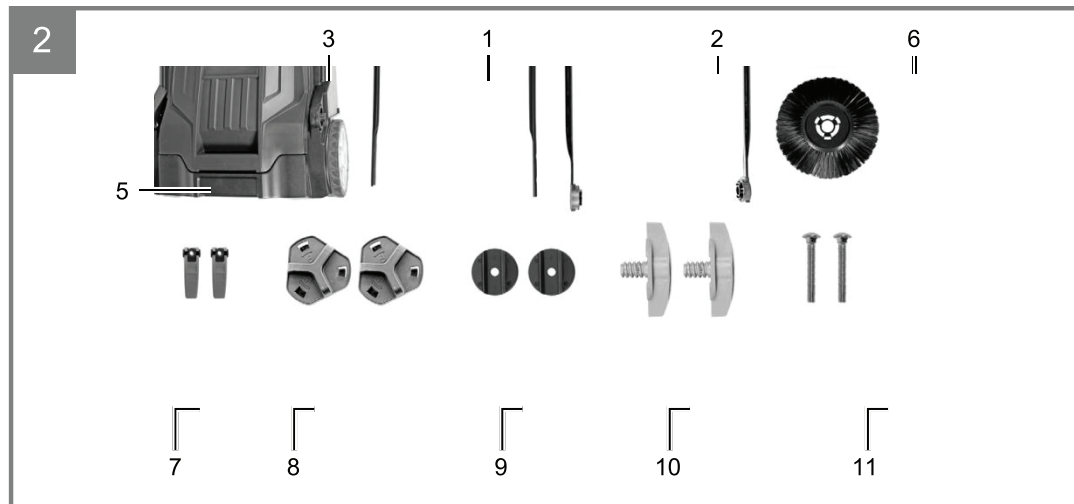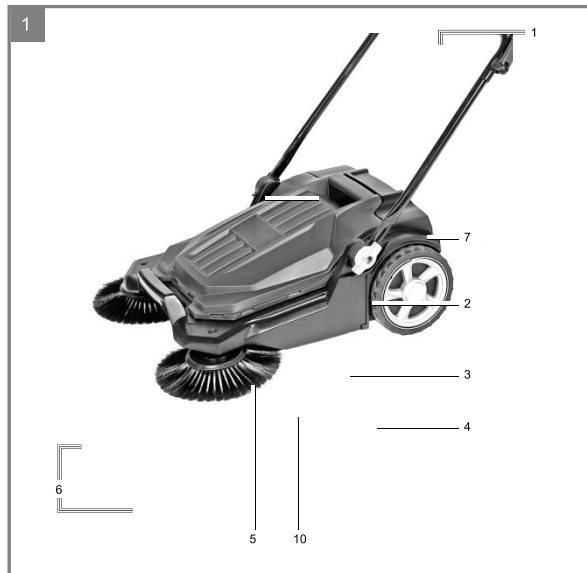

Parts List:

- | | |
|---------------------|------------------------------------|
| 1. Upper push bar | 7. Nut with quick release function |
| 2. Lower push bar | 8. Cap |
| 3. Sweeping machine | 9. Support disc |
| 4. Wheel | 10. Connection knob |
| 5. Waste container | 11. Screw |
| 6. Feeding brushes | |

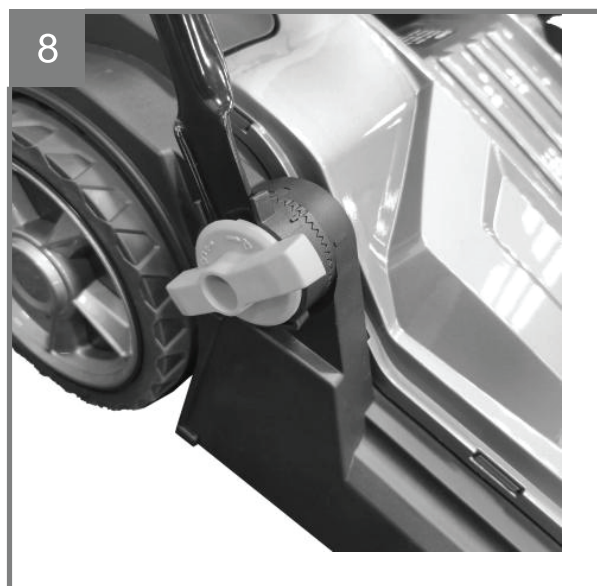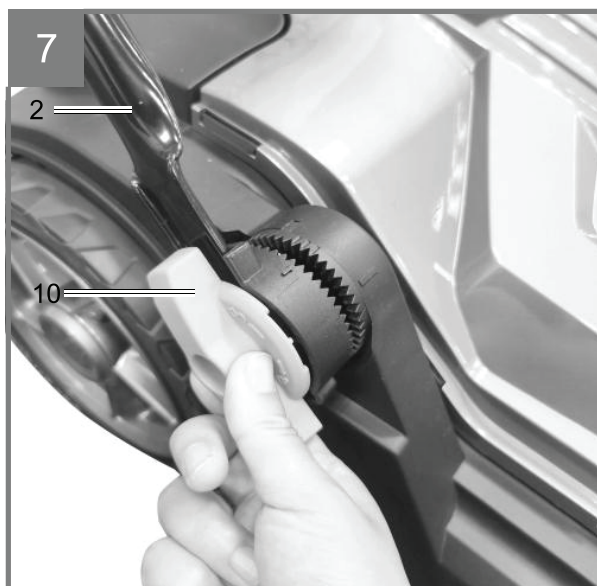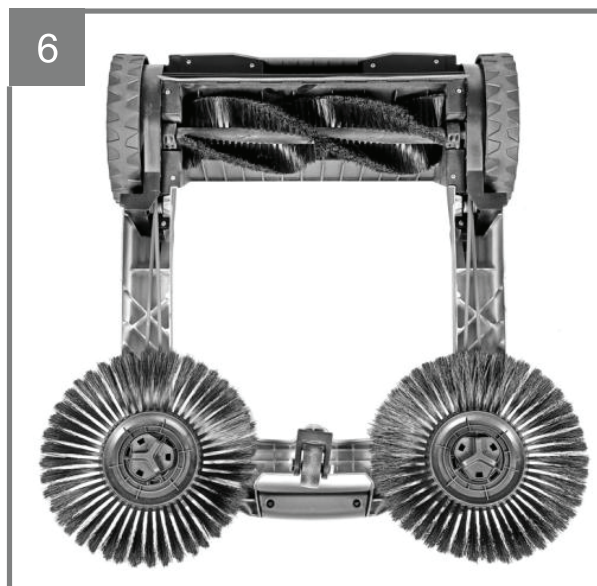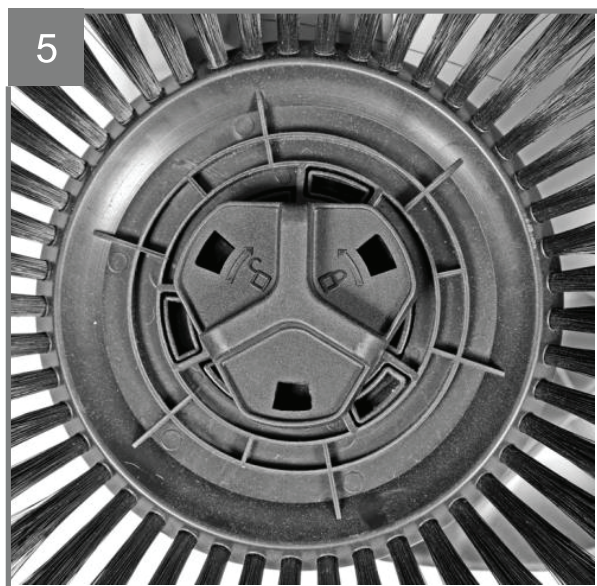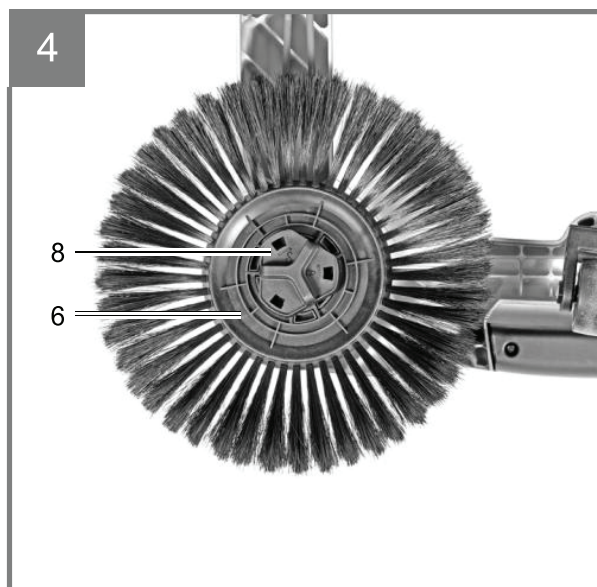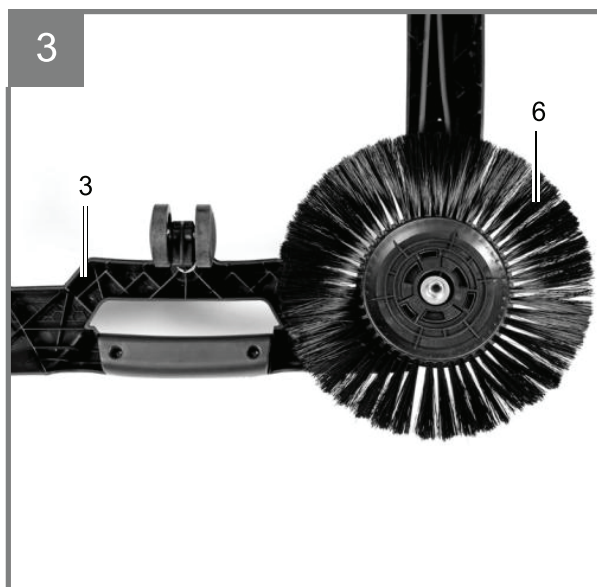      

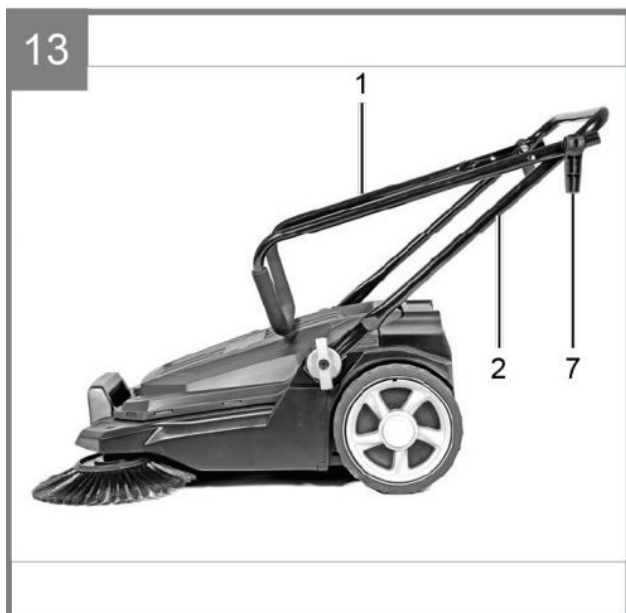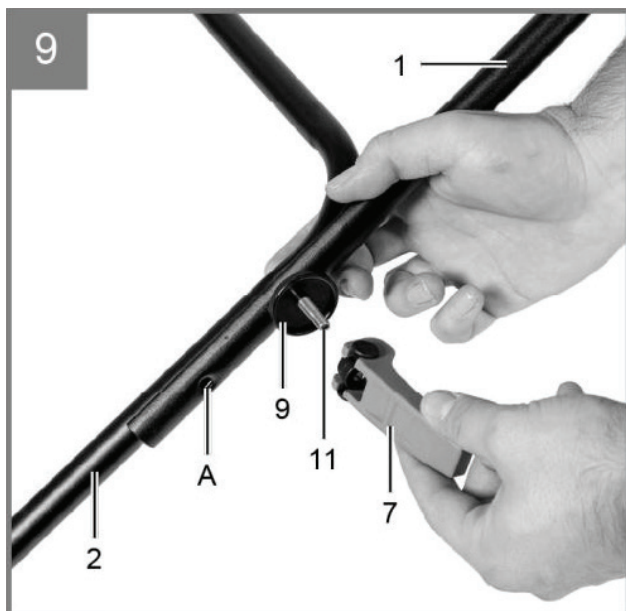  

ASSEMBLY

Unpacking the Device

1. Open the package and carefully remove the device.
2. Remove all packaging material, including packaging/transport fuses (if available).
3. Check that the delivery is complete.
4. Inspect the appliance and accessories for any damage that may have occurred during transit.
5. If possible, store the packaging until the end of the warranty period.

Intended Use

The sweeper is designed to sweep flat and dry surfaces such as driveways, patio yards, etc. It should only be used as intended. This device is not suitable for commercial or industrial use.

Product Assembly

Installation of Feed Brushes (Figures 3-6):

1. Insert the feed brush onto the sweeper.
2. Attach the feed brush with the cap, ensuring the lettering on the cap is correctly aligned. Turn the cap in the direction of the arrowhead.
3. Repeat the procedure for the other side.
4. To disassemble the feed brushes, turn the cap in the opposite direction and remove the cap and the feed brush.

Mounting of Push Bars (Figures 7-10):

1. Mount the lower and upper push bars as shown in Figures 7 to 10.
2. Adjust the height of the push bar by selecting the appropriate mounting hole.

OPERATION

By pushing the sweeper, the feed brushes and the sweeping brush are rotated via the belt drive. The rotating feed brushes sweep the dirt to the center. This dirt is collected by the sweeping brush and transported to the waste container.

EMPTYING THE WASTE CONTAINER (Figure 11)

Warning: Dust can be hazardous to your health. Wear a dust mask!

1. Remove the waste container from the appliance as shown in Figure 11.
2. Empty the container and reinsert it back into the device.

PARKING POSITION (Figures 8, 12, 13)

The device can be folded for space-saving storage. To fold:

1. Loosen the lower nuts with quick-release function until the pins (Figure 8) pop out of the fixation.
2. Unfold the push bar (Figure 12).
3. Alternatively, loosen the upper nuts with quick-release function afterward.

CLEANING AND MAINTENANCE

1. Keep guards and air vents as dust and dirt-free as possible.
2. We recommend cleaning the appliance immediately after each use.
3. Clean the appliance regularly with a damp cloth and some soap.
4. Do not use detergents or solvents; these could damage the plastic parts of the device. Ensure no water enters the inside of the appliance.

STORAGE

Store the appliance and its accessories in a dark, dry, and frost-free place. The optimal storage temperature is between 5°C and 30°C (41°F and 86°F). Keep the power tool in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The guide wheel does not rotate smoothly, making pushing difficult.	Debris like small branches may be tangled around the guide wheel, causing it to be inflexible.	Lift the machine and remove any debris from the guide wheel.
The feeding brush is hard to push and does not rotate smoothly.	Large branches or excessive debris may be wrapped around the feeding brush, preventing smooth operation.	Remove large branches and debris that are stuck in the feeding brush.
The wheels slide and do not rotate when the machine is pushed.	The ground may be too smooth or wet, reducing friction and causing the wheels to slip.	Avoid using the machine on very smooth or wet surfaces.

