 


DAPPER

User Manual

26" Wide Commercial Corded Vacuum Cleaner **Model No:- DP-CVC1132**

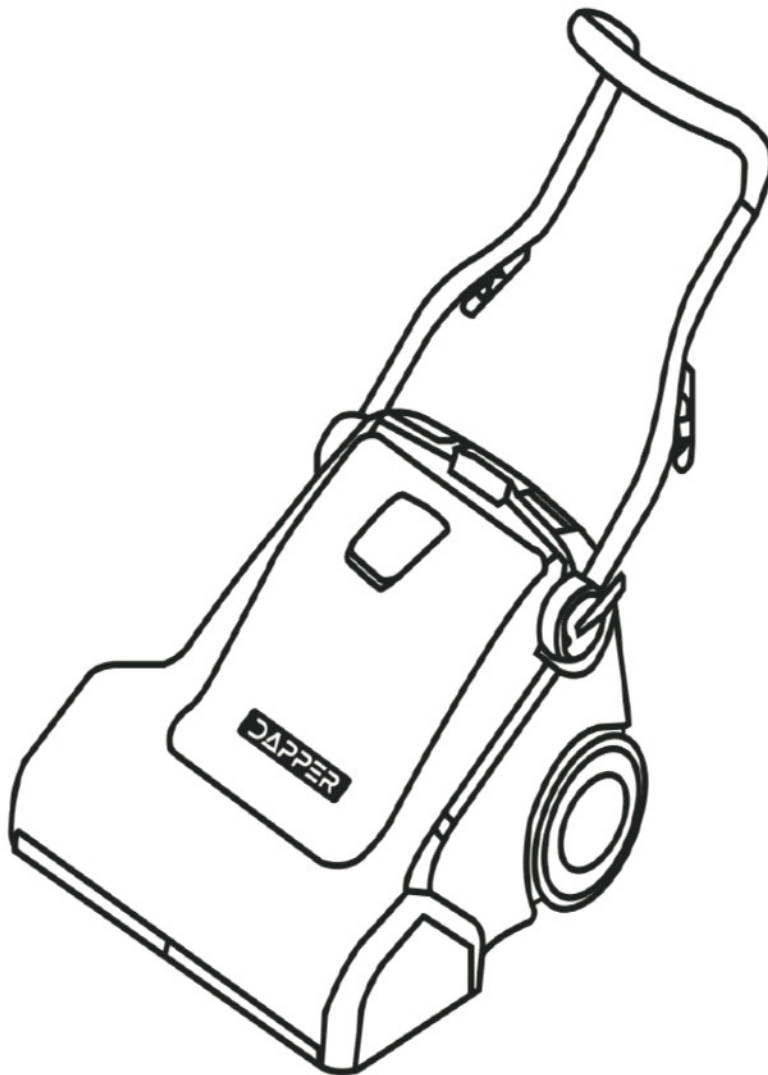

For any service-related issues, please contact us:
Phone Number: 718-301-8243
Email address: support@dapper-supply.com

CONTENTS

Product Features.....	4
Technical Data	5
Warning	6
Assembly	7
Maintenance	8
Troubleshooting.....	9
Warranty	10

PRODUCT FEATURES

Dapper introduces the 26" Wide Commercial Corded Vacuum Cleaner, a high-performance commercial cleaning solution designed to meet the demands of routine floor maintenance in large spaces.

Engineered for professional dust removal, sweeping, and polishing, the DP-CVC1132 combines efficiency with convenience. Its ultra-wide working width and dual-side brush system ensure thorough cleaning by effectively eliminating ground dust, restoring flooring texture, and enhancing surface shine.

Designed for user comfort, the machine features an adjustable ergonomic handle and a dual-coating brush system that enhances dust suction. It delivers exceptional efficiency—10 times more effective than standard cylindrical sweepers and 5-7 times more efficient than traditional direct-suction vacuum sweepers. With its superior cleaning performance, the DP-CVC1132 simplifies and accelerates daily floor maintenance.

Features:

1. **Wide Coverage:** 26 inches working width for efficient cleaning.
2. **Dual-Side Brush System:** Ensures deep and thorough floor cleaning.
3. **Powerful Suction:** Delivers high-efficiency dust removal.
4. **Innovative Dust Bin System:** Designed for easy disposal and maintenance.
5. **User-Friendly Operation:** Convenient push-style functionality.
6. **Versatile & Durable:** Built to withstand various cleaning environments.

Technical Specification:

Model No:	DP-CVC1132
Name:	26" Wide Commercial Corded Vacuum Cleaner
Voltage	120V/50HZ
Weight:	143.3 pounds
Power:	2500W
Noise:	≤75dba
Volume:	9.25 gallons
Working Width:	26 inches
Cable:	82 feet


WARNING

Safety Precautions

1. **Floor Damage Warning:** Avoid operating the appliance in a stationary position to prevent damage to the floor covering.
2. **Edge-to-Edge Cleaning:** The brush system is positioned on one side, allowing the right side of the appliance to clean right up to the edge.
3. **Filter Bag Replacement:** If the full filter bag indicator lights up, turn off the appliance and replace the filter bag.

ASSEMBLY

1. **Cable Storage & Removal:** Wrap the power cable around the three cable holders. To remove it, turn the rotating cable holder.
2. **Adjusting the Handle:** Swivel the handle lock outward, set the desired height, and secure the lock.
3. **Vacuuming Procedure:** Remove large debris such as cups, plates, and strings before vacuuming. Plug the appliance into a power socket, switch it to "ON," and move steadily across the surface. For heavy soiling, clean multiple times or at a slower pace.

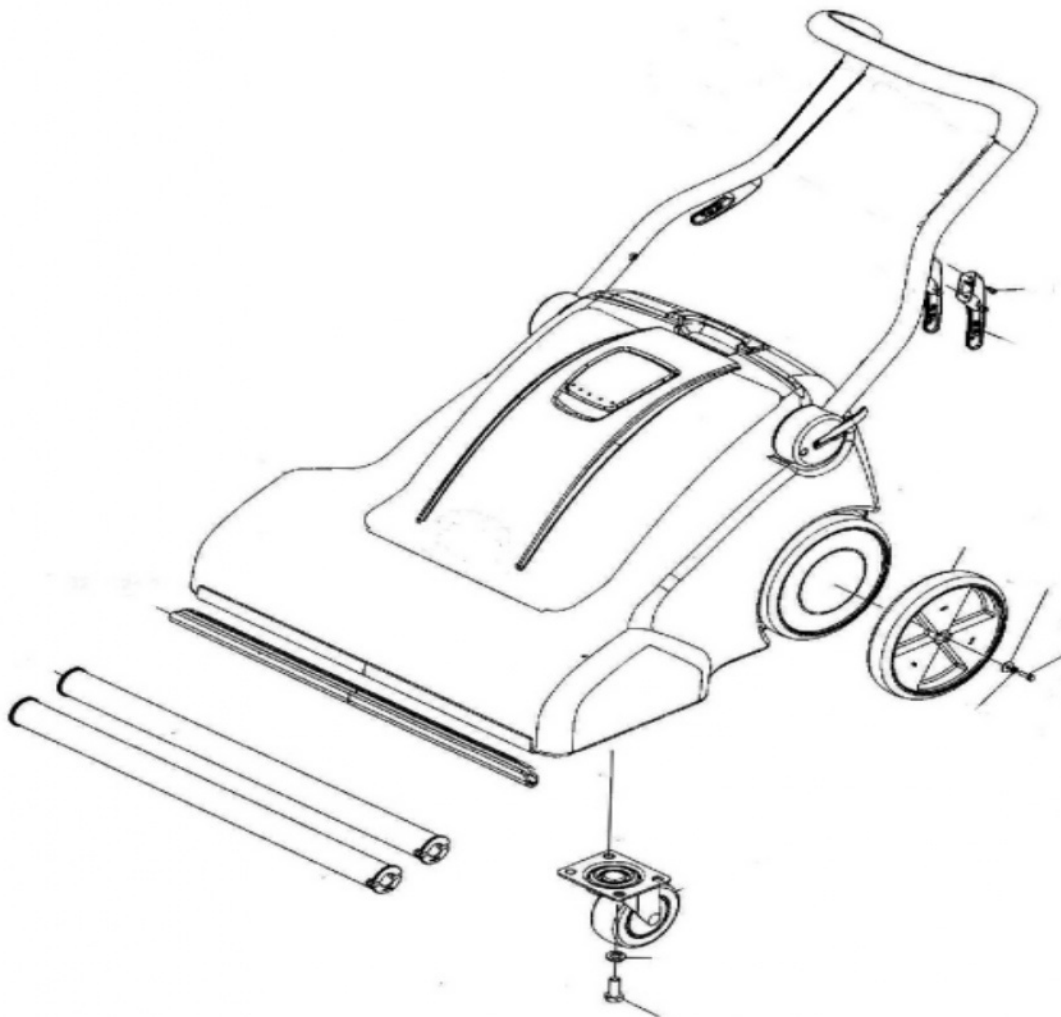

MAINTENANCE

1. Daily:

Shake the filter bag contents downward if necessary.
Inspect the power cable for damage and replace if needed.
Clean underneath the appliance.
Remove fibers, hair, and strings from the brush rollers.
Check and clean seals, replacing any that are damaged.

2. Weekly:

Clean the brushes and inspect them for wear.
Replace brushes if the bristles have worn down to the length of the yellow indicator bristles.

3. Monthly:


Clean the motor protection filter located at the bottom of the filter chamber.
Check the filter for any damage.

4. Every Six Months:

Remove the wheels, clean the axles, and apply a thin layer of silicone grease.

Main Troubles & How to Solve Them:

Problem	Solution
Appliance is not working:	Plug in the main plug; Check facility fuse.
Brushes do not turn:	Reset the brush drive fuse on the control panel
Suction turbines do not run:	Reset the suction turbine fuse on the control panel.
Insufficient vacuum performance:	Reset the suction turbine fuse on the control panel; Filter bag is full, the indicator 'filter bag full' glows, Replace filter bag; Remove the brush rollers clean suction channel in the brush head and check the suction hose.

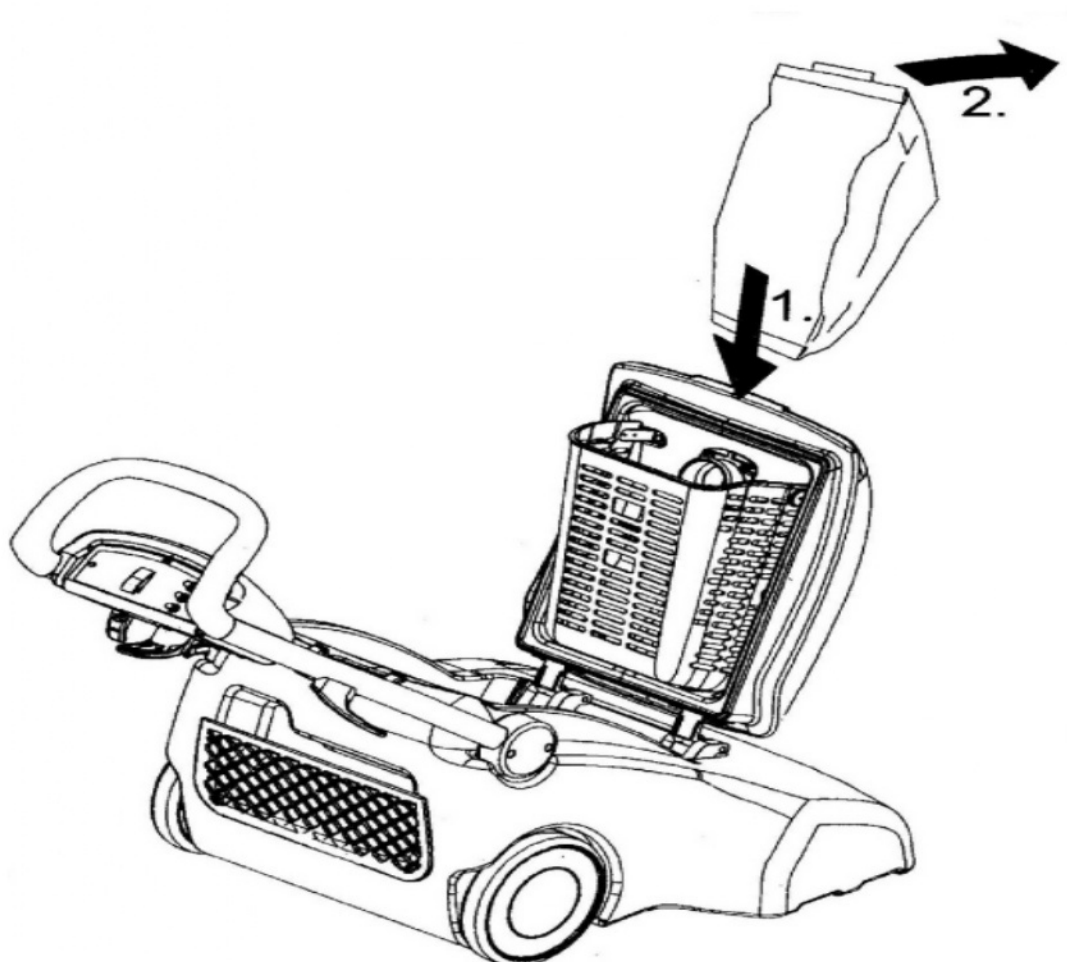

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period.

This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1. Product failure due to power outages, interruptions, or inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
4. Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
6. Cleaning and maintenance not performed according to the user manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER