


Counter Rotating Brush

Model No:- DP-CRB1308 - 12", DP-CRB1309 - 15", DP-CRB1310 - 20"

 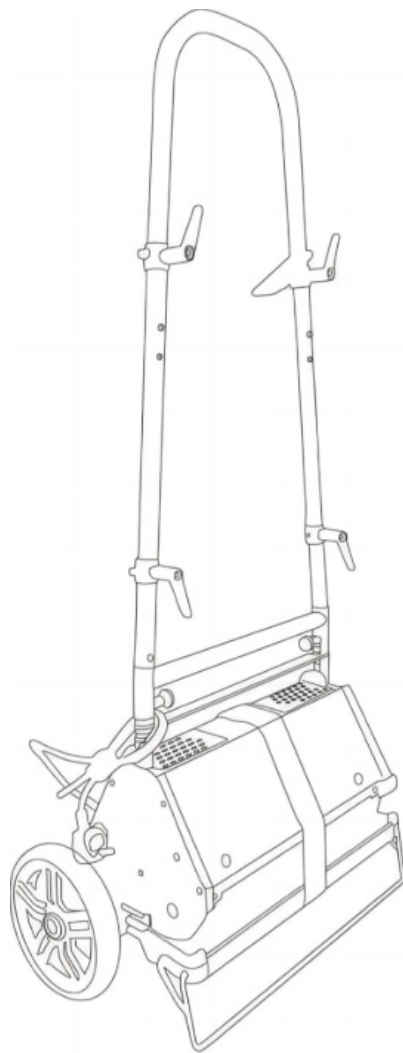


Please read the instruction manual carefully before use

For any service-related issues, please contact us:

Phone Number: 718-301-8243


Email address: support@dapper-supply.com




CONTENTS

Parts List	4
Safety	8
Assembly	10
Warranty	17

PARTS LIST

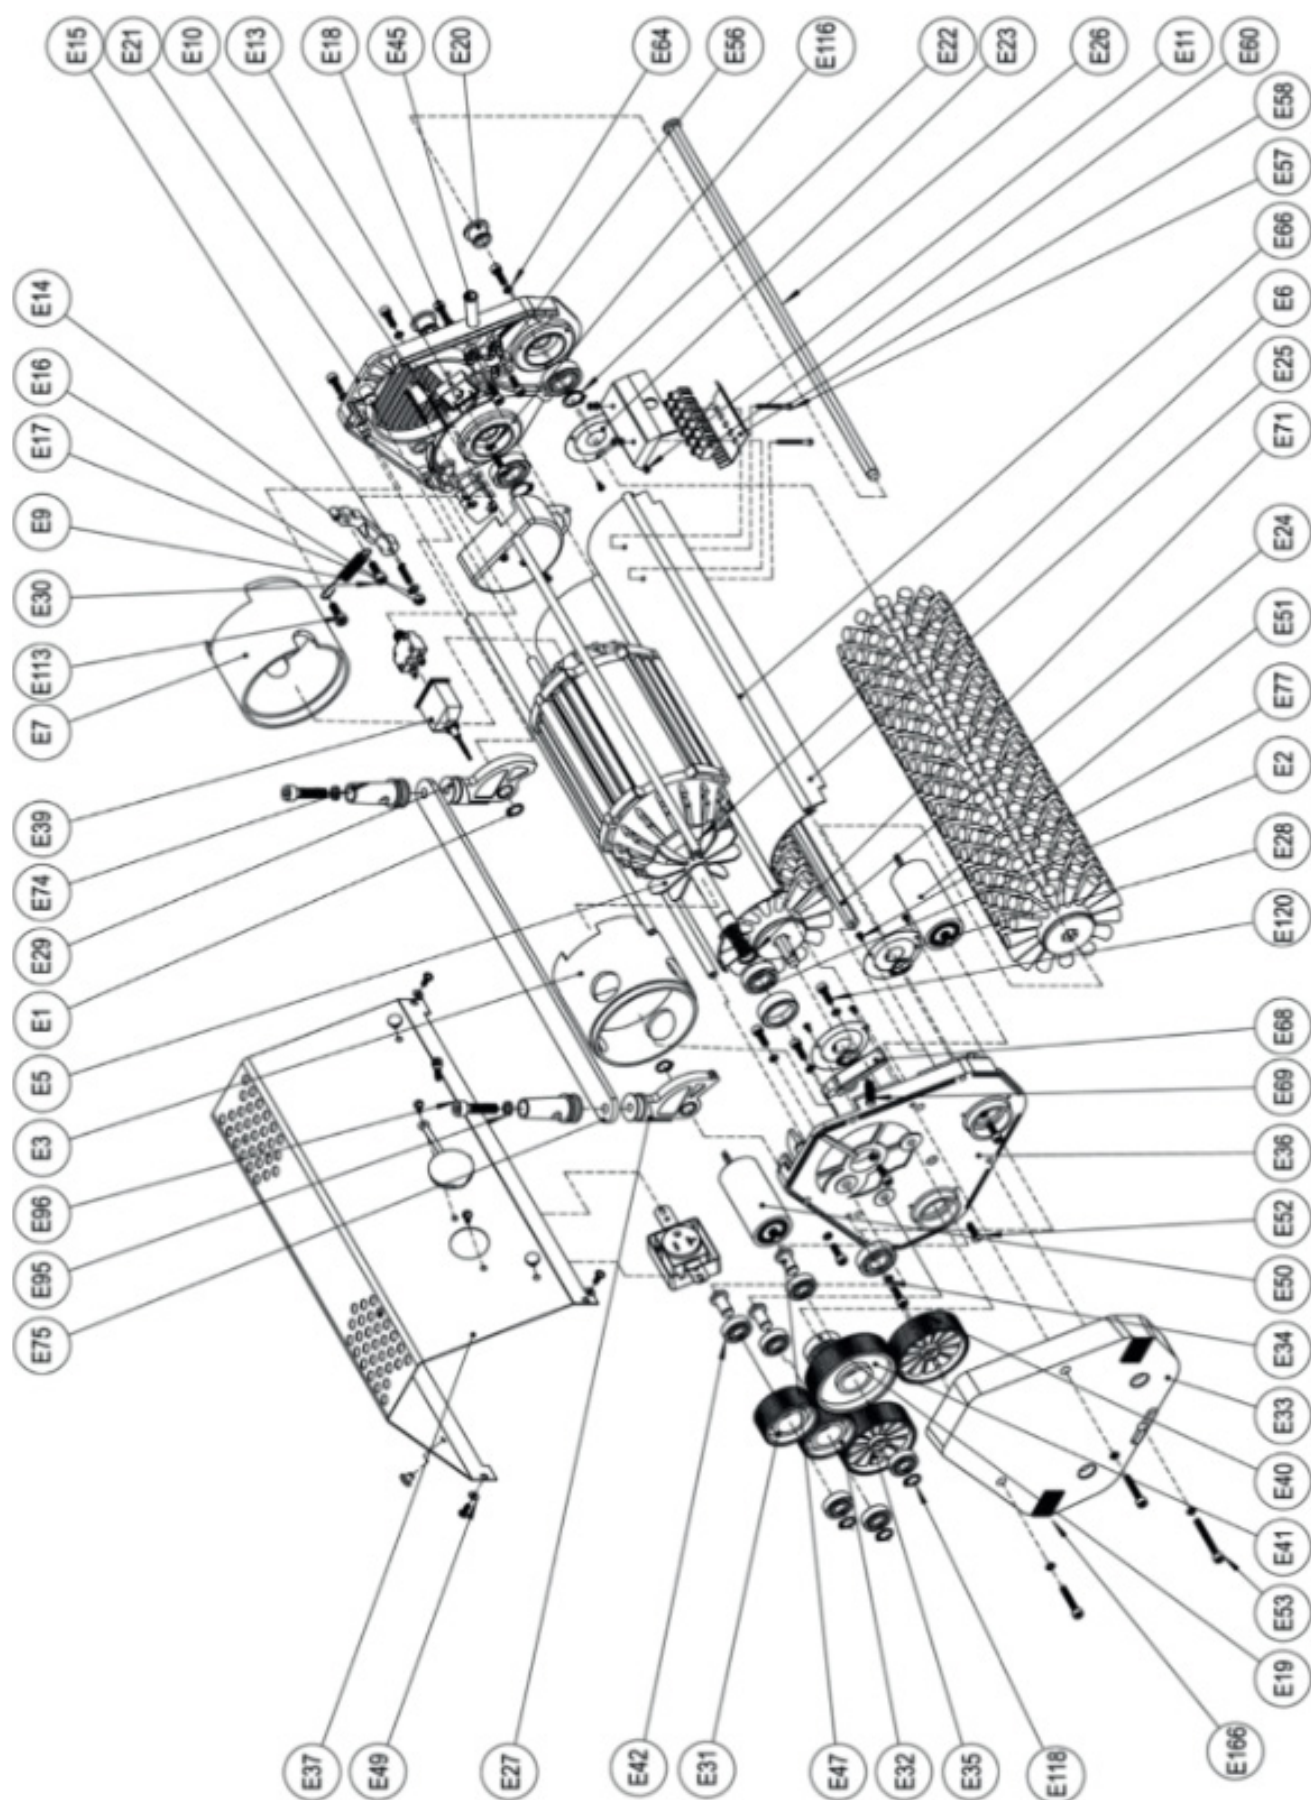

Transport trolly

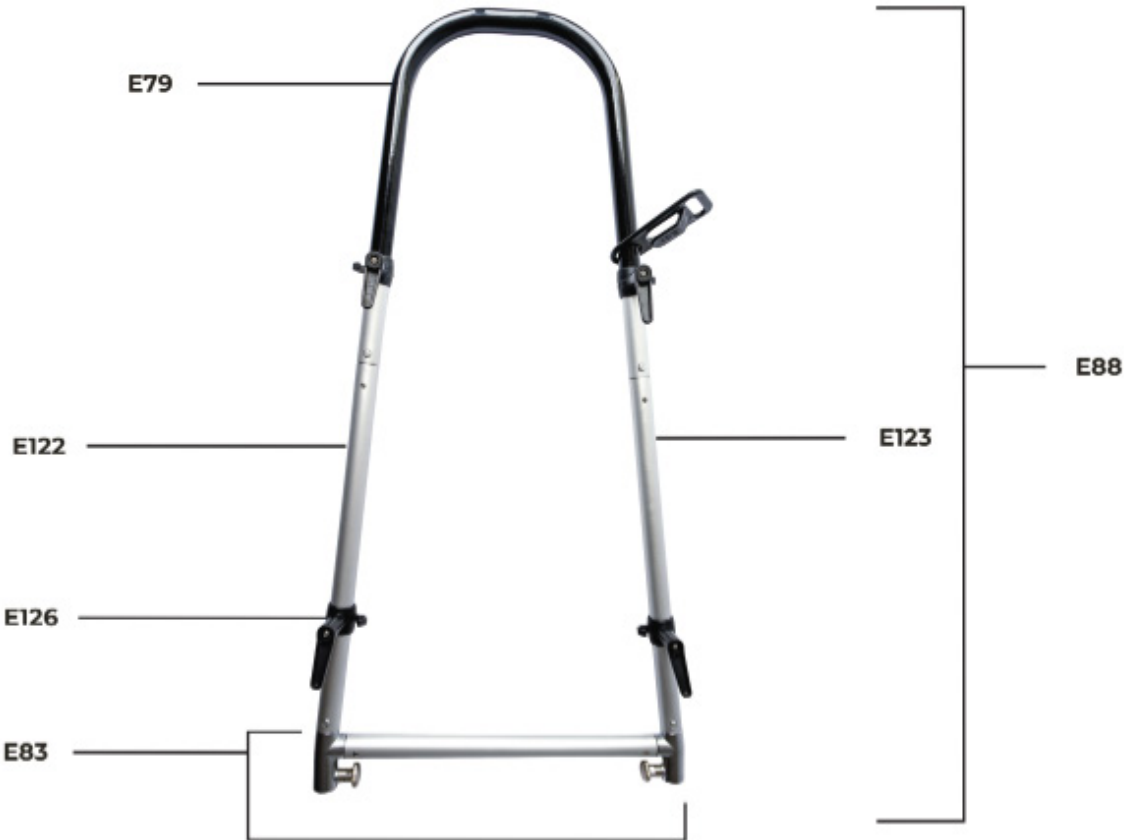

X4E



X4B/W



X4B



E8

Spare parts

#ITEM	DESCRIPTION
E1	Snap Ring A1
E2	Ball Bearing 6002
E3	TM4 Distance Piece G
E3-5	TM5 Distance Piece G
E4	TM5 Distance Piece G
E5	TM4 Motor
E6-5	TM5 Motor
E7	TM4 Distance Piece E
E7-5	TM5 Distance Piece E
E8	TM4 Transport Trolley Comp.
E8-5	TM5 Transport Trolley Comp.
E9	Extension Spring
E10	Worm Screw M3 X 44
E11	Nut M3
E12	Spring Ring M3
E13	Electronic Micro Switch
E14	Switch Part
E15	M5 X 20 Screw
E16	Nut M5 Self Lock
E17	Washer M5
E18	Cylinder Head Screw M5 X16
E19	Ball Bearing 6003
E20	Flange
E21	Housing Unit E Comp.
E22	Retaining Ring A17
E23	Protective Plate
E24	TM4 Motor Stud
E24-5	TM5 Motor Stud
E25	TM4 Brush Cover
E25-5	TM5 Brush Cover

#ITEM	DESCRIPTION
E26	TM4 Brush Axle
E26-5	TM5 Brush Axle
E27	Handle Connector Lower G
E29	Handle Connector Lower P
E30	Screw M6 X 16
E31	Gear 48 Right w/ Bearings
E32	Gear 48 Left w/ Bearings
E33	Gear Cover
E34	Lock Washer M5
E35	Gear 66 Right
E36	Housing Unit G Comp.
E37	TM4 Motor Cover
E37-5	TM5 Motor Cover
E39	Thermorelay
E40	Gear 66 Left
E41	Gear 73 Right w/ Bearings
E42	Ball Bearing 6000
E45	Grommet
E46	Pig Tail Cable
E49	Screw M6 X 12
E50	Start Capacitor
E51	Run Capacitor
E52	Cylinder Head Screw M5 X30
E53	Cylinder Head Screw M5 X45
E56	Cable Clamp
E57	Screw M3 X 30
E58	Wire Fixing Plate
E60	Terminal Block
E64	Lock Washer
E66	TM4 Cable Protector

#ITEM	DESCRIPTION
E66-5	TM5 Cable Protector
E68	Handle Stop
E69	Handle Stop Ring
E71	Snap Ring A15
E74	TM4 Handle Upper Cone
E74-5	TM5 Handle Upper Cone
E75	Flat Bar
E75-5	Flat Bar TM5
E77	Screw M3 X 6
E79	TM4 Handle Upper Part
E79-5	TM5 Handle Upper Part
E83	TM4 Lower Handle + Cross Bar
E83-5	TM5 Lower Handle + Cross Bar
E86	Tandem Bar TM4
E86-5	Tandem Bar TM5
E88	TM4/TM5 Handle Complete
E95	Spring Ring
E96	TM4 Cylinder Head Screw M8X25
E96-5	TM5 Cylinder Head Screw M8X16
E106	Isolation Plate
E113	Cylinder Head Screw M6X14
E116	Spring Ring M8
E118	Snap Ring A10
E120	Screw M6 X14
E121	Screw M5 X 30
E122	Handle Lower Left
E123	Handle Lower Right
E126	360 Cable Holder
E151	Nut & Bolt for Renovator
E152	TM4 Front Up Right Trolley

#ITEM	DESCRIPTION
E152-5	TM5 Front Up Right Trolley
E153	Bin Trolley Wheel
E155	Trolley Belt
E156	Tray incl. Clips TM4
E156-5	Tray incl. Clips TM5
E158	TM4 Axle for Trolley
E158-5	TM5 Axle for Trolley
E163	Trolley Metal Bracket
E164	Trolley Plastic Pins
E165	Terminal Rear Shrouds
E166	Machine Side Bumpers
E167	Plastic Splash Guard (PCB)
X4B	TM4 Dust Cover (No Wheels)
X4B/W	TM4 Dust Cover (With Wheels)
X5B	TM5 Dust Cover (No Wheels)
X5B/W	TM5 Dust Cover (With Wheels)
X5E	TM5 Renovator Collection Tray

SAFETY

Safety and Operating Guidelines

1. Keep out of reach of children.
2. Close supervision is necessary when any appliance is used by or near children.
3. Always turn off the machine before connecting or disconnecting the power cord to the power outlet.
4. Do not operate the machine with bare feet or when wearing open-toed shoes or sandals.
5. Do not pick up anything that is burning or smoking such as cigarettes, matches, or hot ashes.
6. Do not use to pick up flammable or combustible materials such as, but not limited to, gasoline or alcohol, or use in areas where they may be present.
7. Avoid picking up hard, sharp objects with the cleaner, since they may damage the machine.
8. Use extra care when cleaning stairs.
9. Do not allow the carpet and hard floor cleaning machine to be used as a toy or to run unattended at any time.
10. Keep hair, loose clothing, fingers, feet, and all parts of the body away from openings, rotating brushes, and other moving parts.
11. Do not put any objects into openings or near brushes.
12. Do not use the machine with any blocked opening; keep free of dust, lint, hair, or anything that may reduce brush action.
13. Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
14. Do not run the machine over the cord and keep it away from heated surfaces.

15. Always disconnect the cord from the electrical outlet before servicing the cleaner or when not in use.
16. Unplug the machine when not in use after all controls have been turned off.
17. Use only the carpet and hard floor cleaning machine for its intended uses described in the instructions. Use only attachments recommended by Dapper, others may cause hazards. Always wash hands after handling chemicals or cleaning materials.
18. Do not use with a damaged cord or plug. If the machine has been dropped, damaged, left outdoors, or dropped into water, take it to a Dapper service center or authorized Dapper warranty service dealer.
19. To unplug, grab the plug, not the cord, and disconnect. Never handle the plug with wet hands.

Follow these instructions to reduce the risk of fire, electric shock, or injury.

Information

Please enter the COMPLETE model and serial numbers in the spaces provided.

Model Number: _____

Serial Number: _____

Hitch: Attach your sales receipt to the owner's manual/ instructions. Verification of date of purchase may be required for the warranty service of your Dapper product.

Be sure to fill out and return the product registration card included with your cleaning machine.
(see
back cover)

ASSEMBLY



1. How the Machine Arrives




2. Open box (always be careful not to cut yourself when removing any packaging)




3. Remove content



4. Remove protective wrapping on each piece

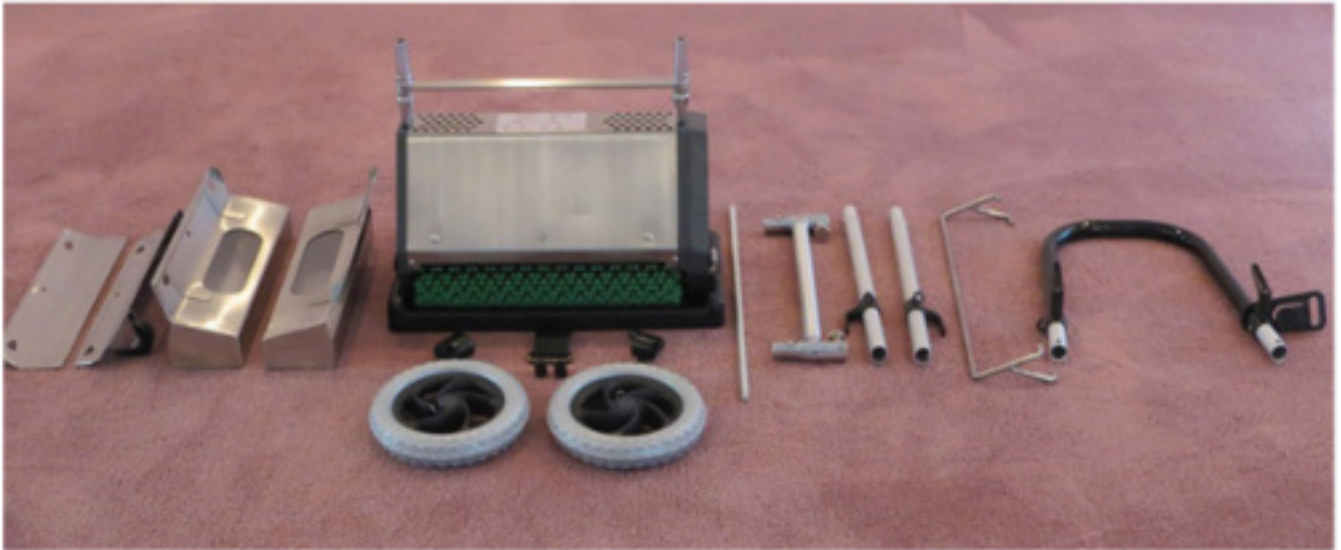

5. Machine Parts Set

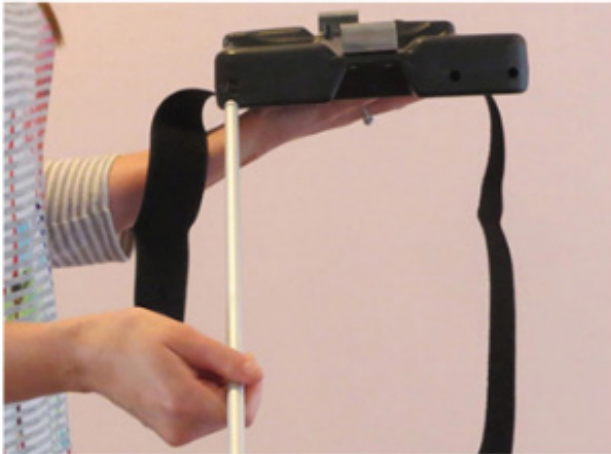


6. Assemble the Transport Trolley: first, insert the axle into a single hole.


7. Attach wheels to the axle, push in the clip to lock the wheels, and ensure they are securely locked.





8. Insert front Bar on from of Transport Trolley

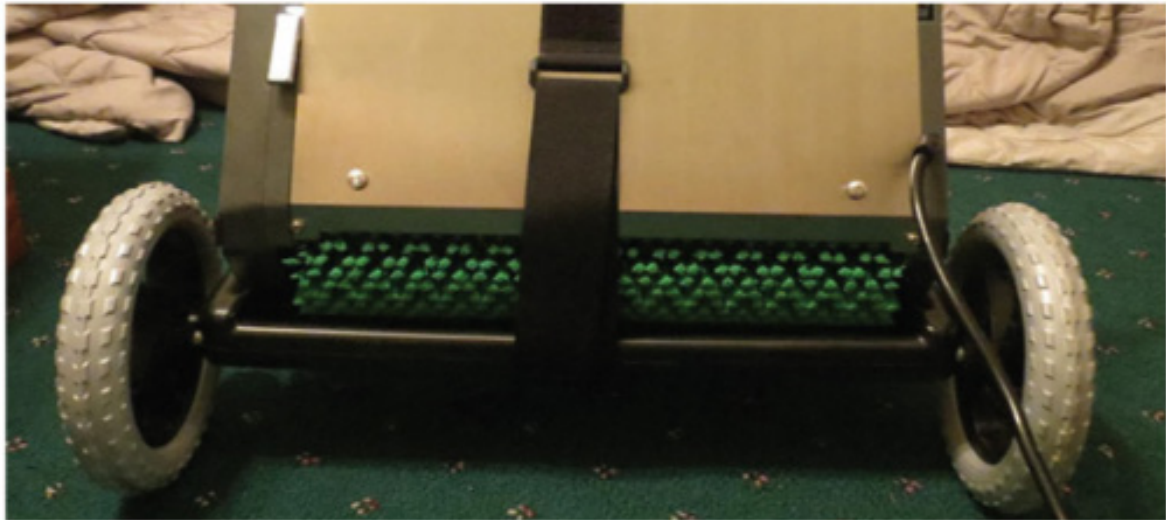

9. Put Machine on Transport Trolley

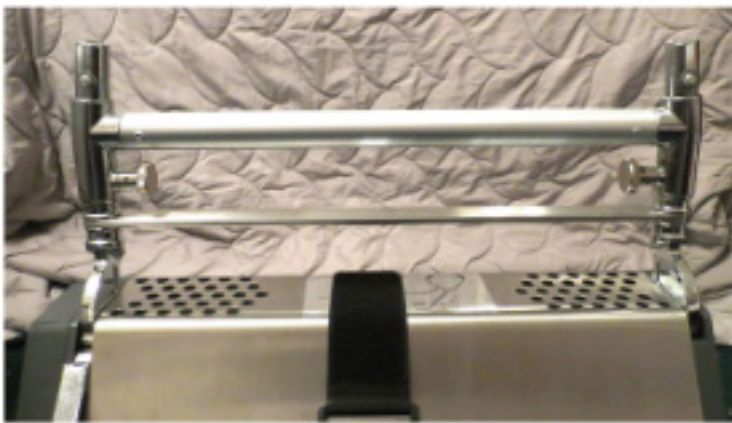

10. Attach Connecting Bar on Top of Machine – Snap Buttons facing back

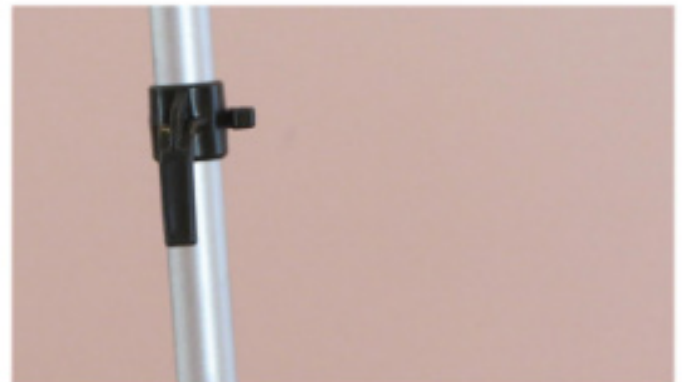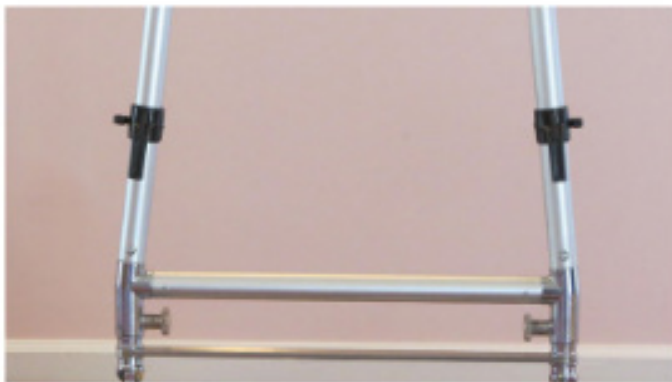

11. Attach each side of Handle Bars – Push in Snap Buttons to attach – Cord clips are outside



12. Attach Top Handle Bar – Push in Snap Buttons to attach



13. Complete Machine


Attaching




14. Attaching Dust Cover – Pushover Slots and Push Right to Clicked Button



15. Removing Dust Cover – Push Button & Slide Left

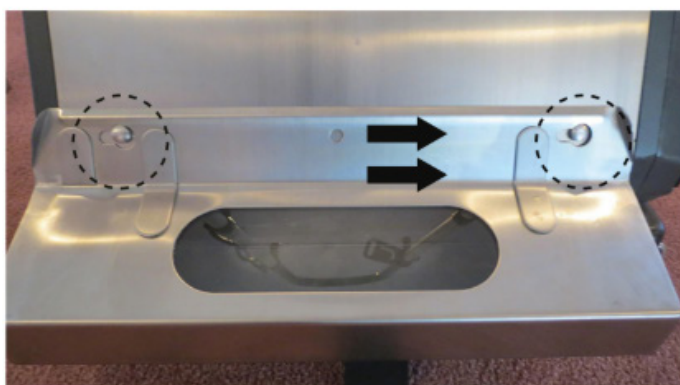


16. Attaching Receptacles - Pushover Slots and Push Right to Clicked Button

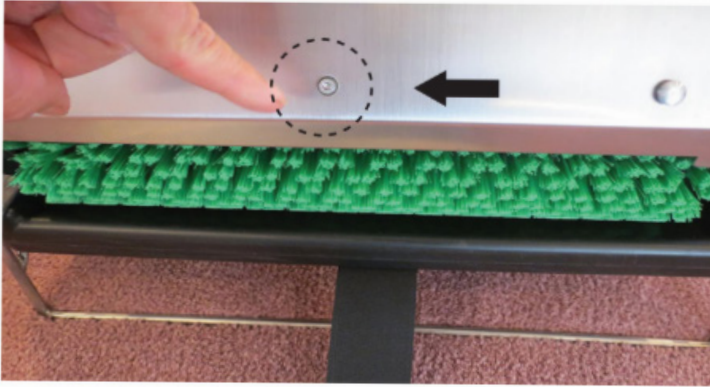

17. Removing Receptacles – Push Button and slide Left.



18. Push End of Bar and Slide Out

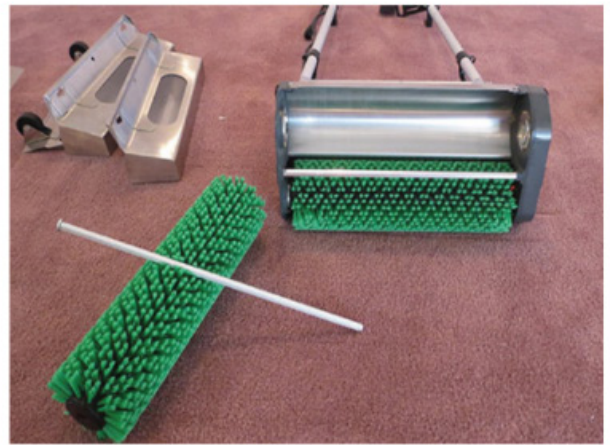

19. Align Bar & Brush and Push until it slides all the Through – DO NOT FORCE



DO NOT put the brush axles in backwards as this will damage the flange and gears.



20. Mount the handle on the bolt and connect both parts together.



Starting the machine



Push down the start lever on lower left side with your left foot. The motor will automatically start when the handle is pulled back. Place the electric cable in the clip provided on the handle. This will help to protect the cable from the rotating brushes.



Motor Safety Switch

The safety switch automatically cuts off the electricity if the motor overloads. After approx. 30 seconds press the button inwards and continue to work.



WARRANTY

LIMITED WARRANTY:

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper product is free from manufacturing defects in material or workmanship for three years from the date of purchase.

Should you discover any such defect within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product without charge, or to cover the cost of replacement parts and repair labor needed to correct defects present at the time of purchase or resulting from regular usage, when the appliance has been installed, operated, and maintained as per the instructions provided.

At its sole discretion, Dapper Supply, Inc. may decide to replace the product. In such an event, your replacement appliance will carry the warranty for the remaining term of the original unit's warranty period.

This warranty is valid exclusively to the original purchaser of the product and only applicable within the United States. The warranty commences from the date of original consumer purchase. Proof of the original purchase date will be required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy will be product repair, as outlined above. All services must be provided by a Dapper-designated service company.

To claim warranty or request repair service:

Email support@dapper.com. Please include your name, address, phone number, warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper.com and use the contact us page. A Dapper customer service representative will promptly arrange service for your appliance.

We thank you for choosing Dapper.

WARRANTY EXCLUSIONS:

This limited warranty will not cover:

1. Failure of the product to perform during power failures or interruptions, or due to inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accidents, alterations, misuse, abuse, improper installation, repair, or maintenance. This includes using any external device that alters or converts the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs by unauthorized centers, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance not aligned with the user's manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances shall be the responsibility of the consumer.

DAPPER