 


DAPPER

User Manual

Steam Carpet Extractor

Model: DP-CCE1220

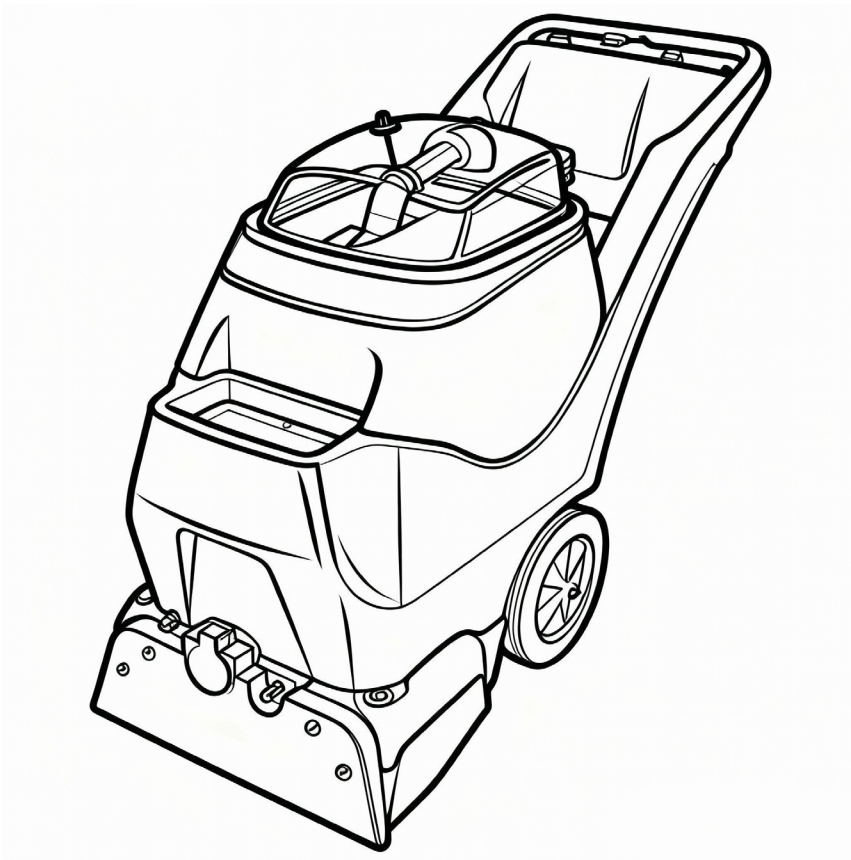

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

|Contents

INSTRUCTIONS	4
SAFETY	5
OPERATION INSTRUCTIONS	6
TECHNICAL DATA	7
PARTS IDENTIFICATION	7
WARRANTY	8

INSTRUCTIONS

This is the latest DP-CCE1220 4-in-1 Steam Carpet Extractor, designed to integrate four essential cleaning functions:

- Cold water spraying
- Steam cleaning
- Brush agitation
- Powerful vacuum extraction

Key Features

- Equipped with an Ametek double-stage motor that provides strong suction with up to 85% wastewater recovery.
- A high-pressure water pump delivers detergent deep into carpet fibers to dissolve stubborn stains.
- High-speed detachable roller brush efficiently loosens and removes dirt.
- Advanced steam system allows instant switching between steam drying and cold-water deep cleaning.

SAFETY

Read this manual carefully before operation.

Verify that the power supply voltage matches the machine rating label.

Add the correct amount of defoamer to the recovery tank.

When the recovery tank is full, turn off the machine, drain wastewater, and clean all tanks.

Clean the roller brush regularly to prevent debris entanglement.

If the steam indicator light turns off, shut down immediately, add clean water, and allow 15 minutes to cool.

Do not touch the steam nozzle during operation due to high temperatures.

Do not use extension cords. Improper power supply may cause electric shock.

OPERATION INSTRUCTIONS

Pre-Cleaning

Thoroughly vacuum the carpet before beginning the extraction cleaning process.
Prepare Cleaning Solution

Use a low-foam carpet detergent.
Dilute detergent with clean water at a ratio of 1:20 to 1:40, depending on the level of carpet soiling.
Pour the solution into the solution tank.
Add an appropriate amount of defoamer to the recovery tank to protect the vacuum motor.

Machine Setup

Position the machine at the starting point of the dirty carpet area.
Power on the machine.
Activate the vacuum, roller brush, spray, and steam motors using their individual switches as required.
To spray cold water manually, press and hold the [EXT] momentary button while pulling the machine backward.

Cleaning Operation

As detergent is sprayed onto the carpet, pull the machine backward slowly.
The dirty water will be extracted back into the recovery tank.
If necessary, repeat the process using either spray or no-spray cleaning modes.

Routine Maintenance Cleaning

For lightly soiled carpets, cleaning can be completed in one step.
Turn on the following switches simultaneously:
Water suction
Roller brush
Steam

Deep Cleaning for Heavily Soiled Carpets

Step 1: Turn on water suction, roller brush, and cold water spray simultaneously for washing.
Step 2: Turn off the cold water spray and turn on steam for drying.

This process provides wash first, then dry functionality.

Recovery Tank



When the recovery tank is full:
Turn off the power
Drain the wastewater completely before continuing use

TECHNICAL DATA

Specification	Details
Model	DP-CCE1220
Voltage	110V / 60Hz
Solution Tank	40 L (10.6 gal)
Recovery Tank	30 L (7.9 gal)
Vacuum Motor	1000 W
Brush Motor	150 W
Spray Motor	135 W
Steam Motor	1200 W
Steam Pump	25 W
Suction Power	27 kPa
Cleaning Width	47 cm (18.5 in)
Power Cable Length	15 m (49 ft)
Noise Level	≤ 75 dB(A)

PARTS IDENTIFICATION

1. Power Switch (Red)
2. Spot Spray Button (EXT)
3. Transparent Cover
4. Recovery Tank
5. Solution Tank
6. 10 in. Wheels
7. Wheel Axle
8. Mounting Plate
9. Roller Brush
10. External Flexible Hose Port
11. Water Scraper / Squeegee
12. Recovery Hose
13. Drain Hose

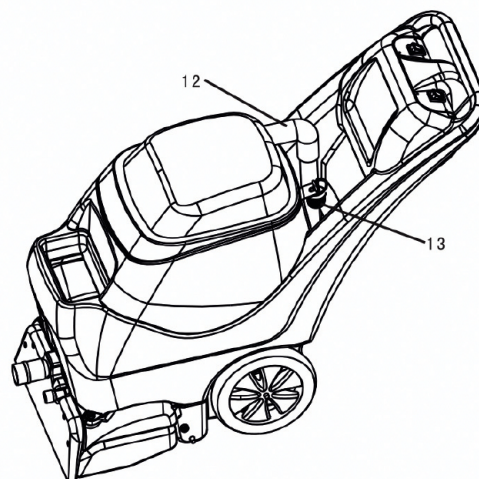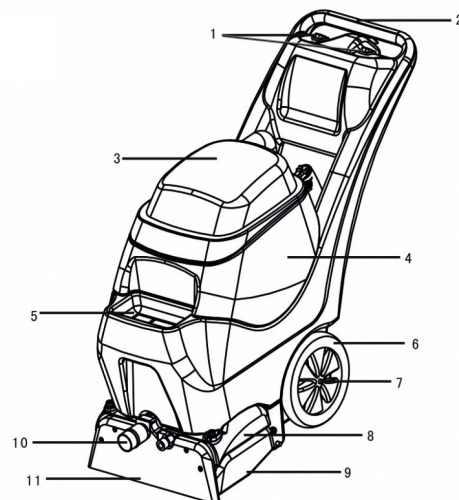

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER