 


DAPPER

User Manual

2.5 Gal Backpack Vacuum Cleaner

Model: DP-CVC1143

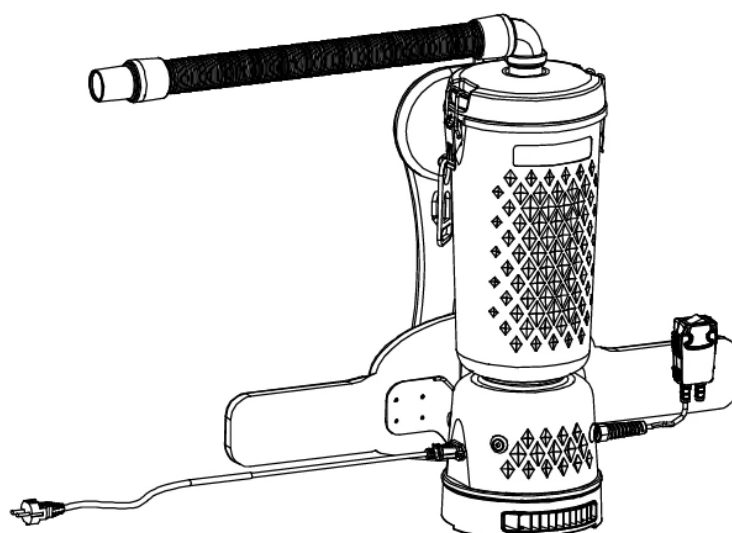

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

|Contents

Safety..... 4

Parts List 6

Assembly 7

Operation 9

Warranty..... 10

Safety


Important Safety Instructions

Basic safety instructions should always be followed when using this vacuum cleaner, including the following:

1. Do not leave the vacuum cleaner unattended when the power is on. Unplug the machine when not in use or before removing the filter.
2. Do not immerse the vacuum cleaner in water or other liquids.
3. Do not use the vacuum cleaner to pick up cement ash, wood chips, sand, or similar materials.
4. Follow all instructions. Use only accessories recommended by the manufacturer.
5. Do not use the power cord or plug if it is damaged. Do not use the machine if it has been dropped, damaged, left outdoors, or dropped into water. Contact the manufacturer or an authorized service center for inspection, repair, or adjustment.
6. Do not pull the power cord to drag or lift the machine. Do not allow the cord to be pinched by doors. Keep the cord away from sharp edges or corners. Do not step on the power cord or allow it to touch hot surfaces.
7. Do not unplug the machine by pulling the cord. To unplug, grasp the plug—not the cord.
8. Do not touch the plug or operate the machine with wet hands.
9. Do not use the vacuum cleaner to pick up large objects or objects that may damage the machine.
10. Keep hair, loose clothing, fingers, feet, and other body parts away from the vacuum inlet, rolling brushes, and other moving parts. Never vacuum while barefoot or wearing shoes with open or damaged soles.
11. Do not pick up hot coals, cigarette ends, matches, or anything that is hot, smoking, or burning.
12. Do not pick up hard or sharp objects such as glass, nails, screws, or coins.
13. Do not use the vacuum cleaner without the filter properly installed. Use only filters and accessories supplied by the manufacturer or authorized suppliers. Use of other brands may void the warranty.
14. Turn off all switches before plugging in or unplugging the vacuum cleaner.
15. Use extra caution when vacuuming on stairs.
16. Do not vacuum flammable or combustible materials (such as lighter fluid, gasoline, or kerosene), or use the vacuum in areas where explosive liquids or gases are present.
17. Do not use the vacuum cleaner in enclosed spaces containing vapors from oil-based paints, paint thinners, insect repellents, combustible dust, or other explosive or toxic gases.
18. Use indoors only and on dry surfaces.

19. Do not insert any objects into the vacuum inlet. Do not use the vacuum cleaner if the inlet is blocked. Remove dust, cotton fibers, hair, and other debris that may restrict airflow.
20. Store the machine indoors in a cool, dry place.
21. Keep the work area well lit.
22. Keep hose openings, handles, and other openings away from your face and body.
23. This machine is not intended for use by children, persons with disabilities, or individuals lacking the necessary knowledge or experience unless they are supervised or instructed by a responsible person to ensure safe operation.

Parts List

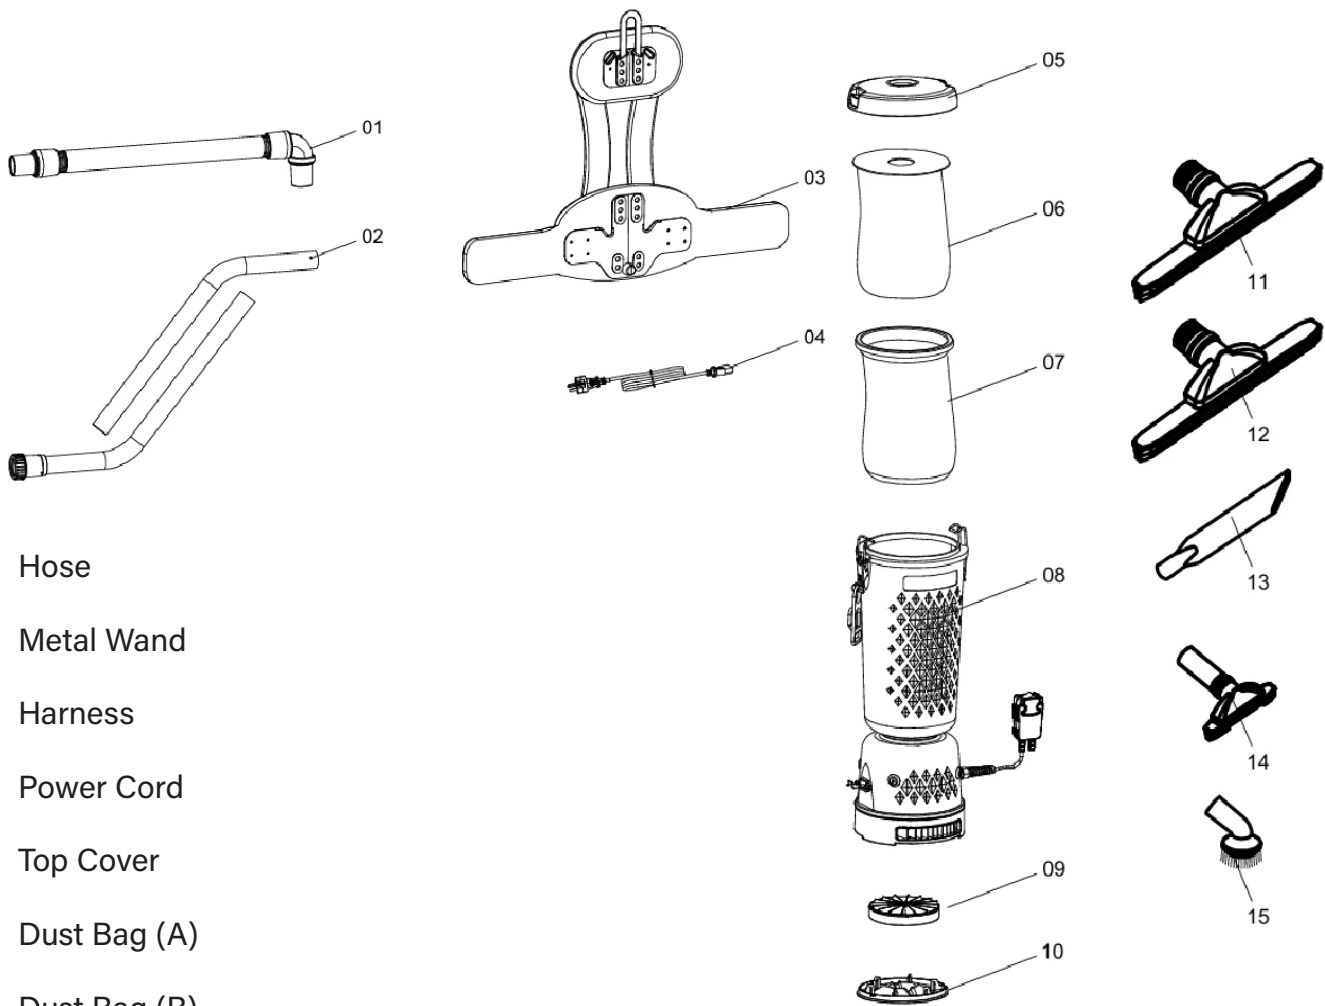


1. Hose
2. Metal Wand
3. Harness
4. Power Cord
5. Top Cover
6. Dust Bag (A)
7. Dust Bag (B)
8. Main Body
9. HEPA Filter
10. Bottom Cover
11. Bristle Brush
12. Brush
13. Long Crevice Tool
14. Small Brush
15. Round Brush

Assembly

WARNING: To reduce the risk of electric shock, always disconnect the power supply before removing dust bags, cloth bags, changing filters, or inspecting or repairing the machine.

Notice: Disconnect the power supply before assembling or removing accessories.

Dust Bag Assembly

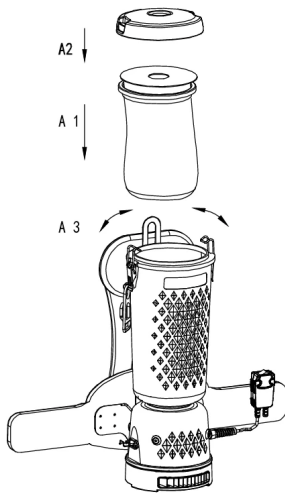


Important: Do not operate the vacuum cleaner without the filter or dust bag installed.

1. Disconnect the power supply.
2. Open the clip (A3). Insert the dust bag (A1), place the cover (A2) on top, and secure it with the clip.

Warning: Do not overfill the dust bag. When the dust bag is full, replace it promptly. When replacing the dust bag, clean the dust bag and filter sponge by gently shaking out debris.

3. The filter sponge is located at the bottom of the machine body. Open the lock to access it (A4). Remove and clean the filter sponge after operation.

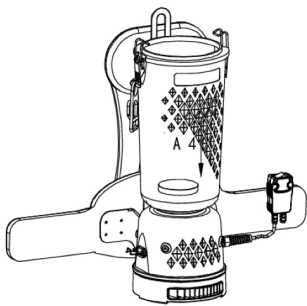


Cleaning and Replacing the Dust Bag

Notice: When replacing the dust bag, shake it outdoors to remove dust and debris.

Accessory Assembly

After connecting the brush, stainless steel elbow, and hose, insert the other end of the hose into the connector located above the machine (D).

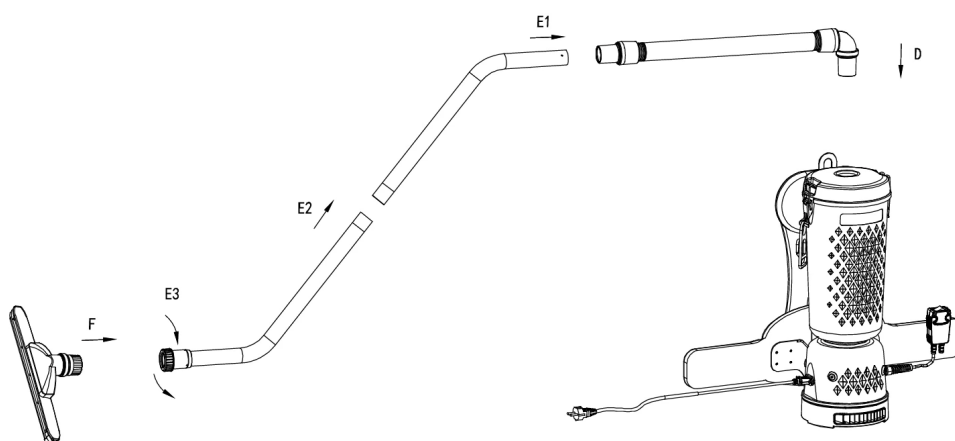

Notice: When connecting the brush to the stainless steel elbow, first rotate the joint of the stainless steel elbow, then tighten it after the brush is connected (E3).

Accessory Use

Round Brush

Used to clean furniture and upholstered seating surfaces.


Long Crevice Tool

Used to clean radiators, gaps, corners, edges, and mat seams.

Operation

How to Use the Machine


1. Connect the plug to the body socket (as shown in the illustration). The machine is equipped with a power-plug protection lock to prevent the plug from disconnecting due to pulling or dragging. Connect the other end of the plug to the power supply.

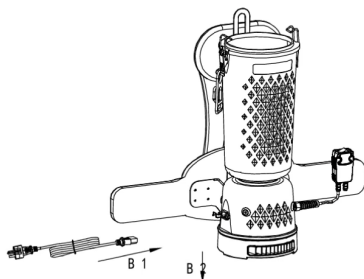

2. Connect the long floor brush (or large round brush, long flat suction tool, or dust brush), stainless steel elbow, and hose.
3. Properly adjust and secure the shoulder straps and waist belt.

Warning: If the waist belt and shoulder straps are not properly secured, the machine may fall off and cause injury.

4. Press the power switch on the machine body to turn the unit on.

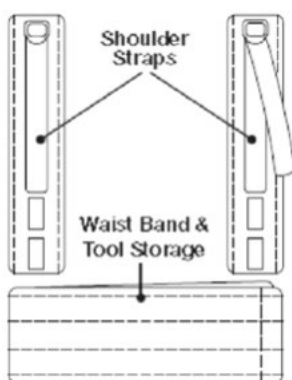

Clean HEPA Filter

Important: This HEPA filter captures most fine dust particles and allergens. It filters 99.97% of particles as small as 0.3 microns, which is much smaller than the diameter of a human hair. Due to this high level of filtration, the HEPA filter will gradually become clogged with fine particles that may not be visible. To ensure proper performance, clean the HEPA filter after each use as described below.

1. Open the air outlet bracket and remove the HEPA filter.
2. Rinse the inlet-side HEPA filter under running water to remove any residue.
3. Rinse the HEPA filter under running water at least once per month, or whenever suction performance decreases.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER