 


DAPPER

User Manual

Wall Mounted Wet Dry Vacuum

Model: DP-CVC1133

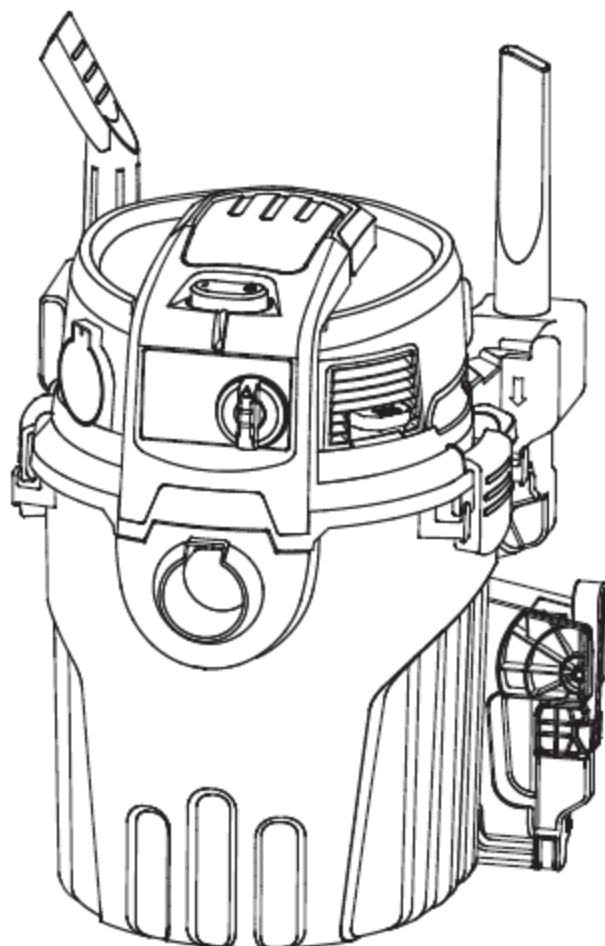


For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

|Contents

CIRCUIT DIAGRAM:	4
TECHNICAL SPECIFICATIONS:	4
PARTS IDENTIFICATION:	5
SAFETY:	6
ASSEMBLY:	7
OPERATION:	8
ADDITIONAL SAFETY NOTES:	9
PROPER DISPOSAL:	9
WARRANTY	10



Circuit Diagram:

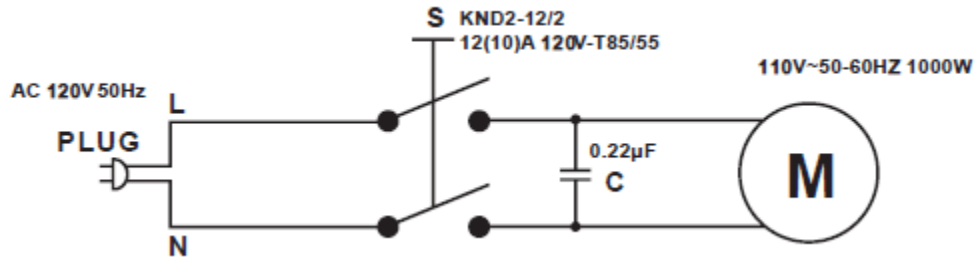

Technical Specifications:

- Voltage: 120V
- AC Frequency: 50/60Hz
- Input Power: 1000W/1200W
- Maximum Suction: 21 kPa

  Parts Identification:

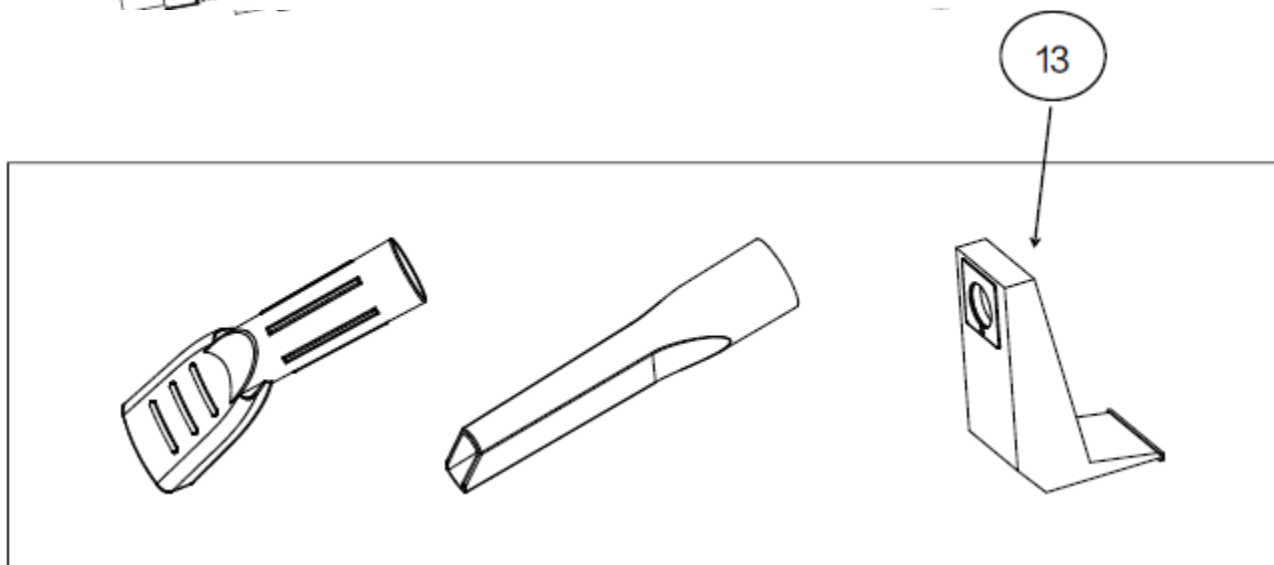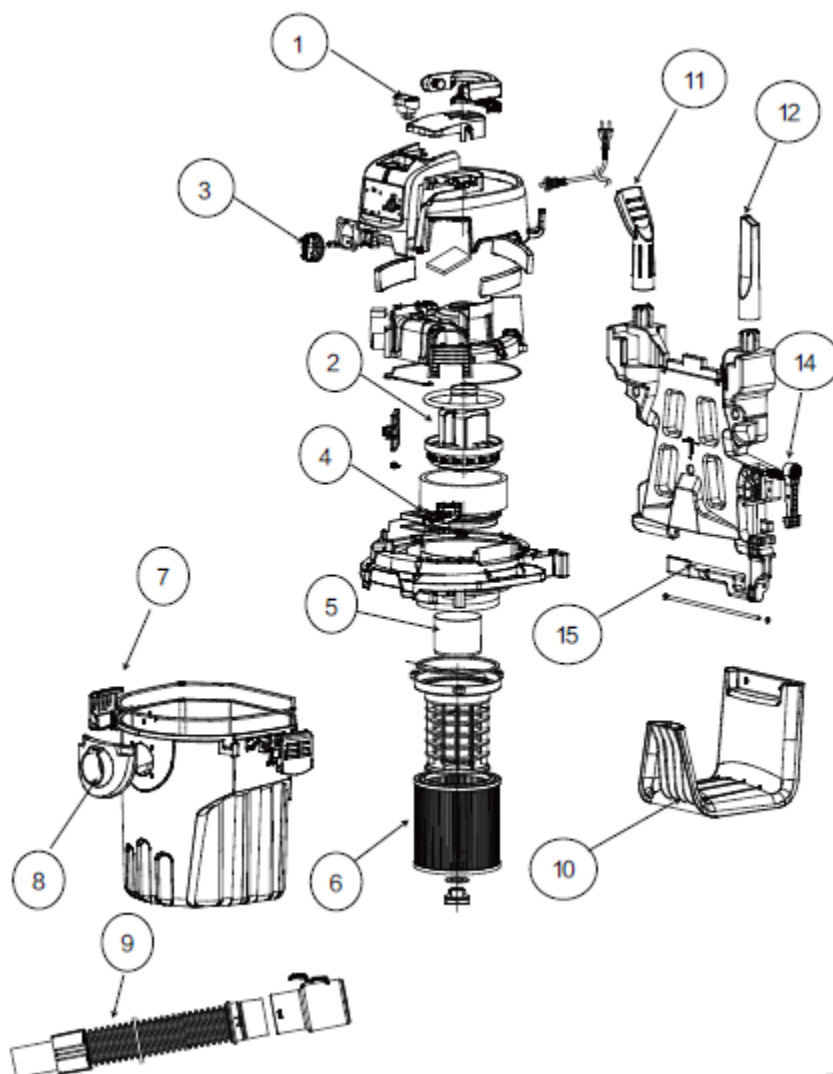


|Safety:

- Keep the vacuum away from flammable or explosive gases, liquids, or vapors.
- Do not block the ventilation openings. Restricted airflow can cause overheating and damage.
- Always unplug the vacuum before connecting or disconnecting any attachments.
- Never touch the plug or power cord with wet hands.
- Do not vacuum burning materials such as cigarettes, hot ashes, or kerosene.
- Avoid vacuuming sharp or hard objects that may damage internal parts.
- Do not expose the cleaner to direct sunlight or store it near heat sources.
- Never immerse the vacuum in water or other liquids. Clean the exterior only with a damp cloth.
- Avoid bending or stretching the hose excessively.
- Static electricity may occur during operation. This is normal and not a malfunction.

Assembly:


Connecting the Suction Tube

- Insert the tube into the machine's inlet and turn clockwise until it locks.
- To remove, twist counterclockwise and pull out.

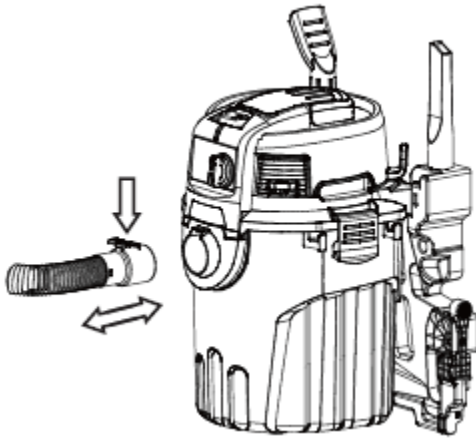


Connecting the Handle and Extension Tube

- Insert the handle into one end of the extension tube and turn clockwise until snug.
- To detach, twist counterclockwise and pull apart.

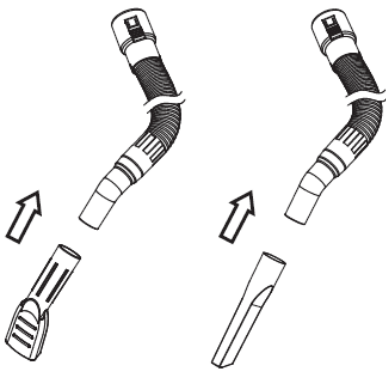


Joining Extension Tubes

- Connect one end of the extension tube to another and twist clockwise to lock.
- To separate, twist counterclockwise and pull apart.

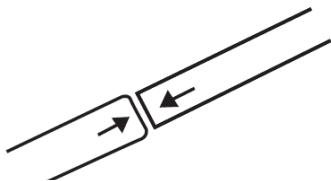


Operation:

- Plug the power cord into a 120V grounded outlet.
- Turn on the main switch to begin operation.

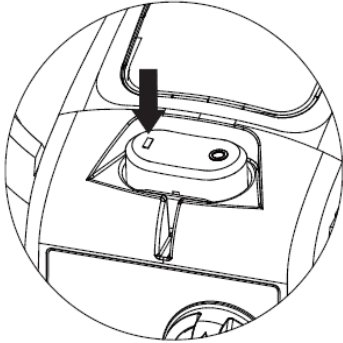

- Use the appropriate accessory for your cleaning task:
- Flat nozzle – corners, edges, and tight spaces.

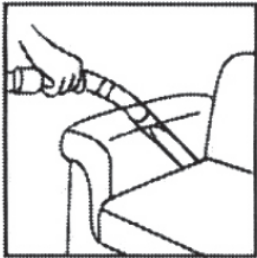

- Floor brush – large surfaces.
- Wet suction – to pick up spilled water (ensure buoy and filter are installed).
- Turn off the power and unplug the cord when finished.

Additional Safety Notes:

- Use only on 110–120V AC, 50/60Hz power supply.
- If the power cord is damaged, it must be replaced by a qualified technician.
- Keep out of reach of children and untrained persons.
- Always operate the vacuum in an upright position to prevent liquid leakage.

Proper Disposal:

- Do not dispose of this vacuum cleaner in household trash. To protect the environment and ensure safe recycling, take the unit to a certified electronic waste collection facility or contact your local waste management authority for proper disposal instructions. Do not incinerate or dispose of the vacuum in unsorted municipal waste.


Float Valve (Buoy) and Maintenance:

Float Valve Function:

- The float valve automatically stops suction when the dust container is full of water. If you hear unusual noise or reduced suction, turn off the power, empty the container, and reinstall it properly. The float valve also activates if the vacuum tips over. Turn off the unit, set it upright, and restart.

Maintenance:

- Always unplug before cleaning.
- Empty and clean the container after each use or when suction decreases.
- To clean the filter bag, wash it in warm water with mild detergent if needed. Allow it to dry completely before reinstalling.
- Ensure the lid is closed securely before resuming operation.

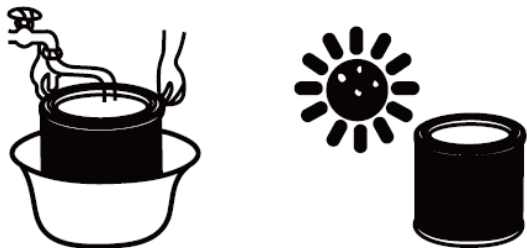

|Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period.

This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER