 


WET & DRY VACUUM CLEANER

Model No:- DP-CVC1121, DP-CVC1122

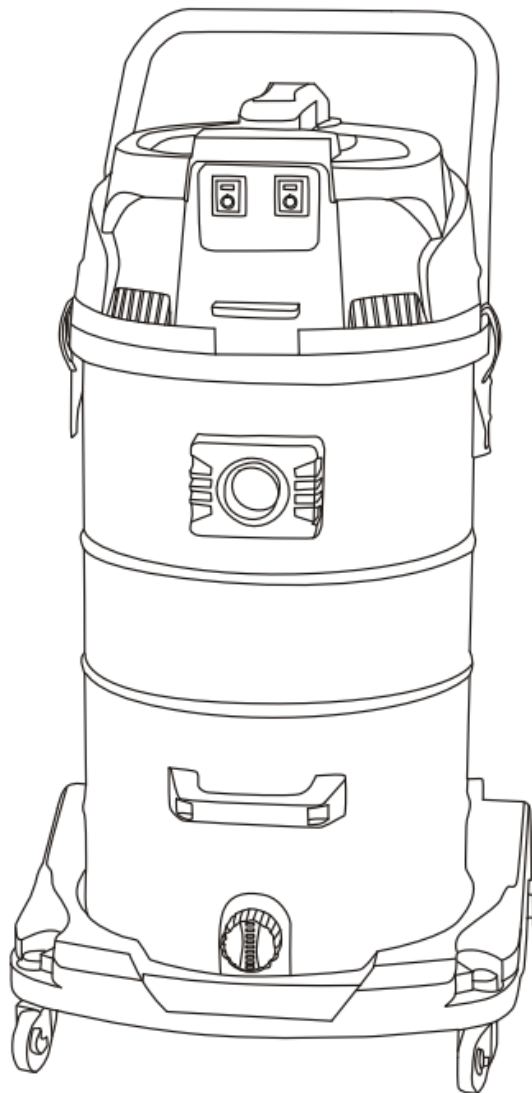 


Please read the instruction manual carefully before use

For any service-related issues, please contact us:

Phone Number: 718-301-8243


Email address: support@dapper-supply.com



CONTENTS

Parts Lists	4
Characteristic	5
Specification	5
Safety	6
Assembly	9
Operation	10
Maintenance	13

PARTS LIST

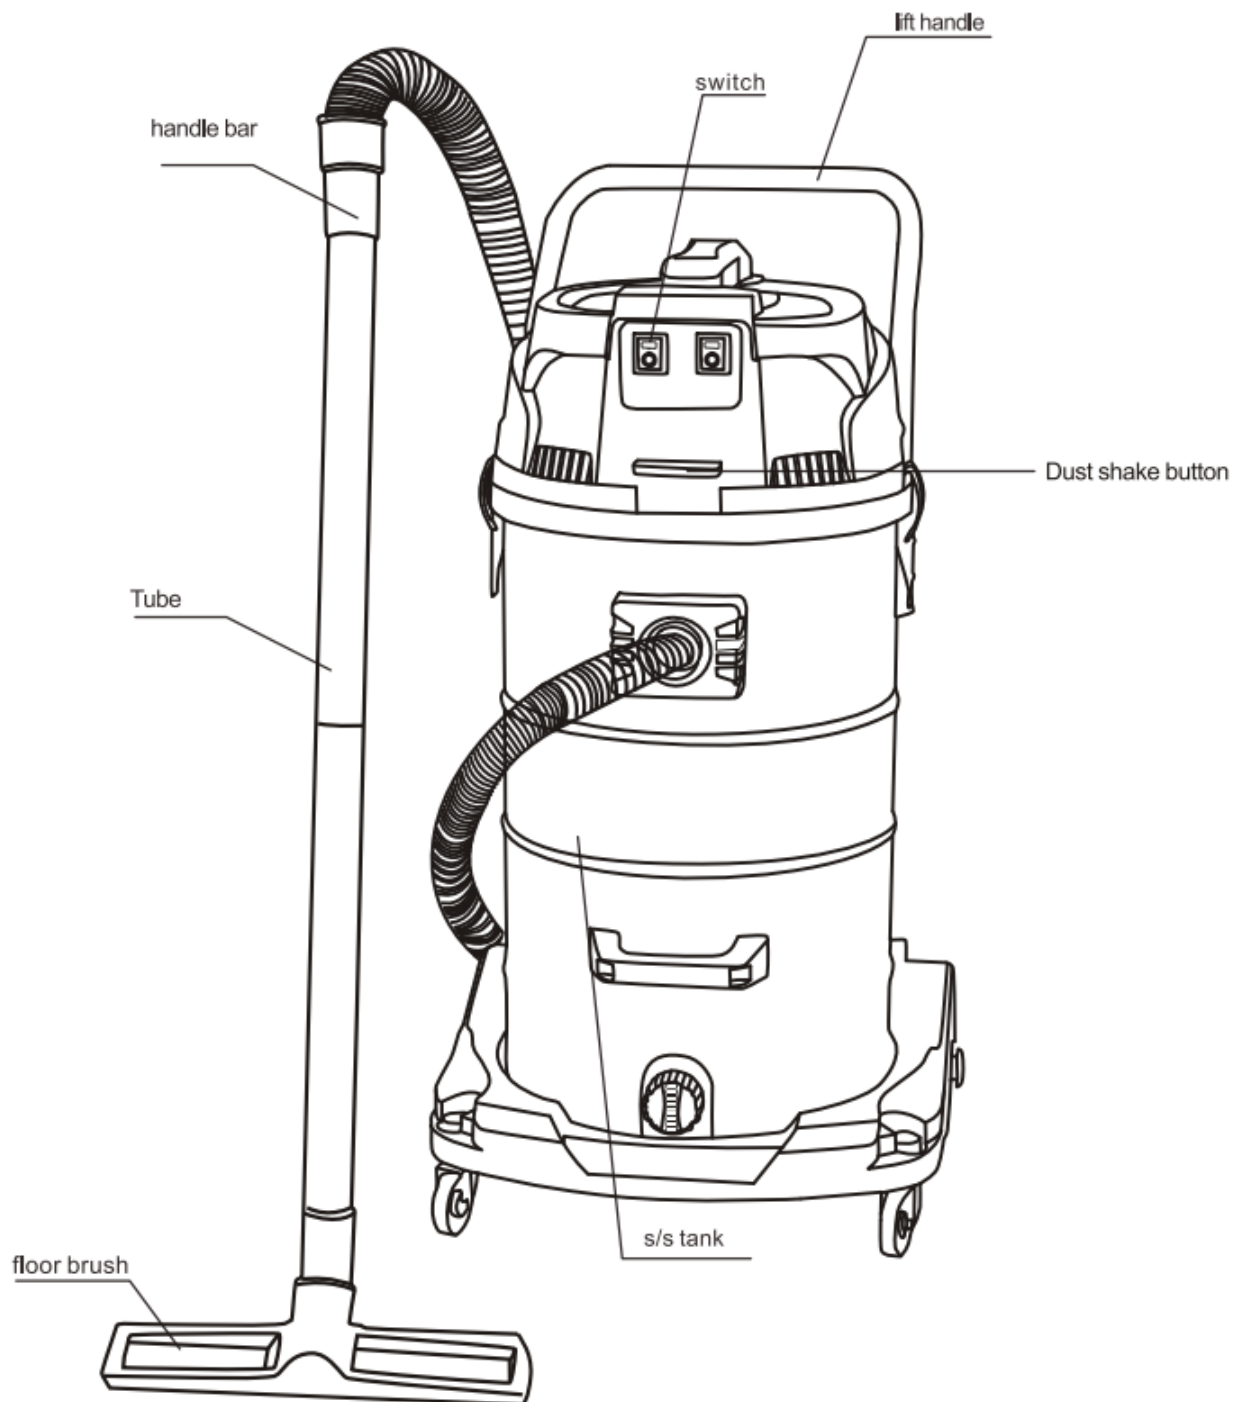


How to Use the Dust Shake:

1. Turn on the power.
2. Block the suction inlet.
3. Press and hold the dust shake button for 1-2 seconds, then release it. Repeat this process 5-10 times.

Include

Standard Accessories

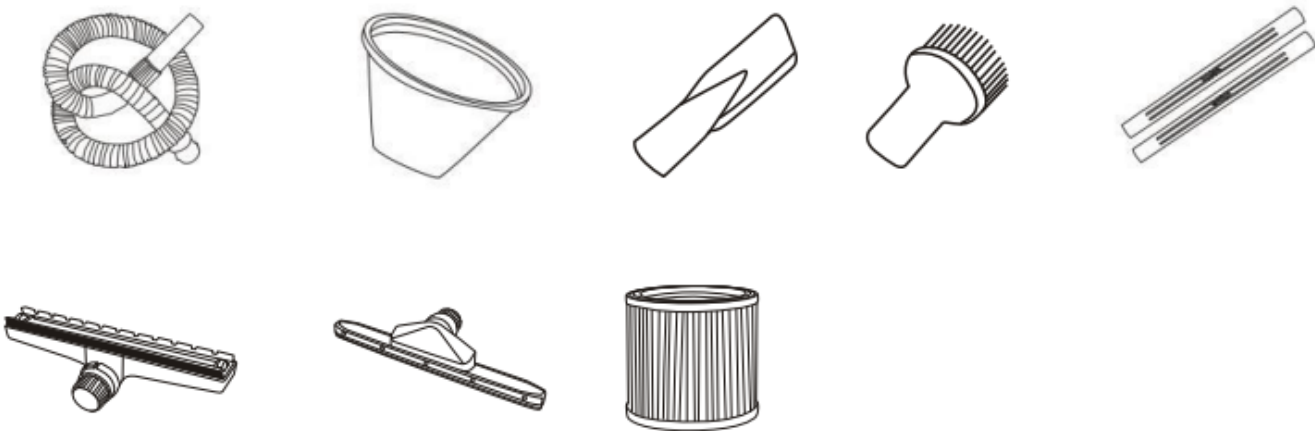

01.50 inches × 98.43 inches.	1pc	Dust Bag	1pc
Nozzle	1pc	Round Brush	1pc
Metal Pipe	2pcs	Floor Brush	1pc
Water Brush	1pc	Hepa Filter	1pc

Specifications

Product name:	Vacuum Cleaner	Model No.:	DP-CVC1121 DP-CVC1122
Rate Voltage:	110V/60HZ	Rate Power:	3600-6000W
Max Suction:	>20KPA	Tank Capacity:	80/100L
Noise:	76-80dB(A)	Weight:	48.50/61.73 LBS
Production Standard:			

SAFETY

WARNING

Regular clean the plug by
Dry cloth



- may cause electric shock and fire

Do NOT use if the electric cable
or plug or socket is broken



- may cause electric shock and fire



Plug must be totally insert before use

- may cause electric shock and fire

CAUTION



When you need to pull out
the plug from socket, please
hold on the plug base. do not
drag the cable directly.



- may cause electric shock and fire



Do Not block the air outlet.



- may cause electric shock and fire



Do Not over set the clean-
er, avoid the water in and
cause the motor damage.



- may cause electric shock and fire



Do Not block the suction
port for long time.



- may cause electric shock and fire



Do Not storage or use the
cleaner beside any inflam-
mable materials (like gaso-
line, etc)



- may cause electric shock and fire



Pull out the plug from
socket when after use
every time.



- may cause electric shock and fire



Do Not storage or use the
cleaner beside any fire.



- may cause electric shock and fire



Keep anything (include your hands and body) away
from the blower to avoid body hurt and machine
damage.

Warning

WARNING! IMPORTANT – Read all safety warnings and instructions BEFORE USE.

Failure to comply may cause electric shock, fire, or serious injury.

1. Before using, ensure the operator is properly trained in using this cleaner.
2. Use the socket outlet only for purposes specified in the instructions.
3. If liquid leaks from the cleaner, turn it off immediately.
4. Regularly clean and inspect the water level limiter for damage.
5. Do not operate the cleaner without a filter; replace damaged filters immediately.
6. EXTENSION CORD USE: Choose a sufficiently thick but not excessively long cord to avoid performance loss. For outdoor use, use an outdoor-rated extension cord.
7. VOLTAGE WARNING: Ensure the power source matches the cleaner's nameplate voltage. Overvoltage may cause SERIOUS INJURY and damage. If unsure, DO NOT PLUG IN. Undervoltage harms the motor.
8. PREVENT ACCIDENTAL STARTING: Ensure the switch is OFF before plugging in
9. Do not vacuum flammable materials, fireworks, lit cigarettes, hot ashes, metal chips, or sharp objects like razors, needles, or broken glass.
10. NEVER USE NEAR GASOLINE, PAINT, ADHESIVES, OR EXPLOSIVES. Sparks from the switch and motor may ignite them, causing explosions.
11. Never vacuum toxic, carcinogenic, or hazardous substances like asbestos, arsenic, beryllium, lead, or pesticides.
12. Do not use outdoors in rainy conditions.
13. Keep away from heat sources like stoves.
14. AVOID ELECTRIC SHOCK: Prevent contact with grounded surfaces like pipes, radiators, ovens, or refrigerators.
15. Do not block cooling vents, as this may cause the motor to overheat and burn out.
16. Maintain proper footing and balance at all times.
17. DO NOT ABUSE CORD. Never carry the cleaner by the cord or yank it from the receptacle. Keep it away from heat, oil, and sharp edges.
18. Do not fold, pull, or step on the hose.
19. Stop immediately if performance declines or any abnormality occurs.
20. DISCONNECT THE CLEANER when not in use, during servicing, and when changing accessories.
21. Clean and service the cleaner after each use to maintain top performance.
22. MAINTAIN WITH CARE. Keep the cleaner clean for safety and efficiency. Follow accessory replacement guidelines. Inspect cords regularly and repair or replace if damaged. Keep handles dry and free from oil or grease.

23. CHECK DAMAGED PARTS. Ensure damaged parts are inspected and repaired by an authorized center. Misaligned or broken components may affect functionality. Do not use the cleaner if the switch malfunctions.
24. USE IDENTICAL REPLACEMENT PARTS when servicing.
25. STORE CLEANER PROPERLY. Keep indoors when not in use.
26. Handle with care; rough use may damage even the sturdiest cleaner.
27. Do not clean the interior or exterior with benzine, thinner, or chemicals, as they may cause cracks or discoloration.
28. Never use the cleaner in enclosed areas where flammable, explosive, or toxic vapors or dust are present.
29. Do not leave the cord on the floor after use—it can be a tripping hazard or damage the cleaner.
30. Do not operate while under the influence of drugs or alcohol.
31. WEAR SAFETY GEAR. Use goggles or glasses with side shields.
32. Wear a dust mask in dusty conditions.
33. This cleaner is not for unsupervised use by young children or infirm individuals.
34. SUPERVISE CHILDREN to ensure they do not play with the cleaner.
35. Never handle the plug, cord, or cleaner with wet hands.
36. Use extreme caution when cleaning on stairs.


ASSEMBLY

CAUTION: Always ensure the cleaner is switched off and unplugged before performing any maintenance or service.




1. Insert the hose into the suction hole and secure it by rotating clockwise.
2. Assemble the brush and tube as shown in the diagram.
3. After use, rotate the hose counterclockwise to unlock it, then pull it out.

OPERATION

1. Insert the plug into the socket correctly and turn the switch "ON" to start the vacuum cleaner.
2. Use the handle to lift and carry the cleaner with ease.

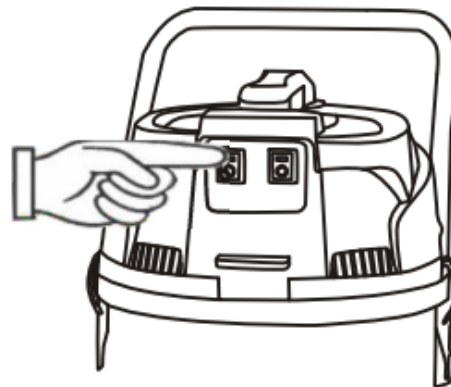

Brush can widely used on Carpet and Floor

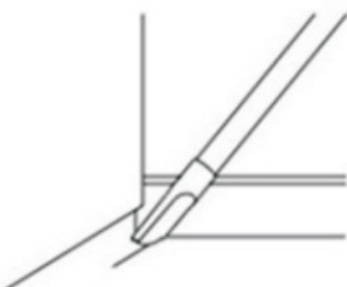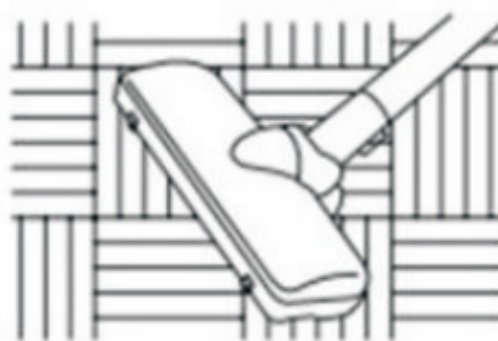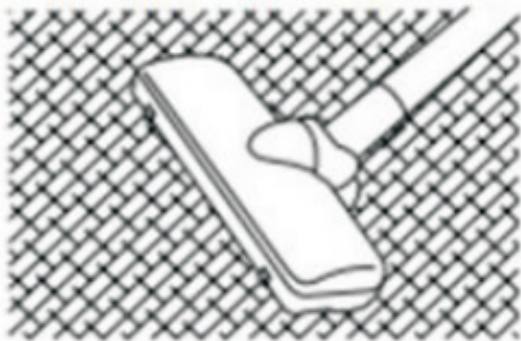

Nozzle can used on corners and gaps

Small brush can used on sofa, curtain, bed, etc




Dust Shake

If the extraction power is weak, clean the filter by following these steps:



Ensure the vacuum cleaner is powered on. Then, disconnect the hose from the vacuum cleaner and insert the block adapter.

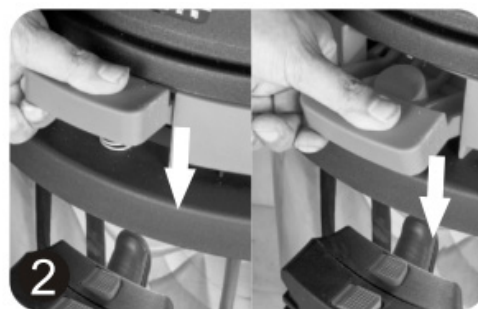


Firmly press the dust shaking button for 2 seconds, then release it for 5 seconds. Repeat this process 5 times.

MAINTENANCE

Clean and Replace Filter

Suction power will noticeably decrease when the tank is full. To maintain optimal performance, empty the trash promptly.

When the tank is full of water, the floater will activate, causing a distinct sound and blocking suction. Stop operation immediately and drain the water from the tank.

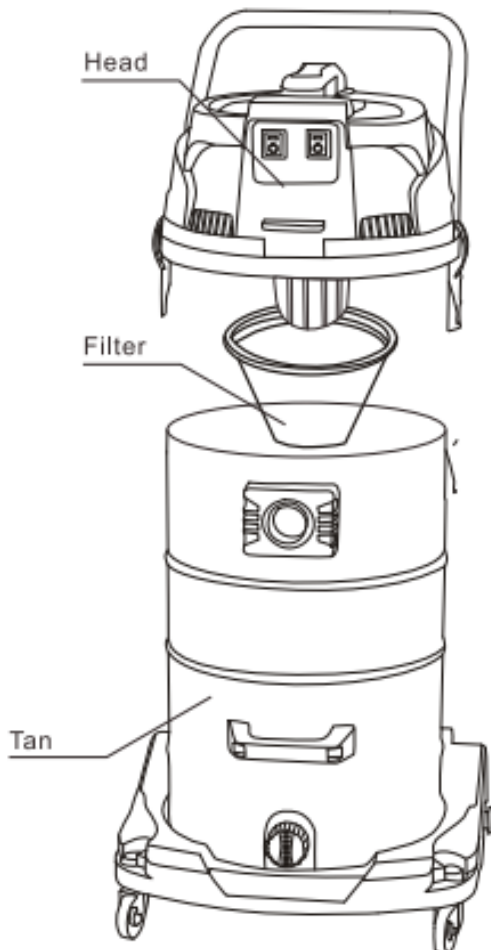


How to clean:

1. Release the two clips to unlock the machine head from the tank.
2. Carefully lift and remove the machine head.
3. Remove the filter and clean it.
4. Reassemble by following the steps in reverse order.
5. Replace the filter if damaged.

Remark: If the machine head does not fit correctly, check whether the filter is positioned properly.

Circuit Diagram

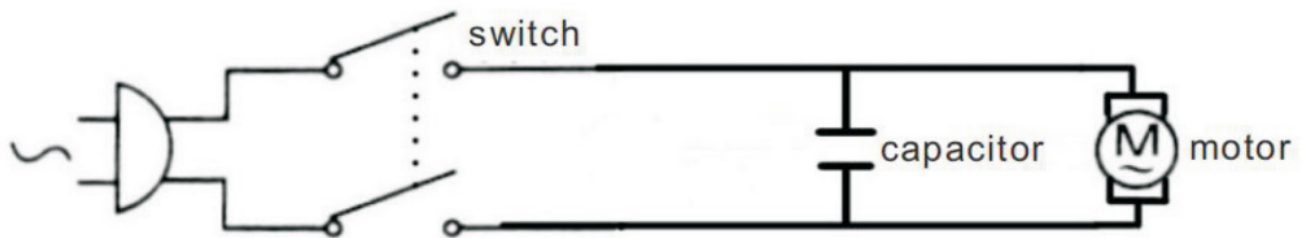

Circuit diagram

Clean and Maintenance

Dust Container Cleaning

When dust suction is complete or the container is full, suction power may decrease. In this case, turn off the power and empty the dust container.

1. Loosen the container and lift the cover.
2. Remove the filter bag and empty the dust inside the container.
3. Place the filter bag back in its original position, ensuring that the power switch and inlet opening are aligned.

Filter Bag Cleaning

If the filter bag becomes severely clogged, clean it thoroughly with warm water. If needed, use a mild, neutral detergent.

If you encounter any issues while using the cleaner, please refer to the table below to identify the possible cause.

WARNING: Before performing any repairs or cleaning, always turn OFF the power and unplug the machine.

Problem	Possible Cause	Solution
Vacuum Cleaner does not work	Not plug in	plug in correct position
	Switch not on 'ON' position	turn switch 'ON'
	No electric power from socket	check the electric situation
Suction power lose	motor is overheat, the protective facility works	let the motor cooling down for 2 hours and then use it again
	dust tank is full	clean the dust tank
	hose broken	replace the hose
	suction hole blocked	check all connection part
	filter not fixed well	re-fix the filter
	hose connectors not fixed well	reassembly the hose
Brush/nozzle difficult to move	strong suction power makes it hard move	adjust the angle between brush/nozzle and floor

DAPPER