 


DAPPER

User Manual

Dapper Commercial Portable Carpet & Upholstery Spot Extractor

Model: DP-UCE1230

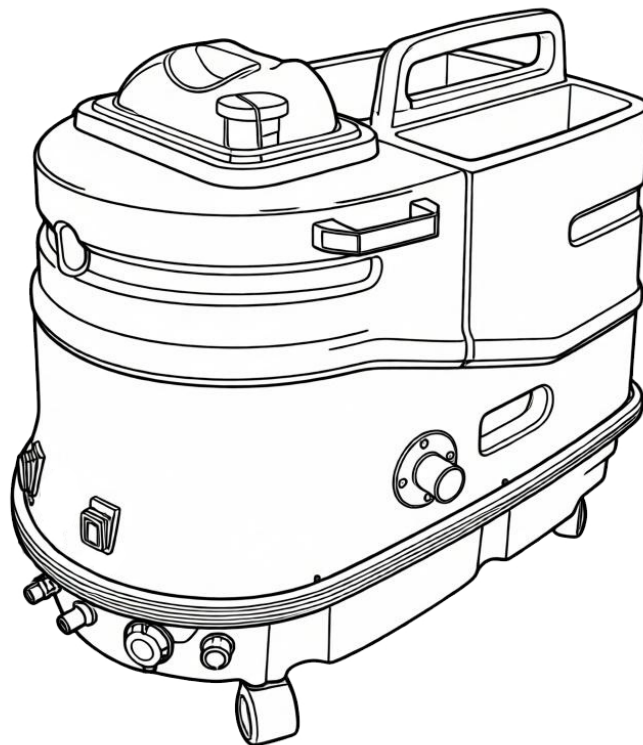

For any service-related issues,

Please contact us: Phone Number: 718-301-8243

Email address: support@dapper-supply.com

Contents

Introduction	4
Safety	5
Technical Specifications	6
Parts & Components	7
Operation	9
Maintenance	11
Warranty	12

Introduction

The Commercial Carpet & Upholstery Cleaning Machine is a professional-grade multi-function cleaner designed to solve tough cleaning and drying problems on leather and fabric sofas, curtains, seats, mattresses, carpets, staircases, car interiors, and all types of fiber surfaces.

Key Features

- 4 core cleaning functions: spraying, brushing, vacuuming, and drying
- Dual-grade 1,000W vacuum motor with wastewater recovery rate $\geq 85\%$ and noise level ≤ 75 dBA
- Open dual clean water tanks for easy refilling; accessories can be stored internally
- Efficient closed-loop process: foam brushing, spray extraction, filtration, wastewater recovery
- One-touch switch between vacuum and blow-drying for rapid drying of heavily soiled areas, preventing moisture return
- Suitable for hotels, cinemas, vehicles, offices, restaurants, spas, billiard rooms, and internet cafes — deep cleaning of sofas, mattresses, carpets, curtains, upholstered walls, and other high-use surfaces

Safety

WARNING: Read this manual completely before operating the machine. Improper use may result in damage or injury not covered under warranty.

Follow these safety principles at all times:

- **Pre-Use Preparation:** Read the manual thoroughly before operation to ensure correct usage.
- **Moving the Machine:** Never move the machine by pulling the suction hose or power cord during operation.
- **Wastewater Disposal:** When the recovery tank is full, empty the tank before resuming work.
- **Storage:** For long-term storage, place the machine in a dry, indoor environment.
- **Parts Maintenance:** Do not disassemble or replace parts without authorization. Any resulting malfunctions are not covered under warranty.
- **Steam Function:** This machine heats instantly when plugged in. To prevent dry firing, always ensure steam is being emitted during use. If steam stops, immediately turn off the steam switch, add sufficient water, wait 5 minutes for cooling, then restart.

IMPORTANT: Descaling is required every 10 uses or monthly — steam with a citric acid solution for 10 minutes to remove mineral buildup.


Technical Specifications

Voltage	110–125V / 60 Hz
Vacuum Motor	1,000W
Spray Motor	25W × 2
Steam Motor	1,400W
Steam Pump	25W
Air Pump	30W
Bubble Power	40W DC 24V
Chemical Tank Capacity	1.06 gal (4 L)
Solution Tank Capacity	2.11 gal (8 L)
Recovery Tank Capacity	2.64 gal (10 L)
Suction Hose Length	13.1 ft (4 m)
Power Cord Length	26.2 ft (8 m)
Net / Gross Weight	59.5 / 66.1 lb (27 / 30 kg)
Machine Dimensions	27.2 × 17.3 × 25.2 in (69 × 44 × 64 cm)

Parts & Components


The following labeled components are referenced throughout this manual. Use the exploded view diagram to locate each part on the machine.

Machine Components

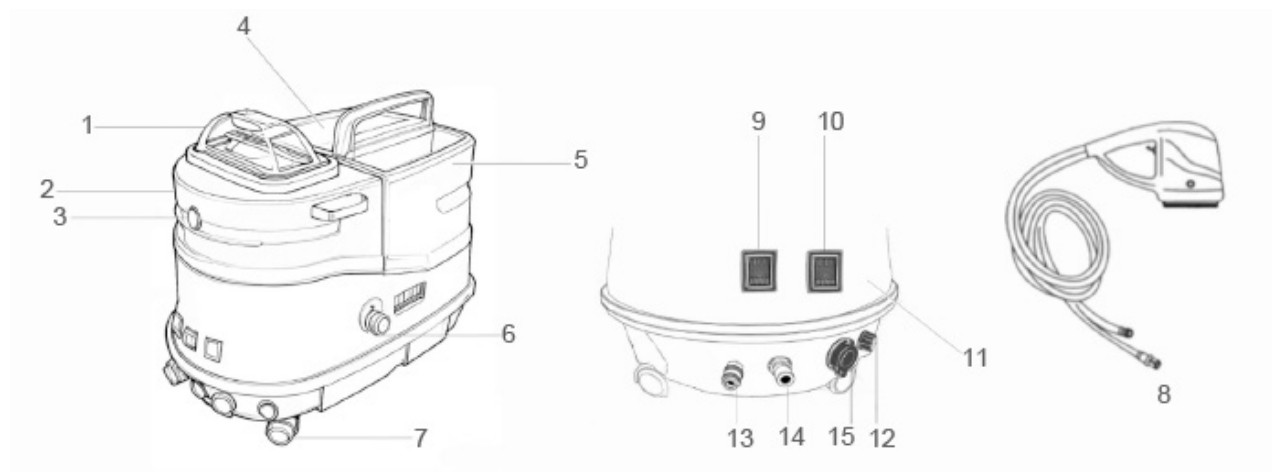

Ref #	Component Name
01	Sewage Cover
02	Recovery Tank
03	Bunghole (Fill Port)
04	Water Tank
05	Chemical Tank
06	Air Outlet
07	Wheel
08	Hand Brush
09	Spray Switch
10	Vacuum Switch
11	Base
12	Bubble Adjustment Dial
13	Spray Connector
14	Bubble Connector (Copper)
15	Aviation Plug

Accessories & Hose Set

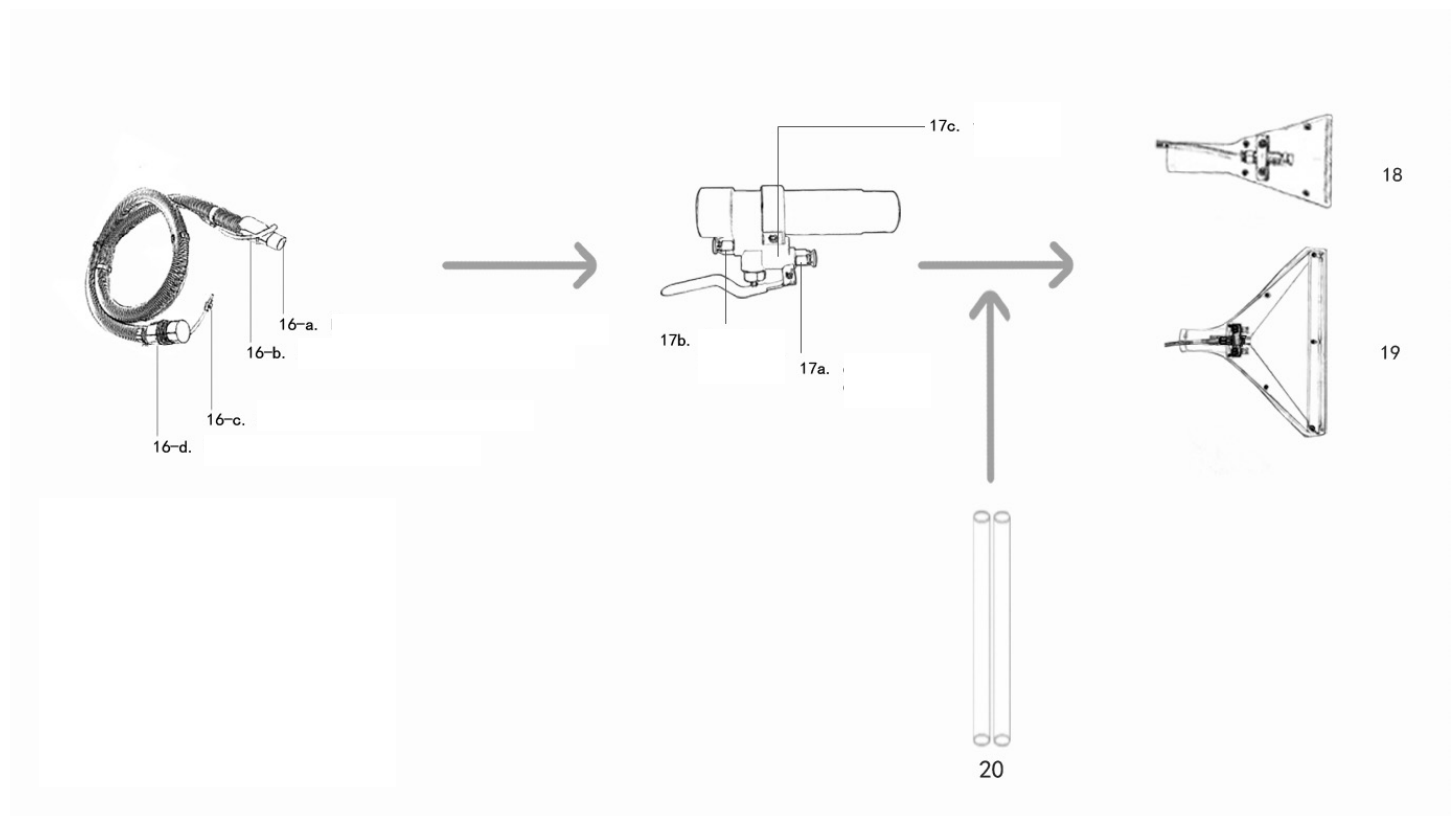

Ref #	Accessory Name
16	Suction Hose Set
16-a	Hose Connector
16-b	Transparent Cube
16-c	Connector
16-d	Buddy Connector
17	Spray Handle
17-a	Outlet Connector
17-b	Inlet Connector
17-c	Valve
18	Sofa Nozzle
19	Curtain Nozzle
20	Extension Straight Tube

Operation

Follow these steps in order each time you use the machine. All switches should be OFF before beginning setup.

Setup & Connection

1. Add the appropriate amount of defoamer into the recovery tank (02).
2. Add the appropriate amount of detergent into the chemical tank (05).
3. Add the appropriate amount of clean water into the water tank (04).
4. Connect the hand brush (08) to the bubbling copper connector (14) and the aviation plug (15).
5. Connect the buddy connector (16-d) to the bung hole (03).
6. Connect the connector in the hose set (16-c) to connector (13) on the machine.
7. Connect the transparent cube (16-b) to the inlet connector (17-b) on the spray handle.
8. Connect the Sofa Nozzle (18) or Curtain Nozzle (19) to the hose connector (16-a).

TIP: If needed, place the extension straight tube (20) between the hose connector (16-a) and the Curtain Nozzle (19) for extra reach on tall surfaces.

Operation

For simultaneous cold-water spraying and suction, turn on the spray switch (09) and the vacuum switch (10) at the same time.

Plug in the machine and turn on the power. Control the three-position switch on the hand brush (08) as follows:

FOAM — Both brush rotation and foam bubbling are active.

OFFAM — Machine stops (off position).

BRUSH — Brush rotation only; no foam bubbling.

Use the Bubble Adjustment dial (12) to control foam moisture level. Turning it clockwise produces wetter foam.

After washing, turn on the red vacuum switch (10) to recover dirty foam.

NOTE: After cleaning an area of approximately 5.4 sq ft (0.5 m) on the sofa, promptly rinse and vacuum the surface with clean water to prevent detergent residue.

Shutdown & Cleanup

After cleaning, turn off all switches and drain any residual cleaner and water from the tanks.

If residue remains at the bottom of a tank, use the suction hose set (16) to siphon the excess solution into the recovery tank (02).

Drain the wastewater from the recovery tank, or remove the tank bottom cover for drainage.

Clean the spray suction hose and hand brush tubing promptly after each use to prevent odors and buildup.

Maintenance

Routine Cleaning

After every use, rinse the suction hose, spray hose, and hand brush tubing with clean water.

Empty and rinse both the recovery tank and the chemical tank.

Wipe down the exterior with a damp cloth. Do not use harsh solvents.

Descaling (Steam Function)

REQUIRED: Descale every 10 uses or once per month to prevent mineral scale buildup in the steam system.

1. Mix a citric acid solution at the concentration specified for your water hardness level.
2. Fill the water tank with the citric acid solution.
3. Run the steam function for 10 minutes.
4. Flush the system with clean water afterward.

Long-Term Storage

Drain all tanks completely before storing.

Store the machine in a dry, indoor environment away from direct sunlight and freezing temperatures.

Coil and store hoses loosely to avoid kinking.

WARNING: Do not disassemble or replace internal parts without authorization from the manufacturer or an authorized service technician. Unauthorized repairs void the warranty.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER