 


DAPPER

User Manual

8 Gallon Dust Extractor

Model: DP-DE1137

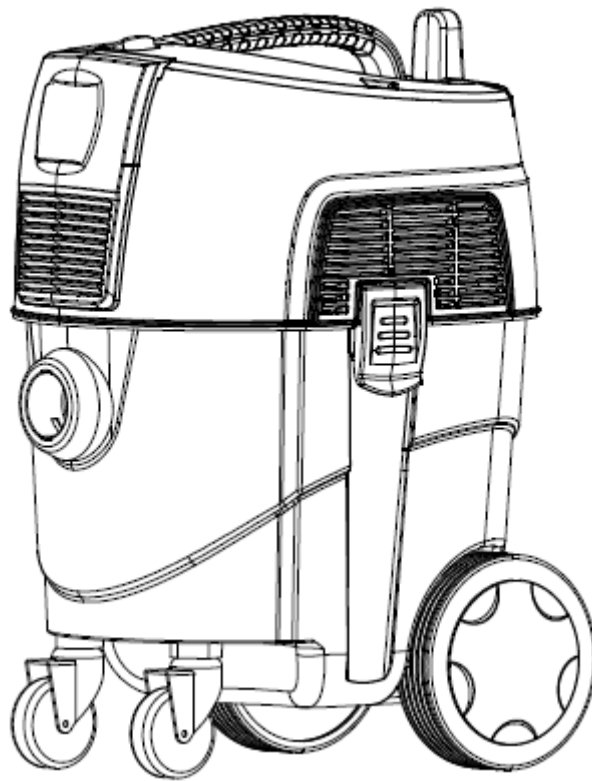

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

Contents

SAFETY	4
TECHNICAL SPECIFICATIONS	5
PRODUCT FEATURES	6
ASSEMBLY AND SETUP	8
OPERATION	9
CLEANING	10
MAINTENANCE	11
TROUBLESHOOTING GUIDE	11

| SAFETY

Read all safety warnings and instructions before operating this vacuum cleaner.
Failure to follow these precautions could result in electric shock, fire, or serious injury.

- Use this appliance only as described in this manual.
- This machine is designed for indoor commercial use only.
- Disconnect the power plug before cleaning, servicing, or maintenance.
- Do not use near flammable materials, vapors, or gases.
- Keep the cord away from sharp edges and heat sources.
- Do not handle the plug or switches with wet hands.
- Ensure the power supply is 120V / 60Hz.
- Do not modify or bypass grounding protection on the plug.
- Never immerse the machine or cord in water.
- Keep hair, loose clothing, and body parts away from suction openings or moving parts.
- Always unplug the machine when not in use.

Operational Precautions:

- Remove dust bag and dry filters before vacuuming liquids.
- Use the sponge filter for wet operation.
- Do not vacuum sharp, hot, or sticky materials.
- Empty the tank regularly.
- Stop operation immediately if unusual noise or vibration occurs.
- Do not let children use the appliance.
- Store indoors in a dry, clean area.
- Use only manufacturer-approved parts and accessories.
- Repairs must be performed by qualified technicians.
- Do not use the vacuum near flammable liquids, gases, or explosive materials.
- Turn off and unplug before cleaning or maintenance.
- Handle the hose carefully to prevent kinks or damage.
- Keep the power cord away from sharp edges and hot surfaces.
- Do not immerse the motor housing or plug in water.
- Ensure voltage matches 120V / 60Hz.
- Remove dust bags and filters before wet use and install the sponge filter.
- Empty the tank frequently to prevent overheating.
- Do not vacuum glass, nails, or sharp debris.
- Do not vacuum hot ashes or caustic materials.
- Do not vacuum sticky substances like cement or lime.
- Stop using immediately if abnormal sounds or smoke appear.
- Do not let children play with the appliance.
- Always unplug when not in use.
- Keep the machine and cord away from heat sources.
- Replace damaged cords or plugs through professionals only.
- If the power cord is damaged, it must be replaced with an approved cord by the manufacturer or service agent.
- This appliance is not intended for unsupervised use by persons (including children) with reduced physical or mental capability.
- Children must be supervised to ensure they do not play with the appliance.
- Children aged 8 years and older may use this appliance only under supervision.
- Children must not perform cleaning or maintenance.
-

TECHNICAL SPECIFICATIONS

Rated Voltage: 120V

Rated Frequency: 60Hz

 
Rated Power Input: 1200W

Maximum Vacuum Pressure: 18kPa ($\approx$ 2.6 psi)

PRODUCT FEATURES

- Automatic filter cleaning system.
- Compact and powerful design.
- Wet and dry operation.
- Multi-stage filtration system for hygienic cleaning.
- Integrated power tool outlet.
- Space-saving parking position.
- Durable wheels for easy movement.
- Comprehensive accessory kit.
- User-friendly controls.

MAIN COMPONENTS

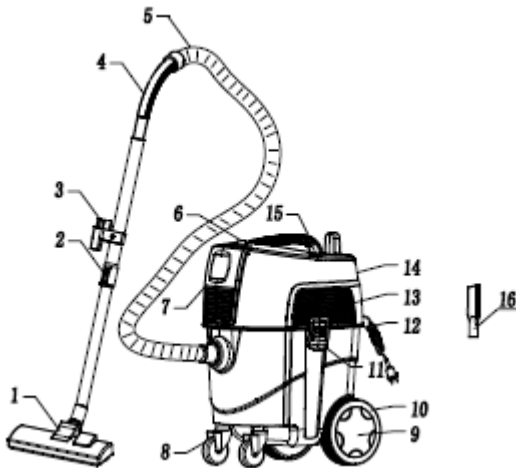

1. Floor Brush
2. Telescopic Tube
3. Hook
4. Hose Connector
5. Hose
6. Power Switch
7. Panel
8. Caster Wheel
9. Cover Plate
10. Big Wheel
11. Lock Catch
12. Power Cord
13. Air Outlet Plate
14. Cover
15. Handle
16. Small Nozzle

PACKING LIST

Vacuum Cleaner – 1
Hose – 2
Telescopic Tube – 1
Floor Brush – 1
Round Brush – 1
Small Wheel – 2
Big Wheel Assembly – 1
Cover Plate – 2
Small Nozzle – 1
Manual – 1

ASSEMBLY AND SETUP



1. Release the lock catch and lift off the upper housing.



2. Remove accessories stored inside the tank.



3. Insert the cover plates into the large rear wheels.



4. Align wheel axles with the mounting posts and press firmly.

5. Insert caster wheels into front mounting holes until secure.



6. Reattach the upper housing and fasten both side buckles.

OPERATION



7. Insert the hose connector into the suction port and rotate clockwise until locked.
8. Connect the elbow fitting to the metal extension tube.
9. Attach the opposite end of the tube to the floor brush.



10. Press "I" to start the vacuum.
11. Press "O" to stop the vacuum.
12. The automatic dust-shaking function activates every 20 seconds.
13. A brief sound during operation is normal.



14. After use, the power switch returns to the 'O' position automatically.
15. Store all accessories in their designated slots.

CLEANING



1. When the dust barrel is full, empty it immediately.



2. Release both side buckles and remove the upper housing.



 
3. If using a paper dust bag, remove and discard it properly.



4. If using the reusable tank, empty debris into a trash container.




5. Turn six locking hooks counterclockwise to remove the HEPA filter.

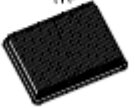

6. Rinse the HEPA filter under running water only.



 7. Do not use a brush or detergent.

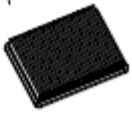

8. Allow the filter to dry completely before reinstalling.

MAINTENANCE

- Limit continuous operation to 20 minutes per session.
- Clean the filter, body, and dust tank after each use.
- Coil and store the power cord neatly.
- Drain and rinse after wet use to prevent corrosion.
- Wipe the outer housing with a dry cloth only.
- Do not allow moisture to enter electrical components.

TROUBLESHOOTING GUIDE

Motor not running:

1. Plug not inserted properly – Reinsert securely.
2. No power at outlet – Check power supply.
3. Switch off – Turn on the switch.

Weak suction:

1. Hose or nozzle blocked – Clear obstruction.
2. Dust tank full – Empty or replace dust bag.
3. Filter clogged – Clean or replace filter.

Hot air at exhaust:

1. Normal motor heat – Safe to continue.
2. Prolonged operation – Turn off and cool 20 minutes before reuse.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product. Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1. Product failure due to power outages, interruptions, or inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
4. Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
6. Cleaning and maintenance not performed according to the user manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER