 


DAPPER

User Manual

**Dapper Commercial Carpet & Upholstery
Cleaning Machine**
Model: DP-UCE1227

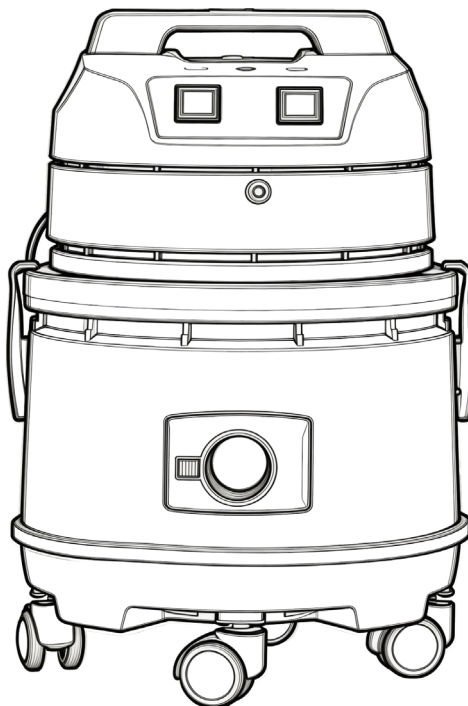

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

|CONTENTS

INTRODUCTION.....	4
SAFETY	5
TECHNICAL SPECIFICATIONS	6
OPERATION.....	7
PARTS LIST.....	8
WARRANTY	10

INTRODUCTION

The Washing Machine is a professional cleaning system designed to tackle tough cleaning jobs on cotton fabric sofas, upholstered walls, carpets, staircases, and car interiors across all fiber types.

- Spraying and vacuuming operate simultaneously, making it efficient, flexible, and ideal for routine maintenance cleaning.
- Suitable for all workplace surfaces including sofas, curtains, mattresses, seats, and carpets.
- Built for large-area cleaning with a working radius of up to 49 ft (15 m).
- Powerful suction allows for fast drying and thorough cleaning. Can also be used as a standalone dry or wet vacuum.

SAFETY

Please read this manual carefully before use. Contact your local distributor with any questions.

1. Before use, confirm that your power supply voltage matches the rating on the nameplate.
2. Do not drag or pull the machine by the hand brush or suction hose. To reposition the machine, push it by the base or lift it by the handle.
3. When the recovery tank is full, the float valve will rise and cut off suction. Drain the recovery tank before continuing.
4. After each use, rinse the hand brush and suction hose with water to prevent bacteria growth and odor.
5. To use the machine as a small-area vacuum, remove the solution tank, install the dust bag and filter, and attach the vacuum nozzle.
6. Do not replace any parts yourself. Unauthorized repairs void all liability coverage.

TECHNICAL SPECIFICATIONS

Specification	Value
Voltage	110-125V / 60Hz
Vacuum Motor	1,000W
Spray Motor	25W x 2
Steam Motor	2,600W
Airflow	1,938 sq ft/hr
Solution Tank	1.1 gal
Recovery Tank	3.2 gal
Suction Hose Length	13 ft
Power Cord Length	33 ft
Noise Level	<=66 dB(A)
Net Weight	30.9 lbs
Gross Weight	44.1 lbs
Dimensions	14.2" x 14.2" x 20.1"
Packing Dimensions	20.9" x 14.6" x 25.6"

OPERATION

OPERATION STEPS

1. Add an appropriate amount of defoamer to the recovery tank (A-11).
2. Using the funnel, add an appropriate amount of detergent to the solution tank (A-14), then wipe down the exterior surface to keep it dry.
3. Insert the infusion tube into the solution tank port and secure the side button.
4. Connect the buddy connector (B-18d) to the port (A-10).
5. Connect the hose set connector (B-18c) to the connector (A-6) on the middle cover.
6. Connect the spray handle (B-17) to the hose connector (B-18b).
7. Connect the transparent coupling (B-18a) to the outlet connector on the spray handle (B-17).
8. Connect the plastic nozzle (B-19) to the spray handle (B-17).
9. To use the extension wand, swap the short transparent coupling for the long one, connect the telescopic wand (B-20) or stainless steel nozzle (B-21) to your desired attachment, and connect the spray handle (B-17) to the other end.
10. The green button controls spraying (A-2); the red button controls vacuuming (A-3).
11. Press the valve on the spray handle (B-17) to spray and vacuum simultaneously.
12. For steam cleaning, connect the hose connector (B-15a) to the steam upholstery tool (B-20).
13. Turn on the steam switch (A-3) and wait approximately 15 seconds until steam flows continuously. Steam activates with a single press.
14. When finished, turn off the power and drain all dirty water from the machine.

PARTS LIST


PART A — Main Unit

#	Component
1	Handle
2	Suction switch
3	Spray switch
4	Top cover
5	Middle cover
6	Connector
7	Binder plate
8	Base cover
9	Barrel lock
10	Port
11	Recovery tank
12	Wheels
13	Solution tank
14	Steam switch


PART B — Accessories & Attachments

#	Component	Notes
15	Suction hose set	
15a	Hose connector	
15b	Transparent coupling	
15c	Connector	
15d	Buddy connector	
16	Spray handle	
16a	Outlet connector	
16b	Inlet connector	
16c	Spray control	
17	Plastic upholstery nozzle	
18	Plastic curtain nozzle	
19	Telescopic tube	
20	Steam hose set and nozzle	Optional — 430S/ PLUS only

PART A — Main Unit (Front View)

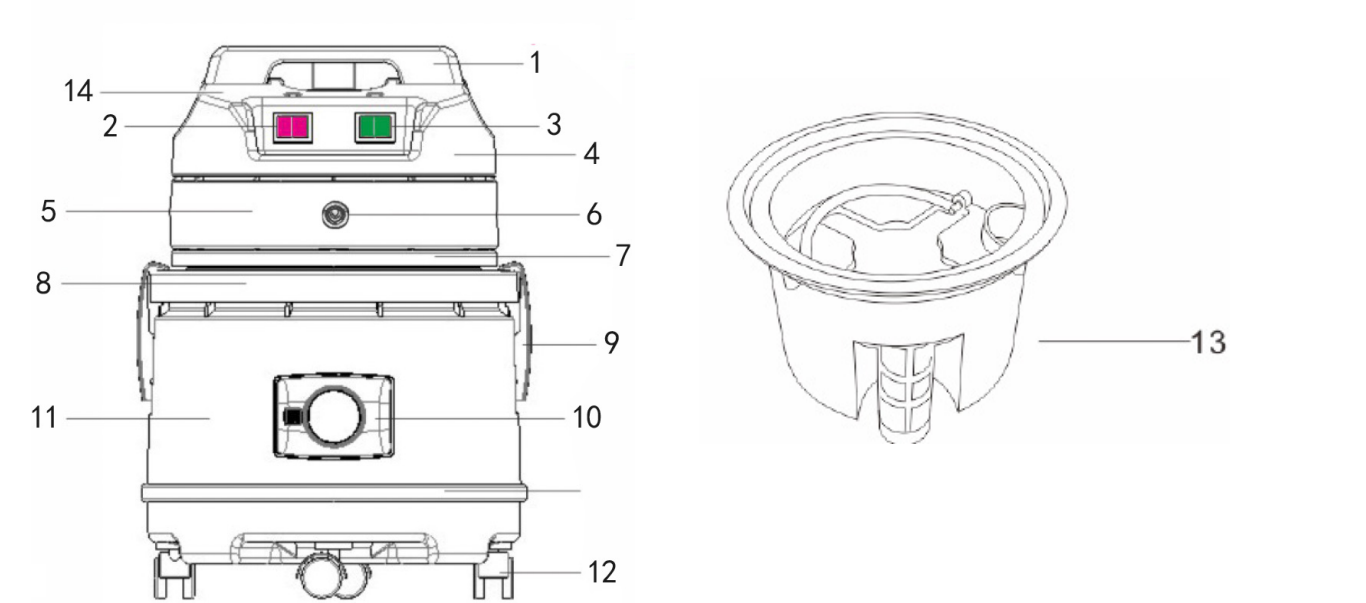

PART B — Accessories & Attachments

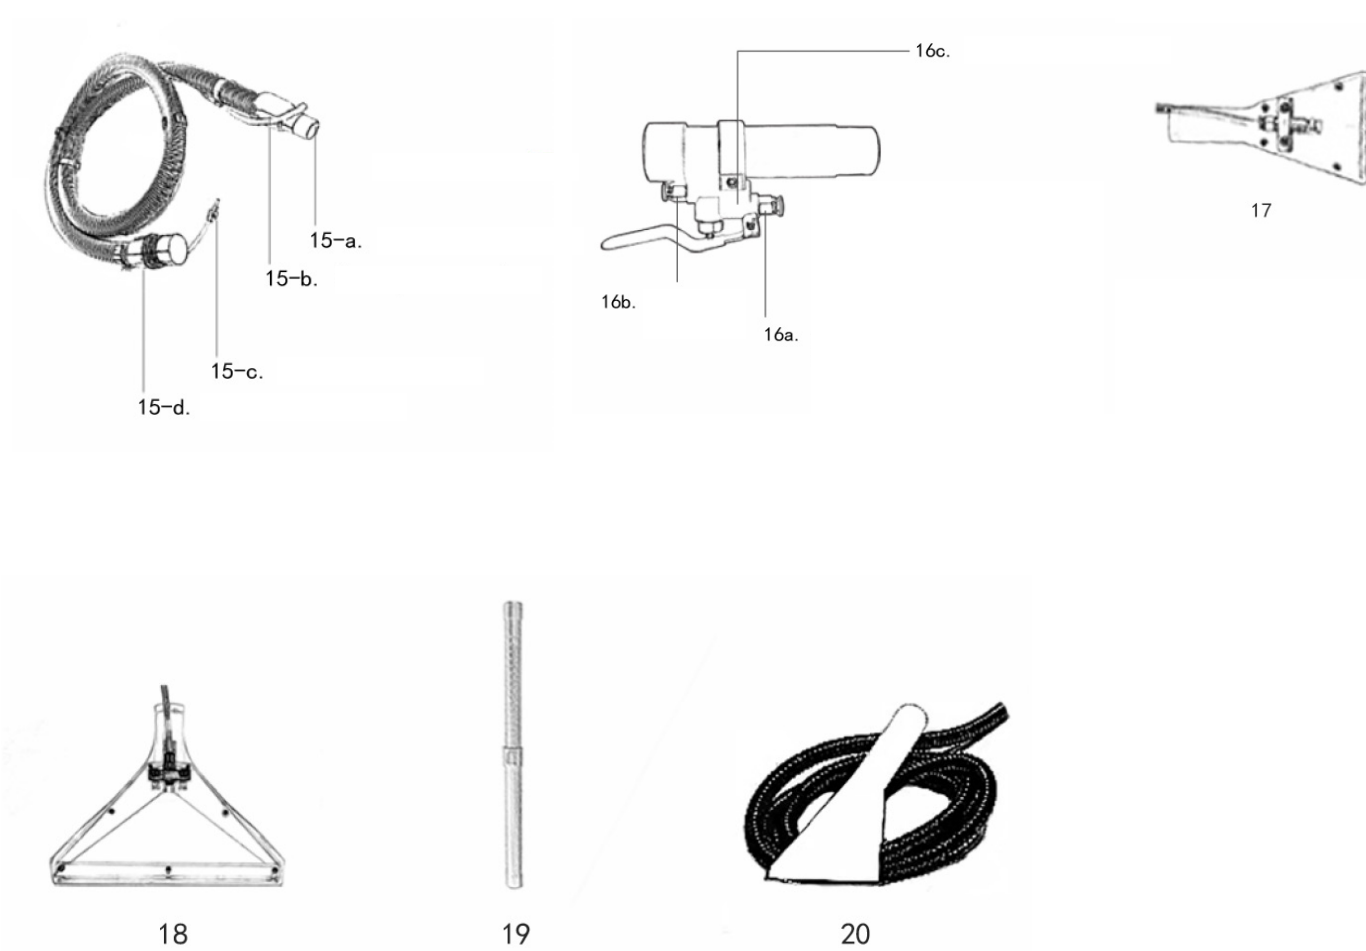

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER