


PORCH SWING

ASSEMBLY INSTRUCTION

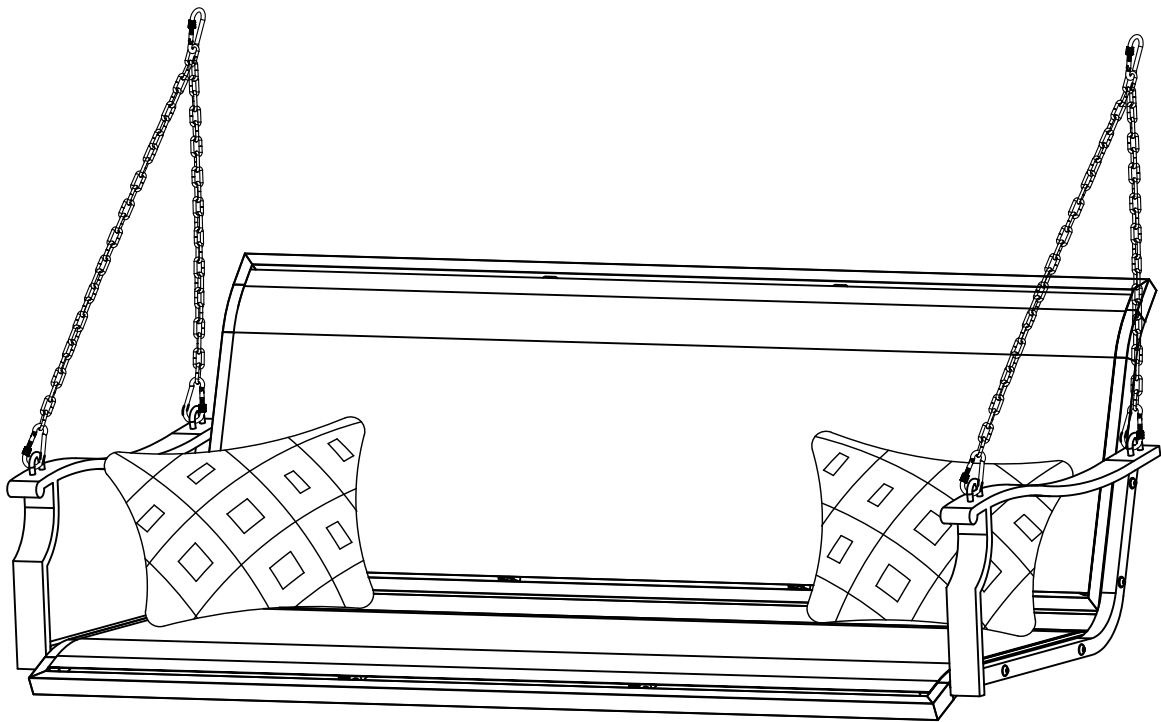

If you have any questions, feel free to email us
at zzwservice@gmail.com

THANK YOU

zzwservice@gmail.com

Register and Get the Full Benefit

It's our way of saying thank you.




Register your product to enjoy a number of benefits:

- (1) 1-year warranty extension
- (2) 24/7 quicker service and product support
- (3) Chance to test new products for free
- (4) Get specific discount on shop items




Register Way: Send " your name + order ID " to
zzwservice@gmail.com

Assembly Instruction


Parts List

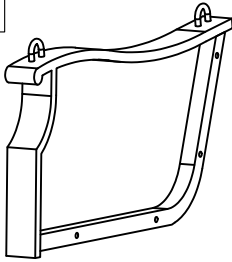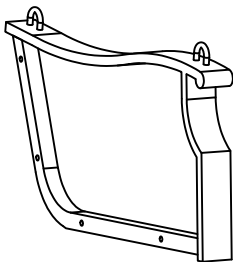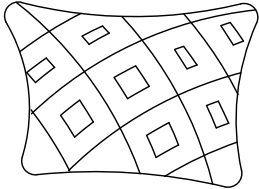A  Seat panel	B  Back panel	C  Left armrest	D  Right armrest
1 PC	1 PC	1 PC	1 PC
E  Back cushion			
2 PCS			

  Hardwares List
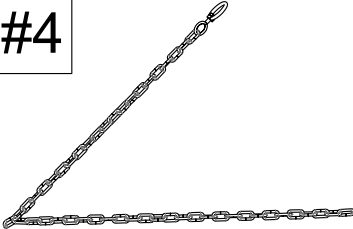
#1  Screw with washer M8*35 (mm)	#2  Spacer	#3  Big nut safety clasp	#4 
8 +1PCS	8 +1PCS	6 PCS	2 PCS
#5  Allen key 4# (mm)			
1 PC			

Assembly Instruction - Porch swing

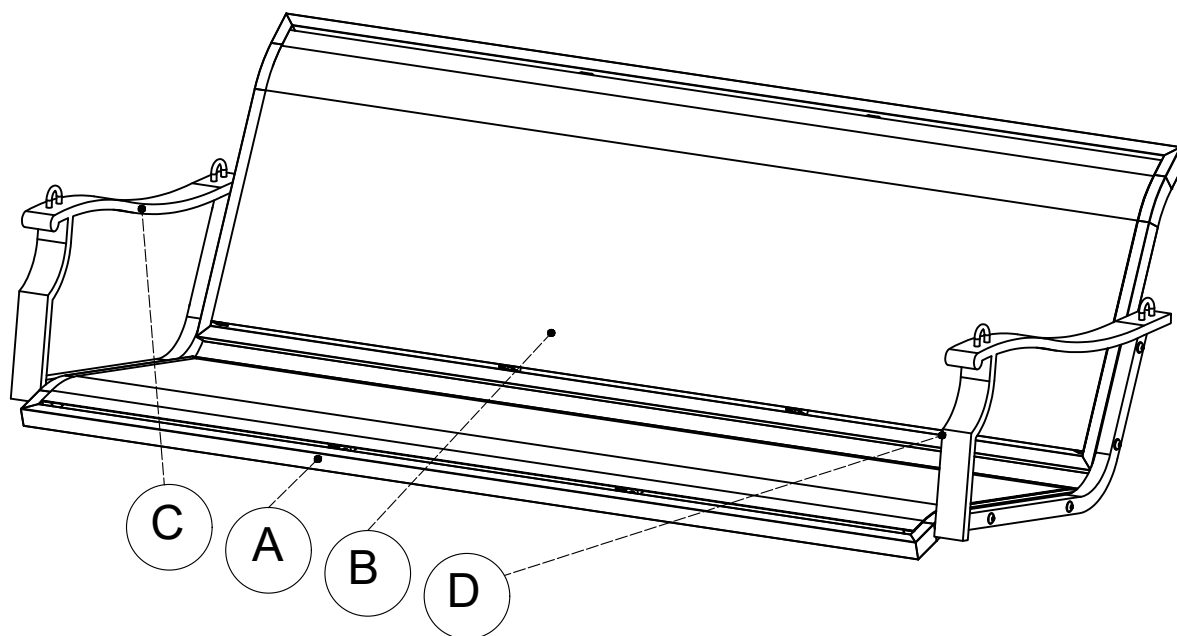

STEP 1


A x1

D x1

#1 x2

#2 x2

Do not tighten the screws; simply screw a few turns of the screws.

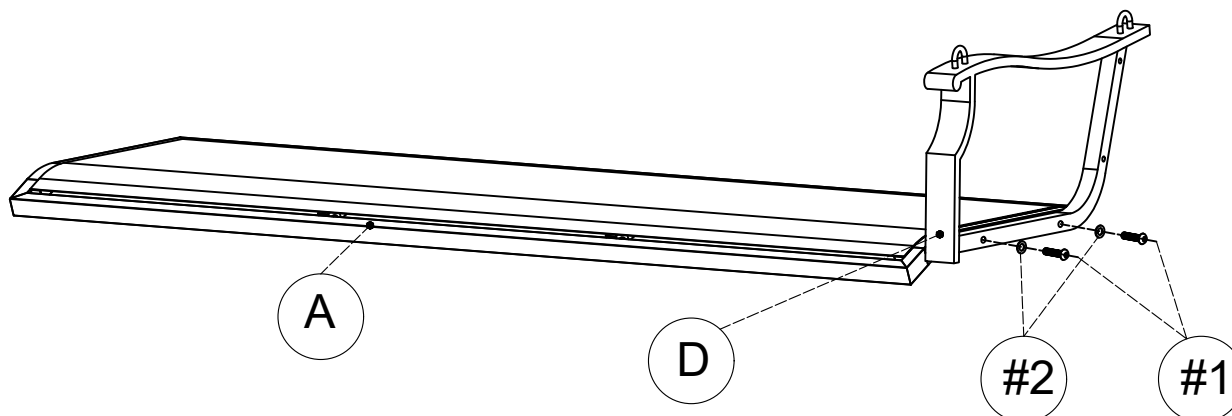


Assembly Instruction - Porch swing

STEP 2

C x1

#1 x2

#2 x2

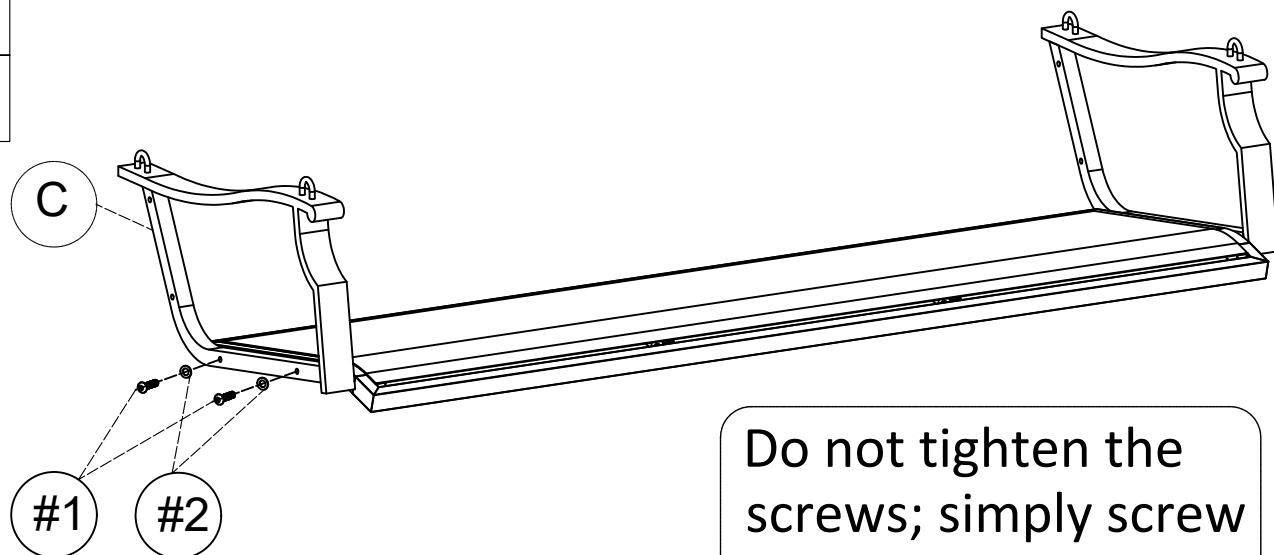


Do not tighten the screws; simply screw a few turns of the screws.

STEP 3

B x1

#1 x2

#2 x2

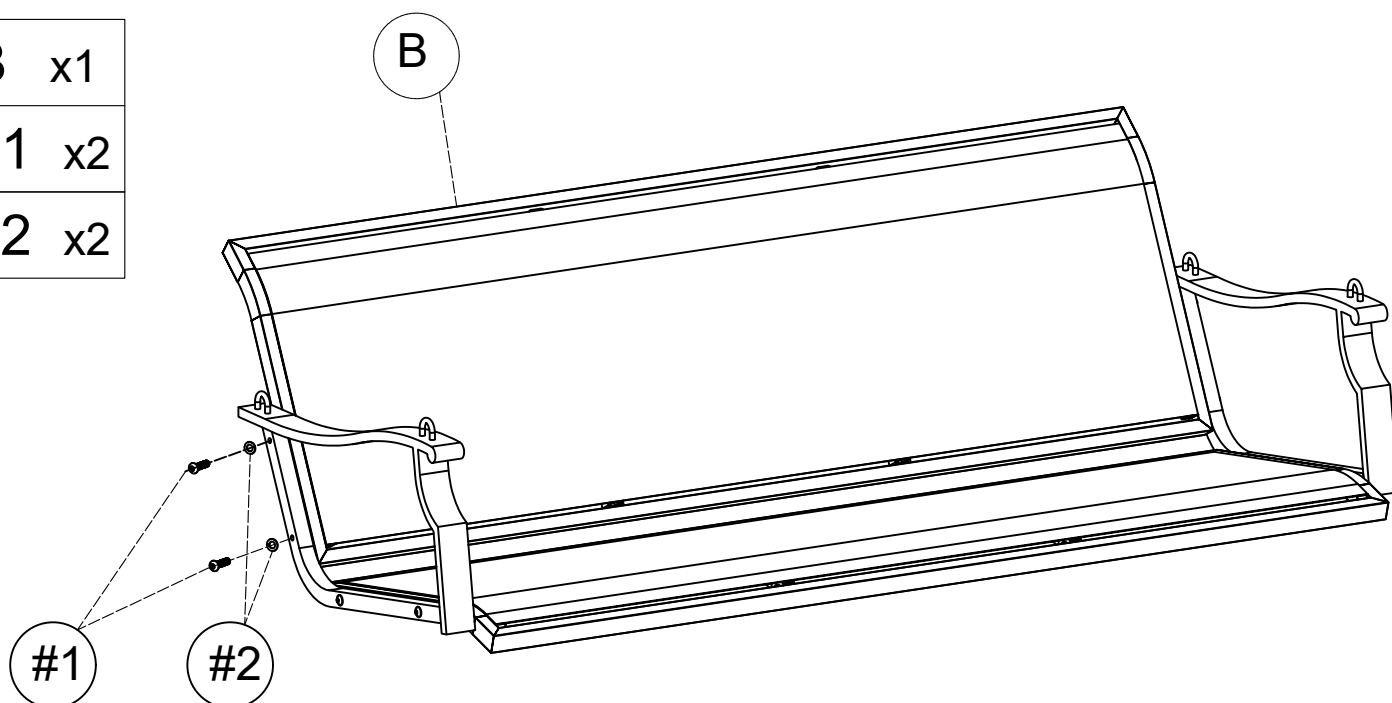


Assembly Instruction - Porch swing


STEP 4

#1 x2

#2 x2

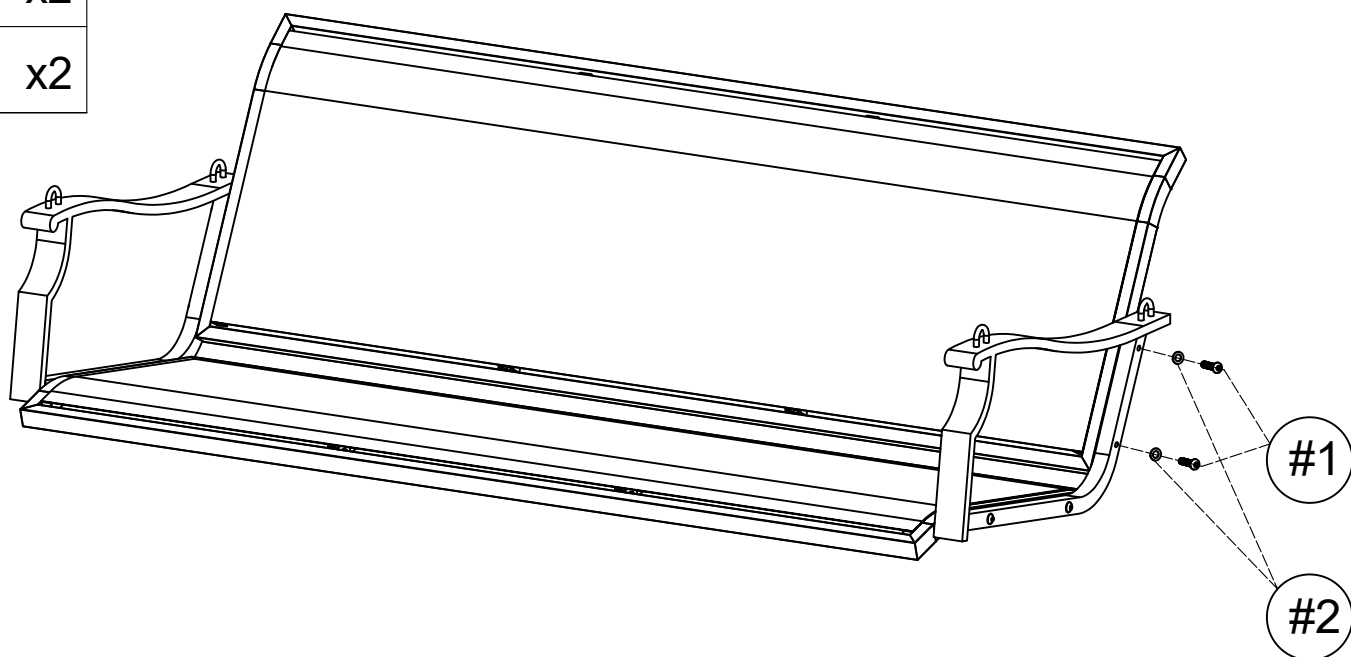

STEP 5

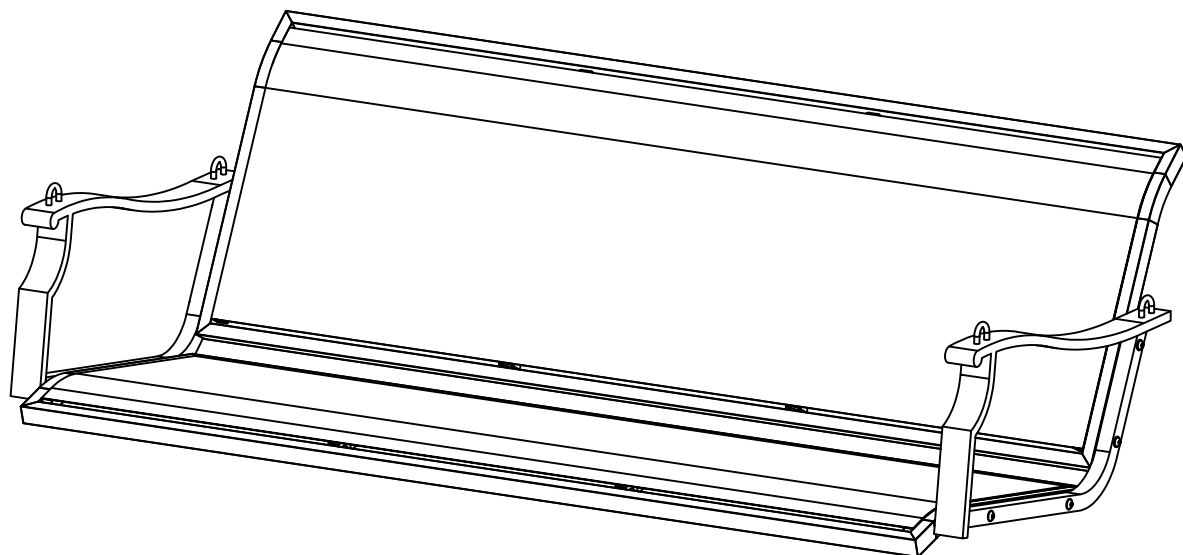

Tighten all the screws completely

Assembly Instruction - Porch swing


STEP 6

#3 x6

#4 x2

The safety buckles must be locked.

Regularly inspect the chain and suspension, and check for safety hazards

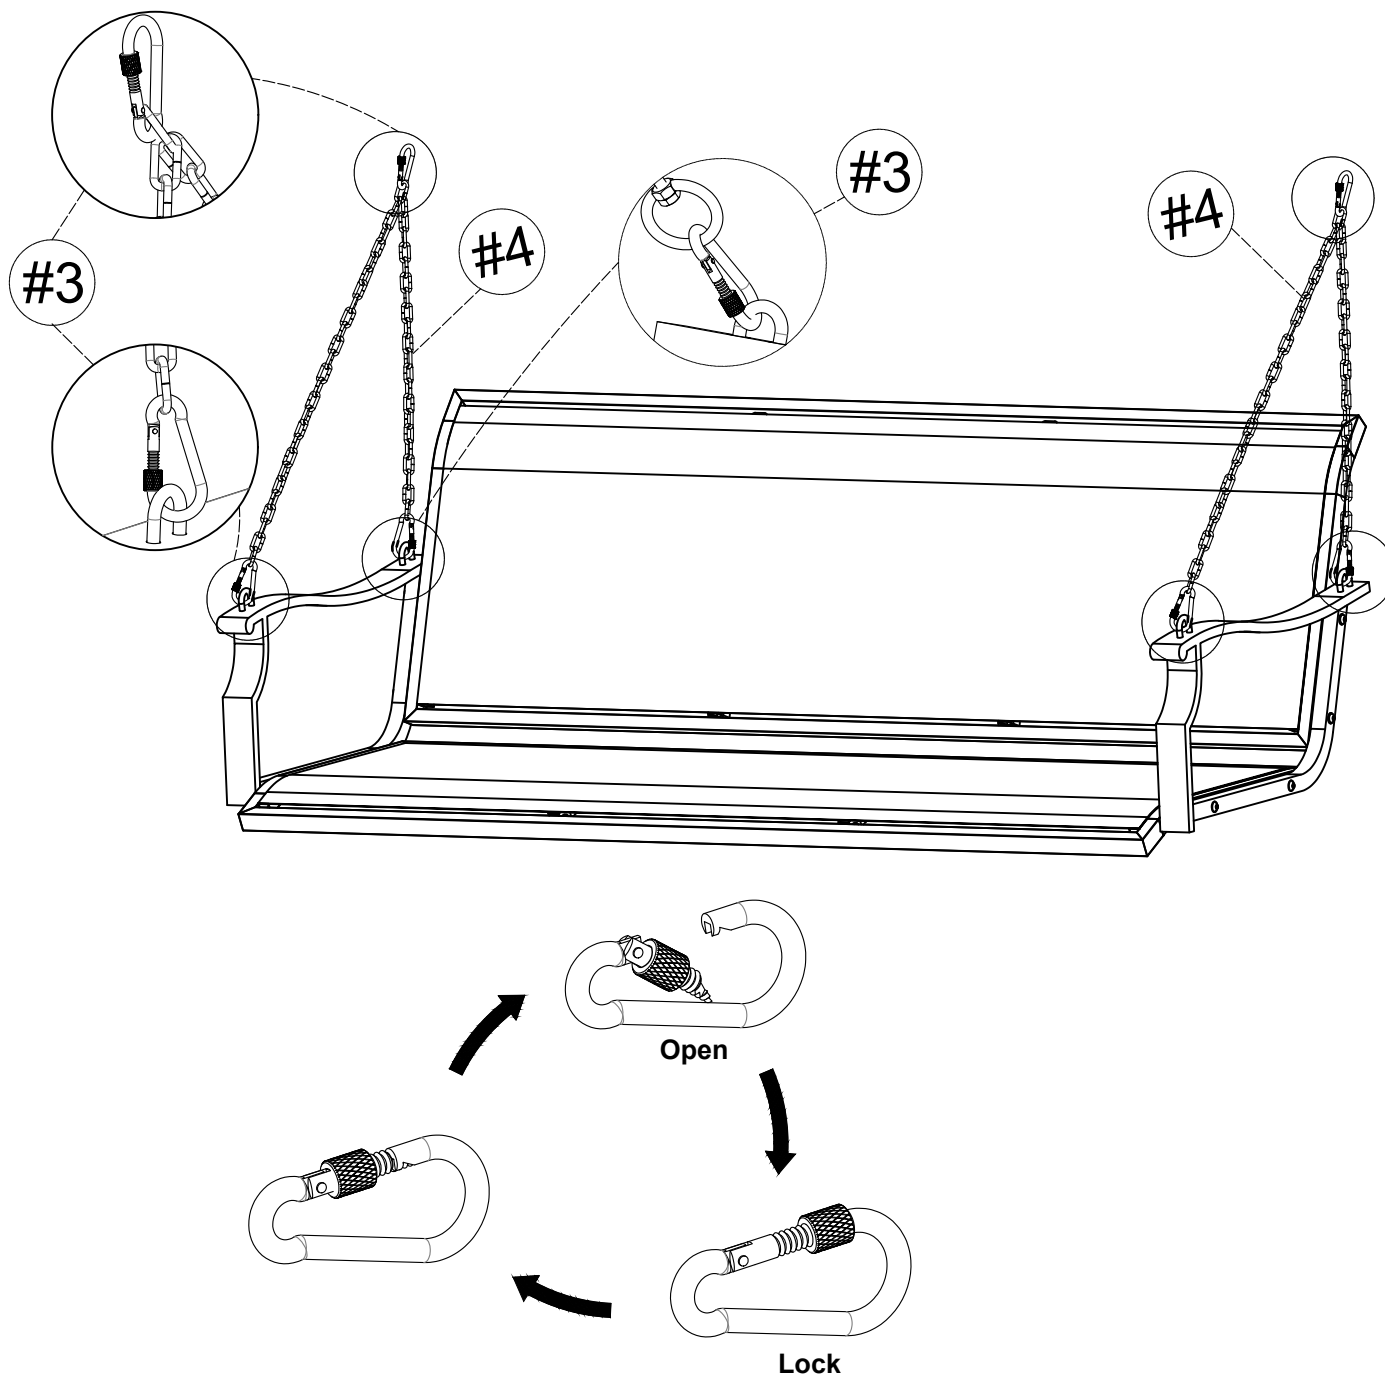

Suspend the swing chair using chains as shown.

Adjust the length of the chains to change the tilt angle of the swing