



## 1 YEAR LIMITED WARRANTY

### NIGHT VISION BINOCULAR

BARSKA® Optics, as manufacturer, warrants this new precision optical product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty. This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America and Canada.

In the event of a defect within 30 days, the consumer must return the defective unit to the BARSKA dealer (the place of purchase) at his/her own expense.

Beyond 30 days, BARSKA products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

BARSKA® OPTICS  
Repair Department  
855 Towne Center Drive  
Pomona, CA 91767

For additional and updated information  
please visit our website at [www.barska.com](http://www.barska.com)

Please email [info@barska.com](mailto:info@barska.com) or call 1-888-666-6769 for Return Merchandise Number (RMA#) before any returns.

NOTE: All merchandise received without a valid RMA # will be returned to shipper at his/her own expense.

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
  2. Purchase receipt or Proof of Purchase. (Original/Copy)
  3. A brief explanation of the defect.
  4. A Check/Money Order of \$25.00 to cover inspection, shipping and handling.
- \*Please allow 6-8 weeks for delivery.

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing of your optical products are always provided at a reasonable cost.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.



# NVX300

## NIGHT VISION BINOCULAR



Table Of Contents	
General Overview	3
Using The Night Vision Binocular	4
Display Information	5
Taking Pictures And Videos	5
Setting Menu Navigation	5
Downloading Footage To Your PC	6
Viewing Footage On The Night Vision Binocular	7
Troubleshooting	7
Specification	7



General Overview

 
1. Power: Long press for power on and off
2. Zoom: Under Menu mode: Press Zoom to go up.  
Under Photo and Video Mode, press Zoom to zoom in at multiple levels. The maximum zoom is 2X.  
Once reaching 2X, keep pressing to go back to 1X  
(1.0->1.07->1.14->1.22->1.30->1.38->1.48->1.58->1.68->1.79->1.92->2.0->1.0)
3. Mode: Press Mode to change to the next mode.  
Press to flick between 4 modes: Photo, Video, Gallery, and Setting
4. IR: Under Menu mode: Press IR to go down.  
Under Photo and Video Mode: Press IR for 7 levels of brightness (0->IR1->IR2->IR3->IR4->IR5->IR6->IR7->0....) when using the Binocular at night.
5. OK:
  - In Photo mode, OK takes a photo
  - In Video mode, OK starts and stop the video recording
  - In Gallery / Setting mode, press OK to select options – for example, start playing a recorded video or to select an option from the menu.
6. Intensity. Pop up TFT backlight adjusting bar for easy adjusting the TFT brightness. Use Zoom and IR button to increase/decrease the TFT brightness. Press OK to save

7. Focus Adjustment: Focus the picture by turning the focus wheel clockwise or anti-clockwise
8. IR LED
9. Lens cap: Take off for night-time use. Failure to do so will result in severely limited performance.  
(Note: Uncovering the lid during the day time will NOT damage the lens, but it will affect the image quality.)
10. TF card and USB slot: These are located just above the eyepiece. First make sure the power is off. Then push the card into the slot to lock it. To remove the card, first turn off device then push it in to release. When the card is partially ejected, pull it out.
11. Eyepiece

Using The Night Vision Binocular

1. Turn the night vision by press the ON button down for a short period.
2. Pick an infrared power level by pressing the IR button to illuminate at night. There are 3 brightness setting. A higher setting will provide a brighter picture, but will deplete the batteries quicker.
3. Focus the picture by turning the focus wheel clockwise or anti-clockwise
4. You can use digital zoom to increase the zoom ratio more by press the Zoom button to magnify the picture from 1.0x->1.07->1.14...to 2.0x then will go back to 1x magnification.
5. When need, adjusting the LCD brightness level by press down the INTEN button. Operating night vision at night may have LCD brightness to bright issue, use intensity button for adjusting LCD brightness easily.
6. Press the Mode button to switch modes - the night vision four modes are Photo, Video, Gallery and Setting. These are explained in the next sections.

Display information

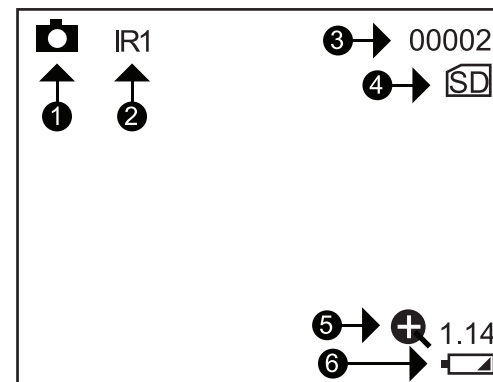


1. Photo/Video mode icon
2. IR level Indication
3. No. of photos taken
4. TF card insert indication
5. Zoom Ratio indication
6. Battery level indicator

Taking Pictures And Videos

1. To take a picture: go to Photo mode (this is the default mode when the night vision is switched on.) A camera icon shows at the bottom of the screen. To take a photo, press the OK button.
2. To record a video: go to Video mode. A small video icon will appear at the bottom of the screen. To start recording, press the OK button. To stop recording, press the OK button again. Video will save automatically onto the Micro SD memory card.

 Setting Menu Navigation

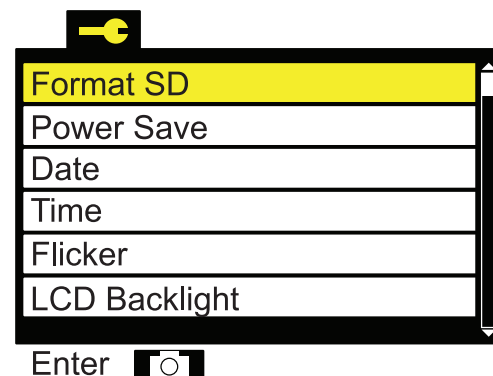

- a. To get the settings menu, use the MODE button to flick through the photo, video and gallery modes until you reach this setting menu. (Pictured)
- b. Use the Zoom and IR buttons to go up and down, and the OK button to enter/exit menus.
- c. Pressing the MODE button will go back to Photo mode.

 
Menu Options

- Format SD: Erase everything on your installed memory card.
- Power Save: Configure the Night Vision Binocular to Turn off after a certain of non-use.
- Date: Edit current date for displaying date information on the Photos/Videos.
- Time: Edit current time for showing time information on the Photos/Videos.
- Flicker: Select 50Hz/60Hz according to power system frequency. For example, select 50Hz for 220V/50Hz power system.
- LCD Backlight: Change the brightness of the screen. Use the ZOOM and IR buttons to increase/decrease the brightness. Press OK to save.
- Date/Time Tag: ON/OFF Date and Time information on the Photos/Videos
- Version: Display software version installed.

Downloading Footage To Your PC

The night vision has a small connection port just above the eyepiece (next to the memory card slot.) Using the supplied USB cable, connect your PC to the night vision.

When the night vision is turned off, plug it into your PC. A card reader icon will display on the screen of your night vision.

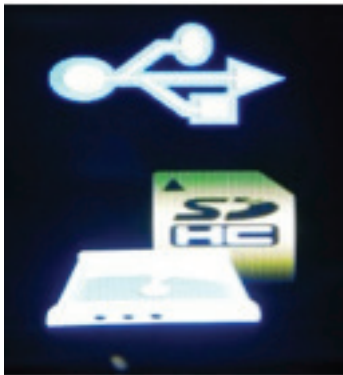

On Windows, navigate to your File Explorer. The Night Vision Binocular may appear as “USB DISK”, “REMOVABLE STORAGE” or something similar, normally processed by a “D or E:”.

Within this drive, your photos and videos will be in a folder call DCIM\100JLCAM.

Viewing Footage On The Night Vision Binocular

You can review your photos and videos on the Night Vision Binocular itself. Keep pressing the MODE button until you get to the Gallery mode.

Use the ZOOM and IR buttons to scroll up and down your photos and videos.

You can start playing a video by pressing the OK button on a selected video, and selecting “Play” from the sub-menu using the OK button.

To delete a photo or video, press OK button and select “Delete” from the sub-menu.

Troubleshooting

Poor image

- Check that the Night Vision Binocular is focused by adjusting the focus wheel at the front of the device.
- Check that the IR illumination level is will adjust.
- Check Lens cap attachment takes off when operation at night mode
- Check if Low level battery but using IR6 or IR7 illumination.

No power

- If the Binocular fails to activate, check for defective, missing or improperly-installed batteries. Replace or install batteries correctly. Please make sure to use Alkaline batteries.
- Please make sure to use only alkaline AA batteries.

Specification

- Optical Zoom 7x
- Objective aperture: 20mm
- Viewing angle: 5.5°
- Exit pupil distance: 20mm
- Min focus range: 1m
- F# for object lens: Night 1.311/Day 2.8
- Viewing distance at night: 100m
- Sensor: CMOS
- Recording resolution: 640 x 480
- Display resolution: 320 x 240
- IR LED power: 1.8W
- Wavelength: 850nm
- Digital Zoom: 12 levels/Max 2x
- Battery life: Operation Time ~ 8hrs (IR off)/ 2hrs (IR7)
- Power supply: AA x 4 batteries (not included)
- Memory card: Max 32GB TF card (not included)