



# Aluminum Folding Motorcycle Trailer Ramp

Instructions for # TF-6048-EZ, TF-6060-EZ,  
TF-6048-EZ-ATV, TF-6060-EZ-ATV



## **GENERAL GUIDELINES & SAFETY**

- It is the user's responsibility to read and follow all instructions
- Keep these instructions with the product at all times and review before each use
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects
- Never modify this product in any way
- All circumstances cannot be addressed in these instructions
- Please use common sense and practice general safety measures when using this product
- Parts and/or instructions are subject to change without notice
- Never exceed the 3,000 lb total weight capacity, (1,500 lbs per ramp section).
- Never over-accelerate while loading. The operator must be in control of the vehicle at all times. Loss of control could result in injury.
- Never use the ramp on an unsafe or damaged trailer.
- Wear a helmet when loading and unloading vehicles using the ramp.
- Store the ramp in a safe, dry place.
- The manufacturer and/or dealer is not responsible for any property damage or personal injury that occurs from improper use.
- Before each use check straps for fraying and wear. Do not use damaged straps. Keep straps out of direct sunlight. If wet, dry thoroughly before storing.
- Before each use check that ramp hinge pins are securely in place. Inspect the ramp for damage. Do not use a damaged or bent ramp. Clean the ramp of mud, snow, or other debris before loading and unloading.

## **PREPARATION FOR LOADING**

1. Park the trailer on firm, flat ground. Make sure the trailer is properly hitched to the vehicle and level.
2. Check the trailer for damage or wear. If the trailer is not sturdy or is damaged, do not continue.
3. Remove any obstructions from the trailer bed.
4. Unfold the ramp and place the attaching plate on the edge of the trailer. Make sure the ramp is centered on the loading surface, resting on hard, level ground, and is at the lowest angle possible.


Use one of the following options:

- For a standard trailer edge, place the ramp attaching plate tight against the trailer edge. Safety straps are required - see Securing Ramp section.
- If your trailer has a ramp attachment bracket, fit the ramp attaching plate lip into the bracket. Safety straps are not required (skip Securing Ramp section).
- This ramp may be used with the Alumi-Loc bracket (sold separately) to prevent ramp kick-out in the safest way. See dealer for details. Safety straps are not required (skip Securing Ramp section).



## **SECURING RAMP**

1. Before each use, check the straps for fraying/wear. Do not use damaged straps.
2. Loop the strap around the bottom cross beam on the underside of the ramp. Loop the S-hook through the loop end.
3. Pull the strap tight, cinching the loop around the cross beam. Find a secure place to hook the safety strap, such as a tie-down loop on the trailer. Hook the end of the strap to the trailer.
4. Tighten the strap securely and make sure the ramp is secure against the trailer.
5. Repeat steps 1-4 with the second strap.

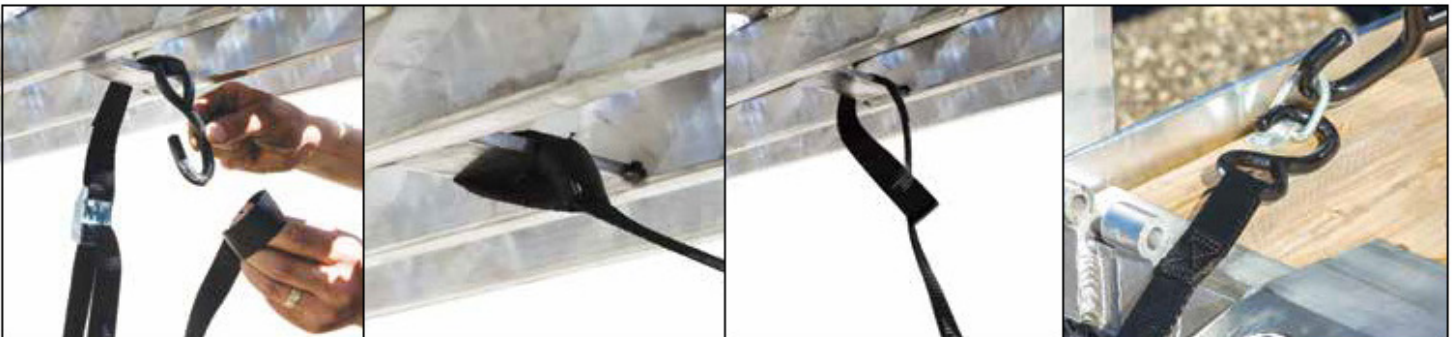

## **LOADING**

1. Start the motorcycle or ATV. Position the vehicle to ride up the center of the ramp. Be ready to put your feet down in case of a stall. Acceleration must be slow, smooth, and constant.
2. Stop when the motorcycle or ATV is in the trailer.
3. Secure the vehicle to the trailer. Remove ramp and safety straps.



## **UNLOADING**

1. Follow steps from Securing Ramp section.
2. Clear the unloading area behind the ramp.
3. Remove the tie down straps from the motorcycle or ATV.
4. Sit on the vehicle with one hand on the brake. Put up the kickstand (if applicable).
5. Wearing a helmet, back the vehicle slowly down the ramp. Using only the brake, slowly descend the ramp until the vehicle is fully off the ramp.
6. Park the vehicle. Remove ramp and safety straps.

# **PRODUCT WARRANTY & LIABILITY**

**GENERAL PRODUCT WARRANTY:** Products purchased from the Authorized Dealer (original place of purchase) or Merchant ("Dealer") will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer's website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. All Authorized Dealer warranties are NON-TRANSFERABLE and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

**\*\*\*WARRANTY CLAIMS MUST BE MADE DIRECTLY TO THE ORIGINAL PLACE OF PURCHASE.\*\*\***

**WARRANTY PERIOD:** This warranty remains in force for one year from the date of the product's accepted delivery. The Authorized Dealer offers a one year manufacturer's warranty for most products unless otherwise specified on the product advertisement.

**WARRANTY SERVICE:** The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

**WARRANTY LIMITATIONS:** The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

**LIMITED LIABILITY:** In no event shall **THE AUTHORIZED DEALER** be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

