


GPI Fuel Filter Kit

This kit includes the following items:

- 10 micron filter for particulates
- Pipe nipple for standard pipe instalation
- Aluminum adapter with 3/4" inlet and outlet ports

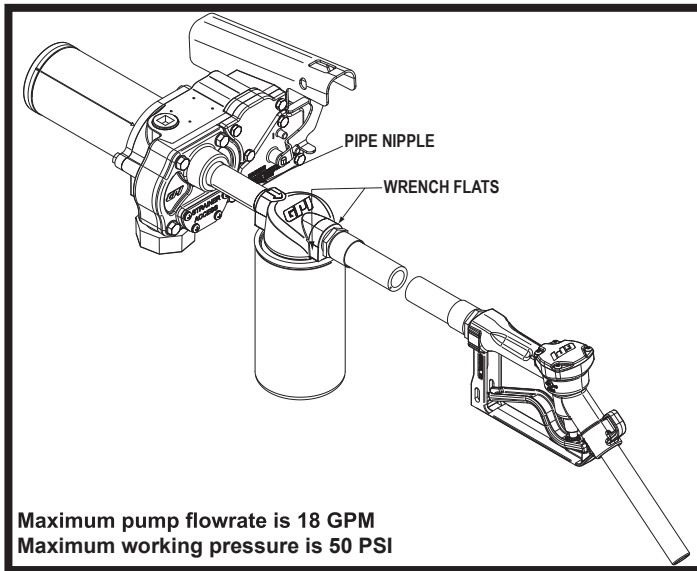

1. Turn off pump and disconnect from power.
2. Remove the fuel hose from the pump.
3. Attach pipe nipple to the outlet of the pump as shown in the illustration above.
4. Attach the aluminum adapter to the pipe nipple
NOTE: The adapter is marked with an arrow indicating flow direction through the adapter. Tighten the adapter using only the wrench flats.
5. Apply a light coat of oil to the rubber gasket on the filter.
6. Screw filter on firmly by hand. DO NOT over tighten, this can make it hard to remove later.
7. Reattach the fuel hose to the aluminum adapter.
8. When the assembly is complete check for leaks.