



2-IN-1 FLY FAN

With Bug Zapper

Thanks for purchasing another Flipo® product intended to make life a little easier. FLIPO® offers a wide variety of unique products of the highest quality. To ensure the maximum performance of your product, please read and save these instructions.

INCLUDES

- 1 x 2-In-1 Fly Fan with Bug Zapper
- 1 x USB-C Charging Cable
- 1 x Instruction Manual

Figure 1



Figure 2



USE

Before First Use

Charge your 2-In-1 Fly Fan fully before first use.

WARNING: Use the included USB charging cable with a 5 V, 1 A or 2 A USB power adapter (not included). This product is not compatible with fast-charging adapters.

To charge, plug the small end of the USB-C charging cable into the charging port on the Fly Fan. Plug the other end of the USB-C charging cable into a USB charging port or an AC adapter to use an AC outlet.

When charging, the USB-C port on the unit will light red. When charging is complete, the light will turn green (approximately 3-4 hours).

WARNING: Do not exceed 12 hours of charging time.

OPERATION

3 Function Power Switch

The power switch is located on the bottom of the Fly Fan base and has the following settings:

“1” – Fly Fan

“0” – OFF

“2” – Bug Zapper

Stand Mount

Set the power switch to desired mode and place the unit base on a flat surface in desired location. (Figure 1)

Hanging Mount

Set the power switch to desired mode. Open the integrated hanging hook located on the bottom of the unit and hang in desired location. (Figure 2)

IMPORTANT: Your Fly Fan should NOT be exposed to moisture, rain, etc., and should be used in covered areas or moved indoors when conditions warrant.

CARE

1. DO NOT use water or other liquids to clean the bug zapper grid. Ensure the power switch is in the "O" (OFF) position and use a soft dry brush to remove insect residue from the inside of the zapper and the grid. Clean the inside of the unit after each use.
2. Wipe unit body and blades with a soft dry cloth as needed.
3. When not in use for extended periods of time, the power switch should be in the "O" position and the unit should be recharged approximately every two months.

CAUTION

1. Fully charge your battery before using your product for the first time.
2. Use only the USB-C cable provided with your product to charge.
3. If your Fly Fan or Bug Zapper are weak or do not come ON, your battery needs to be recharged.
4. Do not store your product in a high-temperature environment including heat caused by intense sunlight.
5. Do not place product in fire or other excessively hot locations; exposure to fire or temperature above 212° may cause an explosion.
6. Avoid excessive impact or vibration.
7. Do not drop from high distances.
8. Do not disassemble this product or attempt to modify it in any way.
9. Do not dispose of this product in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws.
10. Turn the product OFF when not in use.
11. Keep out of reach of children.
12. **WARNING: DO NOT touch the inner bug zapper grid with your hands or metal objects.**

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
Fax: (815) 223-9266

MADE IN CHINA