

USING NOZZLE ATTACHMENTS



- Blaster comes with a large nozzle attachment installed.
- For small spaces, insert a small rubber nozzle into the large nozzle attachment.

SPECIFICATIONS

Working voltage: 6-8.4V

Charging time: 2.5 hours

Battery: 7.4V

2 x 2000mAh

Run time:

45 min (Low), 25 min (Medium),
13 min (High), 8 min (Max)

BULLSEYE™ AIR BLASTER™ RECHARGEABLE ITEM NO. 4312B
DISTRIBUTED BY EMSON® NEW YORK, NY 10001 USA
©2026 EMSON® ALL RIGHTS RESERVED. MADE IN CHINA.



BULLSEYE™

AIR BLASTER RECHARGEABLE

130,000 RPM
EXTREME
PERFORMANCE

**Blast it
Away!**
✓ **Powerful**
✓ **Cordless**



2 NOZZLE ATTACHMENTS INCLUDED



**5
YEAR
WARRANTY**

INSTRUCTIONS

PLEASE READ ENTIRE MANUAL BEFORE FIRST USE.

WARNING!

To prevent equipment malfunction, electric shock, personal injury, fire, fatality, or property damage, carefully read and follow all safety instructions below before use:

- Do not use the charging cable if it is damaged. Doing so may result in short circuit, electric shock, burns, or fire.
- Do not pull, twist, bend, modify, or damage the charging cable. Avoid placing heavy objects on it or pinching it during use. Mishandling may lead to electrical hazards or injury.
- Never plug in or unplug the charging cable with wet hands to reduce the risk of electric shock.
- Ensure the suction intake and blower outlet remain free of obstructions and foreign objects during operation. Blockages may cause equipment failure or injury.
- Do not immerse the product in water or operate it in high-humidity environments. Always keep the unit dry.
- Do not handle or operate the unit with wet hands under any circumstances.
- Keep the product away from flammable substances, including LPG, solvents, thinners, and spray aerosols. Use near such materials may cause fire or explosion due to short circuiting.
- Store the unit out of reach of children and infants to prevent accidental injury.
- Do not operate the unit near water sources such as bathtubs, sinks, or showers.
- Keep hair, clothing, and other loose items away from the blower intake to prevent entanglement.
- Use safety goggles to protect your eyes and hearing protection to guard against loud noise when operating this tool.

Discontinue use immediately if the product exhibits any abnormalities or signs of malfunction.

SAVE THESE INSTRUCTIONS

COMPONENTS




1. Air intake
2. Main nozzle
3. Power button (ON/OFF/Fan Speed)
4. Max speed button
5. Fan indicator lights
6. Charging port
7. Battery indicator lights
8. Narrow nozzle

Also included:
USB-C charging cable

CHARGING THE BULLSEYE BLASTER

To enable fast charging, use a USB power source with an output of at least 5V/2A (10W).

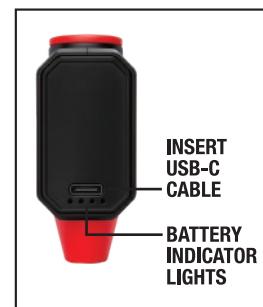

- Insert the USB-C end of the provided charging cable into the charging port located on the bottom of the unit. Insert the other end into any USB power source (USB adapter, power bank, etc.).
- The battery indicator lights will light up blue. Depending on the amount of charge left, the lights will display the following:
4 lights on = 100% power
3 lights on = 75% power
2 lights on = 50% power
1 light on = 25% or less power
- Charging time - 2.5 hours. Once fully charged, all 4 indicator lights will be on.

USING THE BULLSEYE BLOWER



Do NOT operate with exposed long hair to prevent accidentally having hair sucked into the back of the blower.



WARNING: Use safety goggles to protect your eyes and hearing protection to guard against loud noise when operating this tool.

BEFORE USE:


Make sure your Bullseye Blaster is fully charged prior to use.

TO CHECK THE CHARGE LEVEL OF THE BATTERY PACK:

Press and hold the  button and the lights on the bottom of the unit will light up blue to indicate the level of charge. When the indicator shows 1 light remaining, it is time to recharge the battery. See **CHARGING THE BULLSEYE BLASTER** above.



Press and hold the  button for **3 seconds** to put the blaster in standby mode. The blue indicator lights will turn on. To turn off the blaster, press and hold the  button for **3 seconds**.

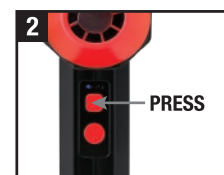

Press the  button to turn the blaster on **LOW** speed. Keep pressing the  button to cycle through the **LOW**, **MEDIUM**, and **HIGH** speed settings.

LOW	●○○
MEDIUM	○○●
HIGH	○○○



Pulse Max Speed Button: Press and hold the  button for a max burst of air. Keep holding the button down for continuous air flow. Release the button to stop the air flow.