



Biometric Keypad Fire Resistant Safe

Table Of Contents

Warnings	4
Parts Of The Safe	5
Parts of the Inside of the Safe Door	5
Parts of the Control Panel	5
Opening Safe For The First Time	6
Install Batteries	6
External Power Supply	6
Fingerprint Registration	6
Pin Codes Registration	7
Lock/Unlock Safe	7
Unlock Safe with Pin Code	7
Unlock Safe with Fingerprint	7
Lock Safe	8
Reset To Factory Default Mode	8
Lockout Mode	8
Low Battery Warning	8
Alarm System	8
Sound Off/On	8
Hide Code Function	9
Care And Maintenance	9
Mounting Instructions	10
Warranty	11

WARNINGS

- In Factory Default mode, the safe CANNOT be opened by any fingerprint. For security purposes, please promptly register your own fingerprint before starting to use the safe. The initial Pin Code is 159. Kindly follow the Fingerprint/ pin code set up to establish your personalized fingerprint/pin code.
- Register at least two different fingerprints and test them a few times before closing the safe door.
- Test with a non-registered fingerprint to ensure successful registration.
- Avoid leaving the door open and unattended, as it could allow unauthorized individuals to reprogram the safe, gaining full access to its contents.
- Do NOT store combustible materials in this unit.
- In the event of a fire, exercise caution when opening the safe. If you are unsure about opening the safe due to its contents, contact your local fire department for assistance.
- Test the Emergency Keys and store them in a secure place outside of the safe.
- Test and ensure the safe works properly before mounting.
- It is recommended to check/change the battery every 4 to 6 months.
- Mount the safe before use, as it may tip forward if not properly mounted.
- Keep children away from the safe; they should not play with or around it at any time. Children playing could accidentally get locked inside the safe or inadvertently pull on the door, causing it to tip over if not properly mounted.
- Failure to follow these warnings could result in serious injury or death

Note

 
- BARSKA is not responsible for any damage or lost contents in the safe due to moisture.
- BARSKA is not responsible if the safe or its contents gets lost or stolen.

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances

Parts Of The Safe


Parts of the Inside of the Safe Door

1. Initialization Button
Remove battery cover with a screw driver to expose the initialization button
2. Bolts
3. Battery Compartment
4. LED Light

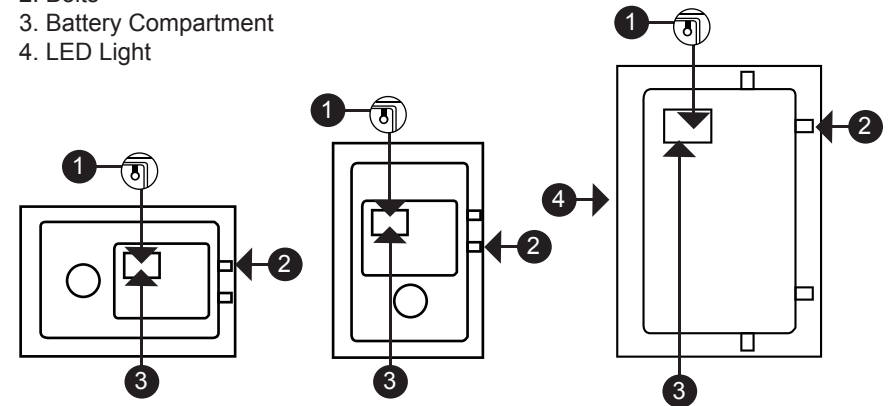

Parts of the Control Panel

 
4. Fingerprint Scanner
5. Keypad
6. Emergency Lock Cover
To remove the key cover, gently press the right side of the key cover to release the magnet, then lift it away with your other hand.
7. Type-C Socket
8. Handle

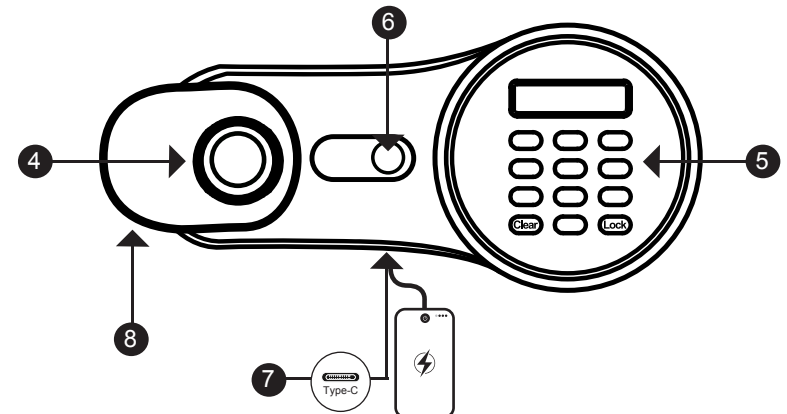

*Actual model may vary

Opening Safe For The First Time

 1. Remove the key cover.
2. Insert the emergency key.
3. Turn the key clockwise.
4. Turn the handle anticlockwise (downward) to open the safe door.

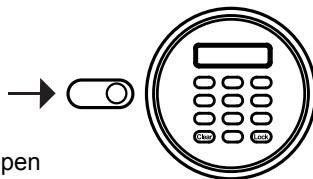

Install Batteries

1. Open the safe door.
2. Remove the battery cover with a screw driver.
3. Insert 4 AA alkaline batteries into the battery compartment.
4. The safe will perform a self-test.
5. The display will count down from 9 to 0, then show GOOD, confirming proper installation.

 
Note:

- Use only alkaline batteries.
- DO NOT mix new and old batteries.
- DO NOT mix different battery types.

External Power Supply


Type-C Socket is located on the bottom of the keypad. In the event of a battery failure, can be accessed from the power source.

1. Prepare a mobile power bank with a Type-C plug.
2. Connect the power bank to the Type-C socket on the safe keypad (see PARTS OF THE CONTROL PANEL).
3. Open the safe using your registered fingerprint or PIN code.

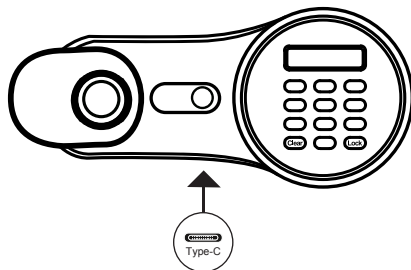

Fingerprint Registration

 1. Open the safe door.
2. Press and release the Initialization Button inside the safe.
 - You will hear one beep.
 - The display and fingerprint scanner will flash.
3. Place your finger on the scanner, then remove it. You will hear one beep.
4. Repeat the scan two more times.
5. You will hear two beeps, and the scanner will flash twice.
6. The fingerprint is successfully registered.

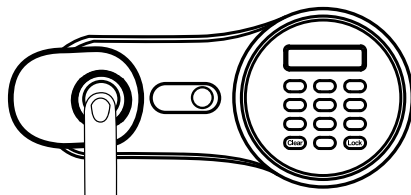

Fingerprint Registration can be stored up to Maximum 100 different fingerprints.

Fingerprint Registration Tips:

 
- DO NOT use fingers with cuts or scars.
- Ensure fingers are clean and dry.
- Place finger flat in the center of the scanner.
- In cold or dry conditions, moisturize and rub hands before scanning.
- Test an unregistered finger to confirm the safe remains locked.

Pin Codes Registration

Default PIN code: 159

Pin Code length: 3-8 digits

1. Open the safe door.
2. Press and release the Initialization Button.
 - You will hear one beep.
3. Enter your new PIN code.
4. Press LOCK to confirm.

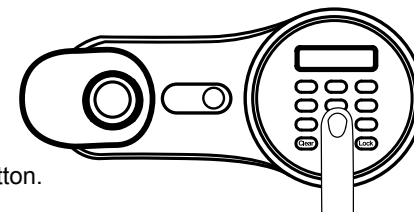

Important

- Test the new PIN code to confirm successful registration.
- Follow the Lock/Unlock Safe instructions to verify proper function.

Lock/Unlock Safe

Unlock Safe with Pin Code

1. Press the LOCK button to activate the keypad.
2. Enter your registered PIN code (3–8 digits).
3. The display will show OPEN.
4. Turn the handle anticlockwise (downward) to open.

Unlock Safe with Fingerprint

 
1. Place a registered finger on the fingerprint scanner.
2. The display will show OPEN.
3. Turn the handle anticlockwise (downward) to open.

Note:


Fingerprints cannot open the safe in Factory Default Mode until registered.

Lock Safe

1. Close the safe door.
2. There are two types of keypads. Please check which one you have and see how the handle is used to lock the safe door.

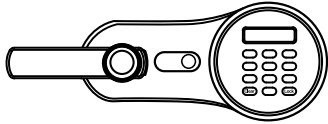

 Handle will automatically return to the horizontal position.

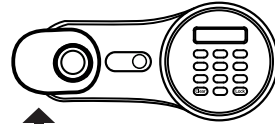

Turn the handle clockwise (upward) to close the door.

3. The safe is now locked.

Reset To Factory Default Mode

1. Open the safe door.
2. Press and hold the Initialization Button for 3–4 seconds.
3. Release when you hear two beeps, the safe is back to factory default mode.

Note:

- Default PIN Code: 159
- All registered fingerprints will be deleted.
- Sound will be enabled.
- Any Fingerprints CANNOT open the safe in Factory Default Mode

Lockout Mode

- After 5 consecutive incorrect entries, the safe will beep for 30 seconds.
- The keypad and fingerprint scanner will be disabled for 3.5 minutes.

Low Battery Warning

When pressing “Lock” to wake up the safe, the display show “LO-BATTE” means the battery is in low voltage. Please replace all batteries.

Alarm System

- Press “0” while the safe is in sleep mode to activate the vibration alarm system.
- When activated, the alarm will sound if the safe is moved or shaken.
- To terminate the alarm, enter the correct password or use a registered fingerprint.
- After opening the safe to terminate the alarm, please press “0” to re-activate the alarm system.

Sound Off/On

Press the CLEAR button to toggle sound. Display will show “SOUND OFF” or “SOUND ON”

Hide Code Function

1. Press LOCK to wake the keypad.
2. Press CLEAR.
3. Enter your PIN code.
4. The display will hide the numbers during entry

Note:

 
Repeat the above steps to Show pin code

Care And Maintenance

- To maximize the security and performance of the safe, keep Fingerprint Scanner clean; use a dry cloth to remove any smudges or prints off the Fingerprint Scanner after each use.
- Test registered fingerprints and PIN code every 6 months.
- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.

Mounting Instructions

The safe can be mounted to the floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

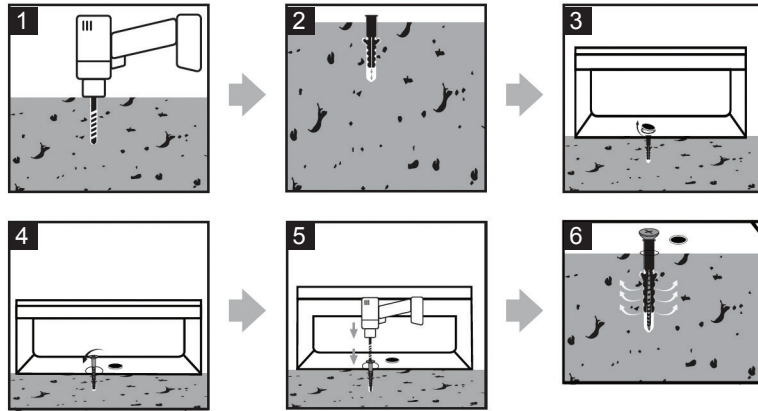

Floor Mounting

1. Drill a hole in the ground where the installation is required with an electric drill, ensuring the hole is the same size as the expansion tube.
2. Insert the expansion tube into the hole.
3. Remove the mounting hole cover at the bottoms on the safes.
4. Make the fixing screw to pass through the mounting holes on the safes and the hole which you just drilled.
5. Tighten the screws with a screwdriver or an electric drill.
6. After being subjected to force, the expansion pipe opens and its tail against the wall.

1 YEAR LIMITED WARRANTY

SAFE/LOCK BOX

BARSKA warrants this new safe/lock box to be free of defects in material and/ or workmanship under normal use for a period of twelve (12) months from the date product is purchased. This limited warranty is delimited to repair or replacement only. This warranty does not cover damage caused by improper installation or maintenance. BARSKA disclaims all liability for incidental or consequential damages resulting from misuse, abuse, accident (such as dropping), fire, flood, service or repairs other than those performed by BARSKA, acts of nature, or arising out of any breach of this warranty. Altering the product under any circumstances will automatically void the warranty.

For service under this limited warranty, please have available the proof of purchase and the purchase date and location as well as a detailed description of the problem. This warranty is not transferable and only applies to the original purchaser with a proof of purchase from BARSKA or from an authorized dealer. This warranty applies only to products purchased within the United States, excluding Alaska, the Hawaiian Islands and all U.S. territories in the Caribbean and the Pacific.

BARSKA will examine and go through troubleshooting procedures, product repair or replacement of defective part(s) or units with new part(s) or provide a new unit, if necessary, during the warranty period. Reasonable shipping/handling charges may apply and are based on Barska sole discretion. Purchaser shall be required to prepay Shipping/handling charges with a check or money order to BARSKA at time product is returned. The Return Merchandise Authorization Number (RMA#) and shipping/handling charge MUST be obtained from BARSKA in advance of return. BARSKA shall not be liable for damages or loss occurring during shipping. Please visit via www.barska.com or call 909.445.8168 to obtain the RMA#, Shipping/handling amount, and for more information.

BARSKA reserves the right to modify or discontinue, without prior notice to the purchaser, any model or style of the product. BARSKA will determine, at its sole discretion, whether a product will be repaired or replaced. BARSKA reserves the right to discontinue or change any feature of its products at any time. If an exact replacement or product is not available, BARSKA reserves the right to provide a part or product that matches as closely as possible.

LIMITATION OF REMEDIES

BARSKA disclaims any warranties, express or implied, whether of merchantability or fitness for a particular use, except as expressly set forth herein. The sole obligation of BARSKA under this limited warranty shall be to repair or replace the covered product, in accordance with the terms set forth herein. BARSKA expressly disclaims any lost profits, general, special, indirect or consequential damages which may result from breach of any warranty, or arising out of the use or inability to use any BARSKA product. Any warranties which are implied and which cannot be disclaimed shall be limited in duration to a term of one year from the date of original retail purchase.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

BARSKA
855 Towne Center Drive, Pomona, CA 91767