



Upgrade · The Home Creator Way

Water Dispenser With Ice Maker


Model:HZBY-15AL

VEVOR Support Center



HZBY-15AL

MODEL:HZBY-15AL

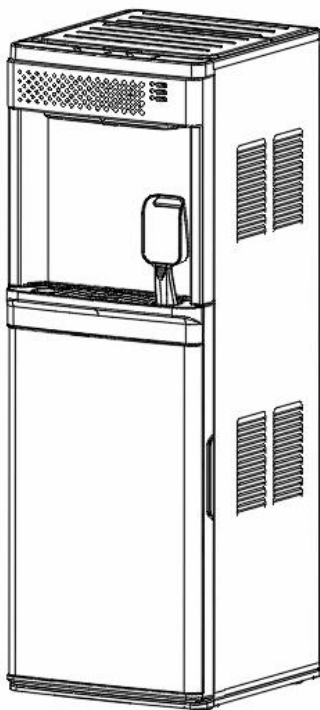

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Please scan the QR code to get the operation guide
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property.

Read all instructions before using any appliance.

- Do not operate this, or any other appliance with a damaged cord.

Connect to properly polarized outlets only. No other appliance should be

plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.

- Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.
- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
- If the unit is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.
- Do not let hot water touch bare skin. Exercise caution and use reasonable supervision when appliance is used near children.
- Do not use your unit outdoors.

Locate the unit at a even or flat surface, to avoid a hazard due to instability of the appliance.

- And place the unit away from direct sunlight and make sure that there is at least 2 inches of space between the back of your unit and wall. Keep a minimum distance of 4 inches on each side of your unit free.
- Do not tip over the unit.
- Do not use other liquid to make the ice-cube or dispense the cold drink other than water.
- Always turn off the unit and unplug when there is no water left in the bottle or when you are changing the bottle.
- Unplug the unit before cleaning or making any repairs or servicing.
- Do not clean the unit with flammable fluids. The fumes can create a fire hazard or explosion.
- Disconnect the mains plug from the supply the supply socket when not in use or you go to have the travel for the holiday, where supply connection is via mains plug.

WARNING: This appliance must be earthed.



WARNING Warning-To reduce the risk of injury, user must read instructions manual carefully.



WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



WARNING This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.



WARNING Children shall not play with the appliance.



WARNING This appliance is intended to be used in household.



WARNING Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.



WARNING Please use the product according to the intended use, warn of potential injury from misuse.



WARNING Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.



WARNING always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning



WARNING WARNING: Only use the supply unit provided with this appliance.



WARNING If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



WARNING This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.

WARNING: Do not damage the refrigerant circuit.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.



Actions or operations that must be prohibited



WARNING If the operation is wrong, the user may be injured



CAUTION - Risk of fire or explosion due to puncture of refrigerant tubing; follow handling instructions carefully. Flammable refrigerant Used.



IMPORTANT:

The wires in this mains lead are colored in accordance with the following code:

Green or Green with a strip yellow: Grounding


White: Neutral

Black: Live

WARNING: fill with potable water only.

GETTING TO KNOW YOUR UNIT

General instruction

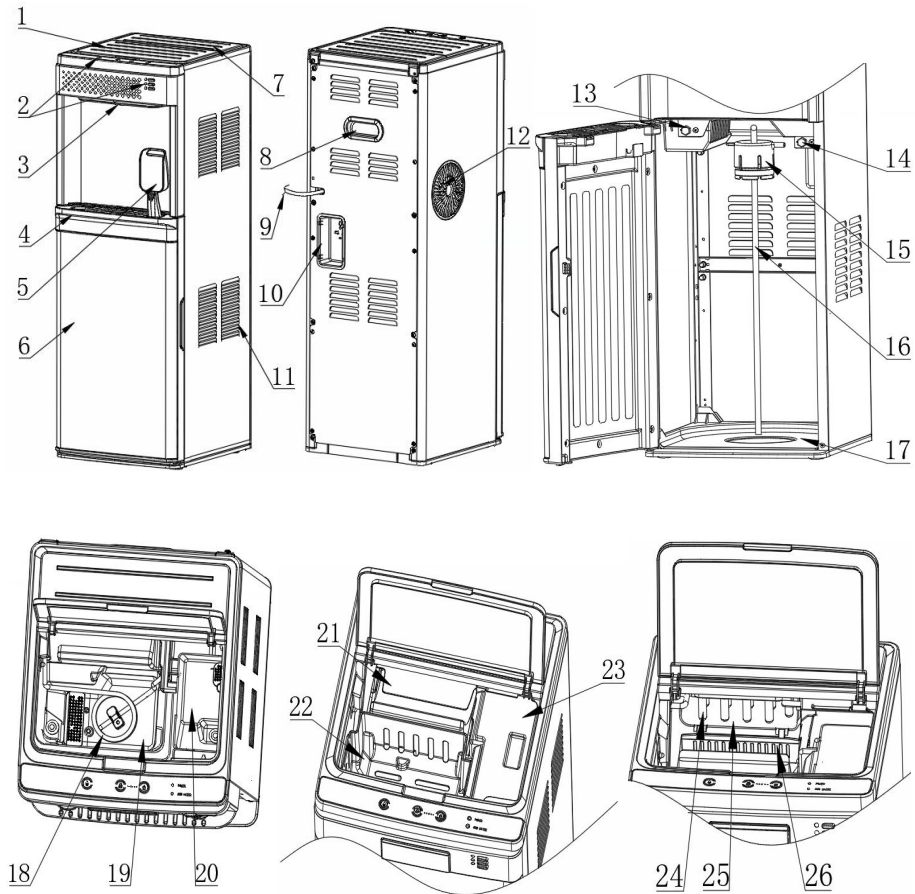


1. Front upper cover	10. Power plug location	19. Cold water tank
2. Control panel	11. Air inlet	20. Water tank
3. Water outlet	12. Air outlet	21. Silicon pad
4. Detachable water tray	13. Cold water tank drain outlet	22. Ice basket

5.Ice scoop	14. Hot water tank drain outlet	23. Water tank cover
6.Front door	15.Bucket lid	24. Ice making evaporator
7.Rear upper cover	16.Water inlet silicone tube	25.Ice-making box
8.Handle	17.Base	26. Ice shovel
9.Power cord	18. Stainless steel evaporator	

Come equipped with the ice scoop, allowing for easy and hygienic handling of ice


GETTING TO KNOW YOUR UNIT

Control panel

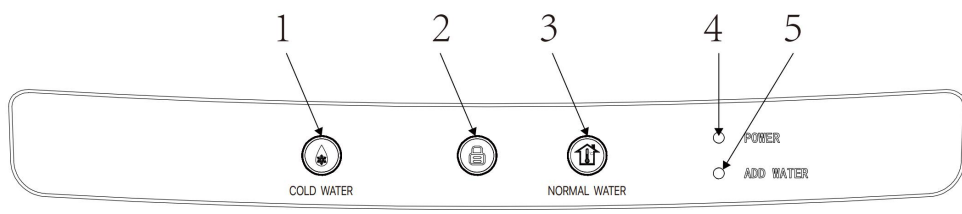

1.Cold water button	4.Power indicator
2.Child lock button	5. Water shortage indicator
3. Normal water button	

When lack of water, the “ADD WATER” indicator light will be red

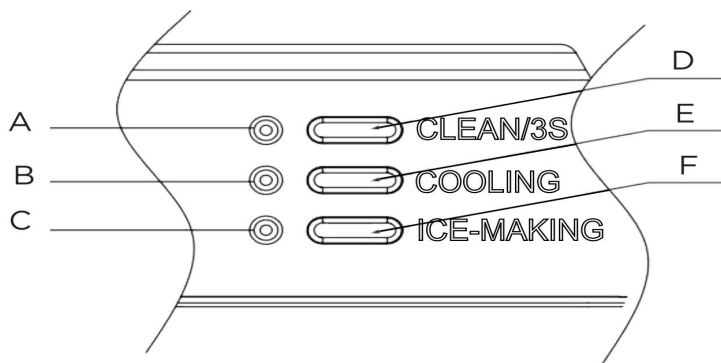

A. Cleaning indicator light	D. Cleaning button
B. Cooling water indicator light	E. Cooling button
C. Ice making indicator light	F. Ice making button

	Power	Add water	Cold Water Dispenser	Child Lock	Cooling	Ice-Making
White LED Solid	Power indicator	\	Cold water outlet	Lock hot water button	Cooling	Ice-Making
White LED Flashing	Ice jam fault (abnormal flipping)	\	\	\	\	\
Red LED Flashing	\	Water shortage	\	\	\	\
Green LED Solid	\	\	\	\	Cold water temperature ($\leq 47^{\circ}\text{F}$)	Ice Full

START TO OPERATE YOUR UNIT




Unpacking the unit

1. Removing the package, do not turn the unit upside down, or lay it on its side.
 - a. Remove the strapping.
 - b. Open the cartoon box.
 - c. Pull the unit straight up from the box.
 - d. Remove the plastic bag.
 - e. Remove the Styrofoam packing from the box.
 - f. Check if there is a water tray and ice scoop, if any accessories are missing please contact the customer service department.
2. Wipe it clean if necessary.
3. Place the unit on the hard and flat ground and let it sit for 2 hours. Pay attention to put it evenly and moderately. The location should be far away from direct sunlight and other source of heat.
4. Please locate the unit at the place which have the good air circulation condition. And make sure that there are at least 6.3 inches on both sides and between the back of unit and the wall. And far away from high temperature surrounding and prevent it from being exposed in the sunlight.
5. The appliance must be positioned so that the plug is accessible.
6. Open the front door and fasten the drain nut tightly on the drain outlets of the unit before start to run the unit. Because during the shipping process, it maybe has loosed. When you not fasten it again, it will cause the water leakage and make your floor wet.
7. Do not plug the power cord into the power socket yet! Read the instructions first.
8. This unit is for indoor use only. Room temperature should not exceed 97°F.

CARE AND CLEANING

Before using your unit or after using the machine for three months, it is strongly recommended to clean it thoroughly.

1. Flip up the front cover, lift up the ice basket and slide it towards the middle to remove the water tank cover. Clean the cold water tank and the water tank with warm water; Clean the removed accessories with warm water and a soft cloth.

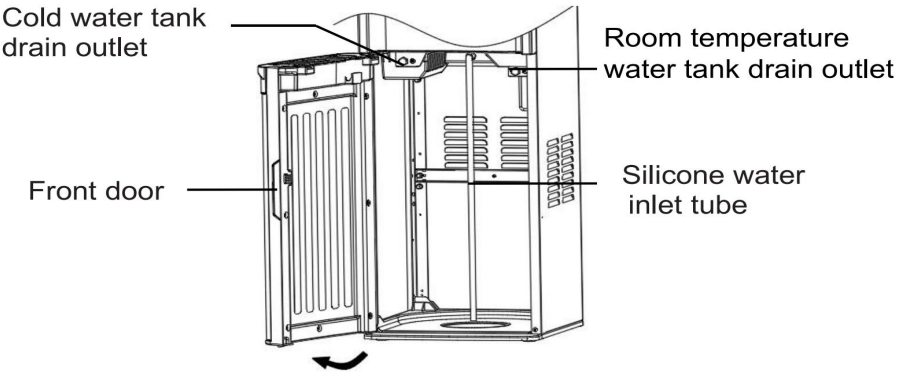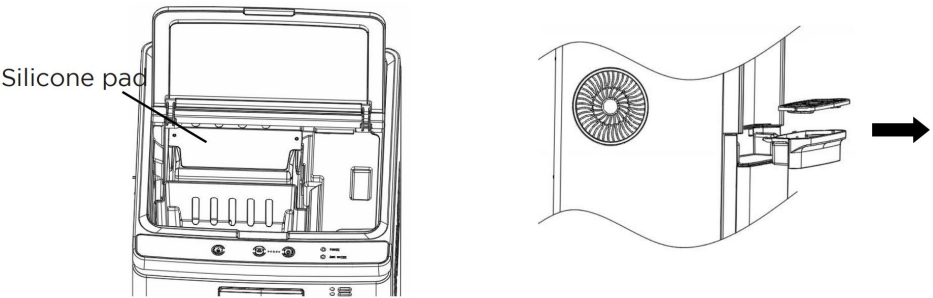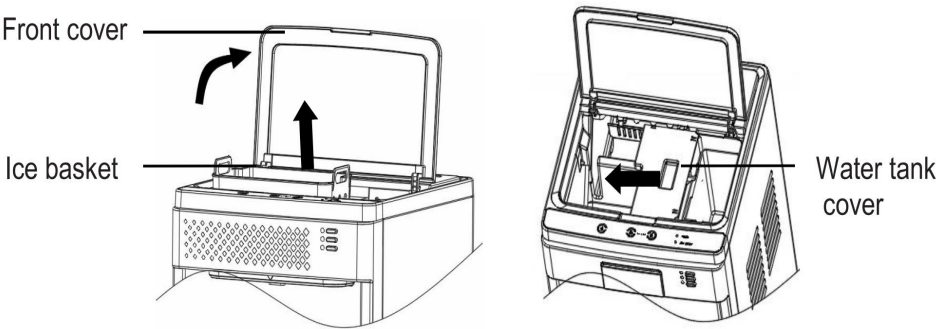

2. Take out the silicone pad, wash it with clean water and dry it with a cloth, then put it back in its original place. The silicone pads can effectively reduce the noise of ice falling.
3. Clean the stainless steel evaporator and the ice making evaporator column with water or alcohol.
4. Add water to the water tank and cold water tank, and clean the water tank and cold water tank with diluted cleaning agent, warm water, and a soft cloth.
5. Open the front door and clean the silicone water inlet tube with water or alcohol.
6. After cleaning thoroughly, anticlockwise open the drain nut on the drain outlets, open the drain plug to drain the water from the water tank and cold water tank, clean it several times repeatedly, and then reinstall the drain plug and drain nut.
7. The exterior of the machine should be frequently cleaned with agents and warm water.
8. During the use of the machine, after the water tray is full, it can be disassembled, the waste water inside can be poured out and cleaned.
9. When the machine is not in use for a long time, the water in the machine should be drained and the inside of the machine should be wiped dry.


USING YOUR UNIT

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service.

1. Make sure that the unit is not plugged into the main electrical outlet.
2. Before placing drinkable water bottle on the unit, be sure that the drain nut is tightly fastened.
3. Use the water bucket lid to push down and open the lid on the drinking water bucket (as shown in the following figure). Place the water inlet silicone tube into the drinking water, cover the bucket lid, and then place

the drinking water bucket on the base.

4.If the unit is brought in from outside in winter time, give it a few hours to warm up to room temperature before plugging it in.

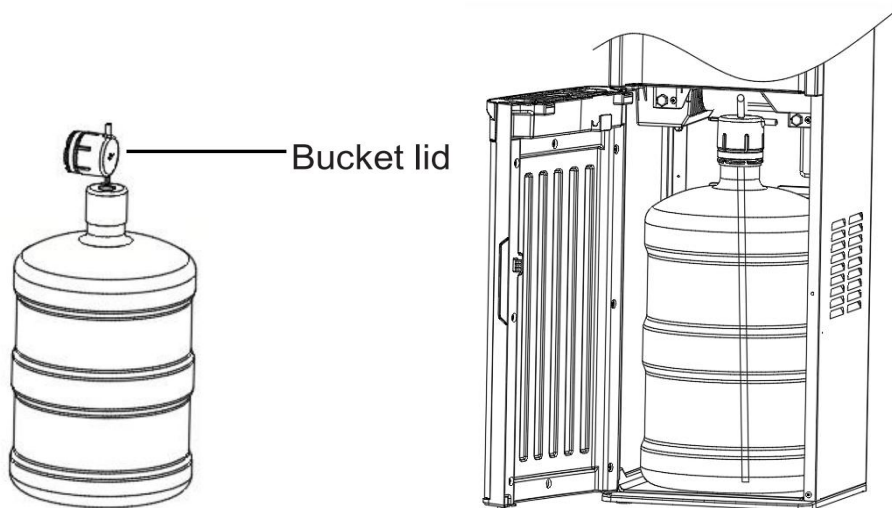

DANGER: This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three-prong wall outlets to minimize the possibility of electric shock. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician. This appliance requires a standard 110-120volt, 60Hz electrical outlet with three-prong ground.

After plugging in the main power outlet, the POWER indicator on the control panel will be on. Then you can start to operate the hot water, cold water and ice-making function as your desired.

Cleaning Function

1. Unplug the power cord. First, drain all the water from the cold tank, then

close the Cold Water Tank Drain Outlet.

2. Open the Front Upper Cover, take out the Ice Basket, and pour 1.5 liters of water into the Cold Water Tank.

3. Plug in the power cord. Press and hold the cleaning switch for 3 seconds; the machine will enter the cleaning mode. At this time, the cleaning indicator light will flash white, and the rinsing process will end after 30 minutes.

4. Unplug the power cord again, open the Cold Water Tank Drain Outlet to drain all the water from the cold tank, then put the Ice Basket back. The cleaning is now complete.

During the cleaning process, short-press the cleaning button to exit the cleaning mode and return to the standby state.

Ice-making operation

Press the "ICE-MAKING" button, the corresponding ice making indicator light(white) will light up, the ice making function will be turned on, and the ice making time is generally around 7 minutes per time (depending on the added water temperature and ambient temperature); When the ice making indicator light(green) is constantly on, it indicates that the ice storage is full. Remove the ice cubes from the box and restart the ice making process.

Cold water and ice-making operation

Press the "COOLING" and "ICE-MAKING" buttons, the corresponding two indicator light(white) will light up, the function will be turned on, and the cold water and ice making buttons will be turned on at the same time. The ice making work will be prioritized. After making ice, if the cold water temperature does not reach the set temperature, enter the cold water mode again.

How to get the room temperature water

Click the child lock  button, and the child lock light will turn off. Within 3 seconds, click the "NORMAL WATER" button, and the room

temperature water indicator light will remain on. The water outlet will start to produce room temperature water, with a single output of about 2 minutes. During the room temperature water process, you can click the room temperature water button again to end the room temperature water supply and turn off the indicator light.

How to get the cold water

Click the child lock  button, and the child lock light will turn off. Within 3 seconds, Click the cold water "COLD WATER " button, the cold water indicator light will remain on, and the water outlet will start to discharge cold water. The amount of cold water discharged per time is about 2 minutes. During the process of cooling water, you can click the cold water button again to end the cold water process and turn off the indicator light.

How to get the ice

Open the front cover, use an ice spoon to remove ice cubes and place them in the container you have prepared. After removing the ice, close the front cover.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSES	SOLUTION
“ADD WATER” indicator light turns on.	Lack of Water.	Replace the drinking water bucket
“ICE-MAKING” indicator light(green) turns on.	1. Too many ice cubes in the ice basket. 2. The ice full sensor is broken,and the ice full light is constantly on without ice.	1. Remove the ice cubes from the ice basket. 2. After pressing the “ICE -MAKING” button for more than 5 seconds,the ice maker can be forcibly turned on and run for 10 cycles,or contact the manufacturer to replace the sensor.
“POWER” indicator light flashes.	The ice-making box is stuck.	If the ice block gets stuck in the ice-making box,remove the ice block otherwise,please consult the after- sales service personnel.
Ice are connected together.	The ice making cycle time is too long too much immersion of the evaporator into the ice making box.	Stop ice making,wait for the ice cubes to melt,and restart ice making adjust the evaporator.
	The water temperature	Replace the water in the

	inside the water tank is too low.	water tank. The water temperature should ideally be between 46°F and 90°F.
The ice making process is normal, but no ice.	The ambient temperature or water temperature is too high.	Please make ice when the ambient temperature is below 90°F and add a certain amount of cold water to the water tank.
	Refrigeration system leakage.	Contact after-sales service personnel.
	Blockage of refrigeration system.	Contact after-sales service personnel.

