



BULLSEYE™ BLOWER

RECHARGEABLE



24,000 RPM
HIGH PERFORMANCE



**Blast it
Away!**
✓ **Powerful**
✓ **Cordless**

2-BONUS EXTENSION TUBES



5 YEAR
WARRANTY

20V
LI-ION
BATTERY
INCLUDED



BULLSEYE™
LITHIUM ION 20V 3.0Ah

INSTRUCTIONS

BULLSEYE™ RECHARGEABLE BLOWER ITEM NO. 4116VT
DISTRIBUTED BY EMSON® NEW YORK, NY 10001 USA
©2026 EMSON® ALL RIGHTS RESERVED. MADE IN VIETNAM.

PLEASE READ ENTIRE MANUAL BEFORE FIRST USE.

WARNING!

To prevent equipment malfunction, electric shock, personal injury, fire, fatality, or property damage, carefully read and follow all safety instructions below before use:

- Do not use the charging cable if it is damaged. Doing so may result in short circuit, electric shock, burns, or fire.
- Do not pull, twist, bend, modify, or damage the charging cable. Avoid placing heavy objects on it or pinching it during use. Mishandling may lead to electrical hazards or injury.
- Never plug in or unplug the charging cable with wet hands to reduce the risk of electric shock.
- Ensure the suction intake and blower outlet remain free of obstructions and foreign objects during operation. Blockages may cause equipment failure or injury.
- Do not immerse the product in water or operate it in high-humidity environments. Always keep the unit dry.
- Do not handle or operate the unit with wet hands under any circumstances.
- Keep the product away from flammable substances, including LPG, solvents, thinners, and spray aerosols. Use near such materials may cause fire or explosion due to short circuiting.
- Disconnect the battery pack from the device before storing to prevent accidental operation or damage.
- Store the unit out of reach of children and infants to prevent accidental injury.
- Do not operate the unit near water sources such as bathtubs, sinks, or showers.
- Keep hair, clothing, and other loose items away from the blower intake to prevent entanglement.
- Use safety goggles to protect your eyes and hearing protection to guard against loud noise when operating this tool.

Discontinue use immediately if the product exhibits any abnormalities or signs of malfunction.

SAVE THESE INSTRUCTIONS

COMPONENTS



CHARGING THE BULLSEYE BATTERY PACK

Important! Charge the battery pack at least 3 hours before first use.
WHEN NOT IN USE, DO NOT STORE WITH THE BATTERY PACK ON THE UNIT.



Remove the battery pack from the bottom of the unit by pressing down on the release button and sliding it out as shown above.



- Connect one end of the battery charger into the battery pack and the other one into the wall outlet.
- The charging indicator will light up red. Once fully charged, the light will turn green. Charging time - up to 3 hours. Note: For optimal battery lifetime, we recommend not charging the battery for more than 5 hours at a time.



- Align the grooves on both the battery pack and the main unit. Slowly slide it in until it clicks.

PLEASE NOTE:

Failure to fully charge the battery will result in shorter life, and worse performance. If run time has drastically reduced over time, it is time to replace the battery. Please visit www.emsoninc.com to purchase a replacement.

- Run time will vary depending on the battery level, the pressure load during use, and the operating conditions.
- Cold temperature conditions will reduce battery run-time.

USING THE BULLSEYE BLOWER



Do NOT operate with exposed long hair to prevent accidentally having hair sucked into the back of the blower.



WARNING: Use safety goggles to protect your eyes and hearing protection to guard against loud noise when operating this tool.

BEFORE USE:

Make sure your battery pack is fully charged prior to use.

HOW TO KNOW WHEN THE BATTERY IS FULLY CHARGED

The AC wall charger indicator is the **ONLY** way to confirm a full charge.

- **Red LED** on AC wall charger light = Battery is charging
- **Green LED** on AC wall charger light = Battery is fully charged (100%)


Always wait until the AC wall charger light turns **GREEN before using the battery.**



UNDERSTANDING THE BATTERY PACK INDICATOR LIGHTS

The indicator lights on the battery pack show voltage level only. They do NOT show remaining battery charge (%) and do NOT indicate charging status.

- Battery lights only turn on when the button on the indicator is pressed and held down.

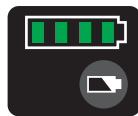

- **Battery lights do not turn on during charging.**
- **Four green lights do NOT mean the battery is fully charged. Refer to HOW TO KNOW WHEN THE BATTERY IS FULLY CHARGED above.**

Battery Voltage Indicator button

IMPORTANT: Run time may be short if charging is stopped early.


Lithium-ion batteries can show high voltage early in the charge cycle. Stopping charging too soon may result in short runtime. This is normal behavior and does not indicate a defective battery.



Press the trigger button to start blowing air. Control the speed/power of the motor with just a press of a trigger button:

- Hold down for more power
- Let go for slower flow
- Release to fully stop

USING LONG AND SHORT EXTENSION TUBES

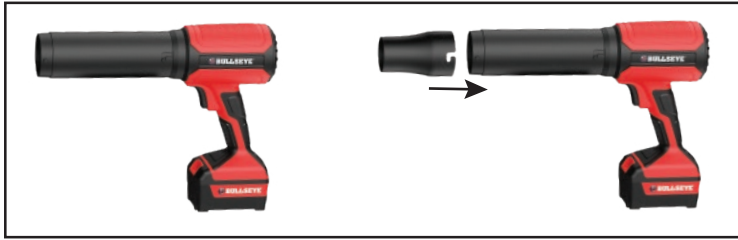

- For more coverage, attach the long extension tube to the end of the blower.
- Align the openings on the extension tube with the blower and twist it clockwise to secure.
- Optional: For narrow spaces add the long and short extension tubes together.

STORAGE

NOTE: DO NOT STORE WITH BATTERY PACK INSTALLED IN UNIT.



If battery pack has been previously installed, remove it from the bottom of the unit by pressing down on the release button and sliding it out as shown on left.

Important: Bullseye™ Blower cannot be stored with the battery pack attached to the unit.

SPECIFICATIONS

350 Watts

Max: 24000 RPM

Battery Pack: 20V

3000mAh (3.0A)

BATTERIES AND THE ENVIRONMENT

This product uses a Lithium Ion rechargeable battery. The battery pack is recyclable. At the end of the battery pack's useful life, the unit should be recycled or properly disposed of. Do not discard in a landfill or with household waste material. Do not incinerate. Contact your local city officials for battery disposal information. In accordance with the law, electric tools which have reached the end of their life, must be collected separately and returned to an environmentally compatible recycling facility.

Battery should always be removed from the Bullseye™ Rechargeable Blower after use to prevent battery lifetime loss and for proper storage. Always store in a cool, dry place.

FCC / IC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesirable operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus complies with CAN ICES-003(B)/NMB-003(B).

Responsible Party: EMSON, 230 Fifth Ave., #800, NY, NY 10001, USA (212) 689-9094