
Operation Manual Pickup Truck Crane with Winch



The pictures just for reference.

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.
The information contained in this document is subject to change without prior notice.

Thank you for purchasing this quality product.

IMPORTANT: Please read these instructions carefully. Note the safe operational requirements, warnings and cautions.

INTRODUCTION

This engine crane is intended to be used to remove, install and transport automotive and light truck engines as well as engine assemblies in the lowered position within rated capacity. It must be used with an appropriately rated engine leveler, sling and/or chains which are NOT INCLUDED. After removing, immediately transfer the lead to an appropriately rated work station such as an engine stand.

TECHNICAL DATA

Crane with capacity:	2000 LBS	1000 LBS
----------------------	----------	----------

SAFETY INSTRUCTIONS

- 1) **Keep work area clean.** Cluttered areas invite injuries.
 - 2) **Observe work area conditions.** Do not use machines in camp or wet locations. Do not expose to rain. Keep work area well lit.
 - 3) **Keep children away.** Children must never be allowed in the work area.
 - 4) **Store idle equipment.** When not in use tools must be stored in a dry location to inhibit rust. Always lock up tools and keep out of reach of children.
 - 5) **Use the right tool for the job.** There are certain applications for which this tool was designed. It will do the job better and more safely at the rate for which it was intended. Do not modify this tool and do not use this tool for a purpose for which it was not intended.
 - 6) **Dress properly.** Do not wear loose clothing or jewelry as they can be caught in moving parts. Protective, electrically nonconductive clothes and nonskid footwear are recommended when working. Wear restrictive hair covering to contain long hair. Wear heavy work gloves when working. Always wear approved impact safety goggles.
 - 7) **Do not overreach.** Keep proper footing and balance at all times.
 - 8) **Maintain tools with care.** Keep tools clean for a better and safer performance. Follow instructions for lubricating and changing accessories.
 - 9) **Stay alert.** Do not operate any tool when you are tired.
 - 10) **Check for damaged parts.** Before using any tool, any part that appears damaged should be carefully checked to determine what it will operate properly and perform its intended function.
 - 11) **Replacement parts and accessories.** When servicing, only use identical and original spare parts. Only use accessories intended for use with this tool.
 - 12) **Do not operate tool if under influence of alcohol, drugs and medication.**
 - 13) **Never exceed the maximum lifting capacity. Beware of Dynamic Loading!** Swinging or allowing a load to suddenly jerk on the chain of the crane may create, for a brief instant, an excess load, which may result in damage to the product, damage to the load, SERIOUS PERSONAL INJURY, and/or DEATH.
-

14) Maintenance. For your safety, service and maintenance must be performed regularly by a qualified technician. In case of any questions contact the manufacturer or an authorized service partner.

15) Not to be used for aircraft purposes!

16) Do not attempt to move the crane when under load. The swivel Casters are not designed to be rolled when the crane is lifting a weight.

MAINTENANCE


- 1) Check all of the mounting hardware before each use and make sure it is safe to use the crane.
- 2) Make sure the hook and chain are clean of dirt, grease or debris.
- 3) If the jack is not performing to satisfaction, there may be air in the hydraulic system. To purge the system of the air, follow these instructions:
 - a. Make sure the ram is completely lowered.
 - b. Remove the oil fill plug and top off with hydraulic fluid.
 - c. Raise the ram to maximum height.
 - d. Loosen the release valve and push the ram all the way down.
 - e. Top off with hydraulic fluid and replace the plug. Repeat if necessary.
- 4) To clean we recommend to use a damp cloth and mild detergent. Do not use solvents or flammable agents.
- 5) If lifting performance of the foldable shop crane begins to diminish, check the hydraulic oil level in the oil tank. If necessary, top off the oil tank with hydraulic oil.

OPERATION INSTRUCTION

- 1) To raise the extension boom, close the release valve on the hydraulic ram. Pump the handle until the extension boom reaches the desired height.
 - 2) To extend the length of the extension boom, remove bolt and nut. Pull out on the extension boom until the desired extension hole in the boom aligns with the hole in the extension boom. Then re-insert the bolt through the holes in the boom and extension boom and lock the bolt in place with the nut.
 - 3) **WARNING! Do not exceed the maximum lifting capacities of this tool.** Exceeding the maximum lifting capacities could cause personal injury and/or property damage. **The longer the extension boom is extended, the lower is the lifting capacity of this foldable crane.**
 - 4) Position the foldable crane so that the hook is directly above the object you wish to lift.
 - 5) **WARNING!** Stay clear of the foldable crane. Never go under an object being lifted by the crane. It is possible for the hook to slip causing an object to fall. This might result in serious injury and/or property damage. Always monitor the object being lifted so it does not rock back and forth.
 - 6) Open the release valve slightly to lower the hook. Attach the hook to the object you are lifting and make sure the safety latch on the hook is fully closed. Then close the release valve and pump the handle to raise the object. Carefully move the crane to the location where you wish to lower the object, i.e. an engine stand, proper support, floor surface etc. Then lower the object by opening the release valve slightly.
-

- 7) Once the object is fully lowered, disconnect the hook from the object. If not needed anymore, store the crane (unfolded or folded) in a clean, dry, safe location and out of reach of children and other unauthorized people.

MAIN CONSTRUCTION

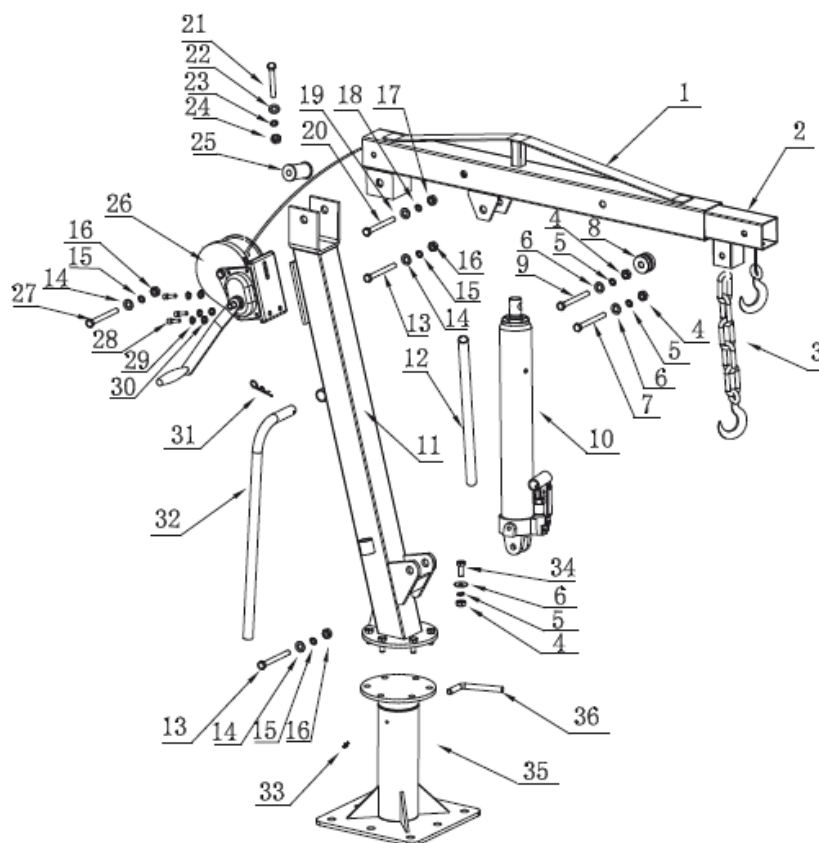

PART NO	DESCRIPTION	QTY	PART NO	DESCRIPTION	QTY
1	Boom	1	19	Falt	1
2	Extension boom	1	20	Bolt	1
3	chain	1	21	Bolt	1
4	Nut	8	22	Falt	1
5	Washer	8	23	Washer	1
6	Falt	8	24	Nut	1
7	Bolt	1	25	Roller wheel	1
8	Iron wheel	1	26	Winch	1
9	Bolt	1	27	Bolt	1
10	Cylinder	1	28	Bolt	3
11	Support post	1	29	Washer	3
12	Handle	1	30	Falt	3
13	Bolt	2	31	R pin	1
14	Falt	3	32	Handle	1
15	Washer	3	33	Grease fitting	1
16	Nut	3	34	Bolt	6
17	Nut	1	35	Base	1
18	Washer	1	36	Lock bolt	1