



**Upgrade · The Home Creator Way**

## **PORTABLE PRESSURE WASHER**

**MODEL:C8**


**VEVOR Support Center**



**C8**



### MODEL:C8

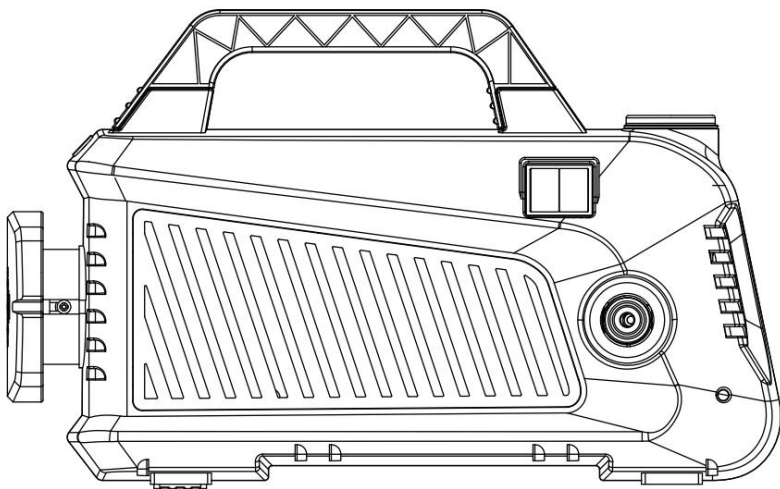

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please note that the product is subject to technological and software updates without prior notice.




Warning-To reduce the risk of injury, user must read instructions manual carefully.

|                                                                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.</p>                                                                                                                                                                            |
|  | <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p> |

## INSTRUCTIONS

Thank you very much for choosing this Portable Pressure Washer . Please read all of the instructions before using it.The information will help you achieve the best possible results.

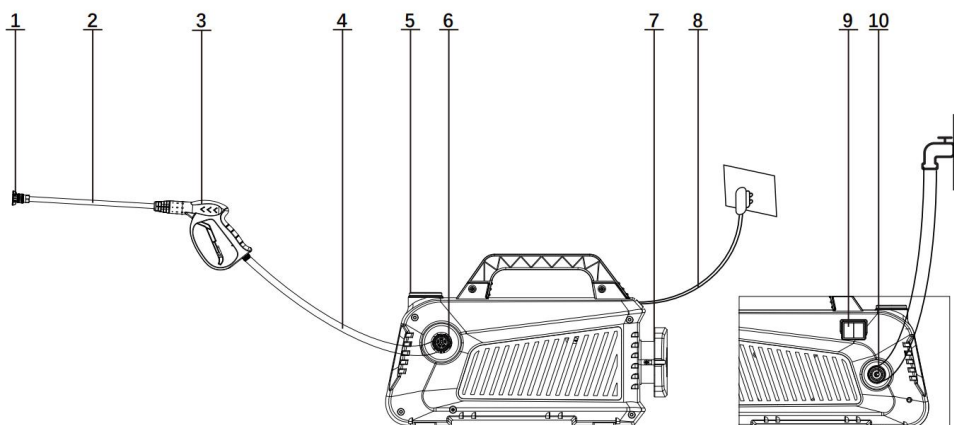


|                  |                    |
|------------------|--------------------|
| 1.Nozzle         | 6.Outlet Connector |
| 2.Extension Rod  | 7.Cable Reel       |
| 3.Trigger        | 8.Cable            |
| 4.Outlet Hose    | 9.Switch           |
| 5.Pressure Guage | 10. Inlet Hose     |

## SAVE THIS MANUAL

|                      |             |
|----------------------|-------------|
| Model                | C8          |
| MAX Pressure         | 2000 psi    |
| MAX Water Flow       | 1.59 GPM    |
| Voltage/Frequency    | AC120 ~60Hz |
| Rated Power          | 1400 W      |
| Degree of Protection | IPX5        |
| Water Temp (max)     | 0°C - 40°C  |


## OPERATION INSTRUCTIONS

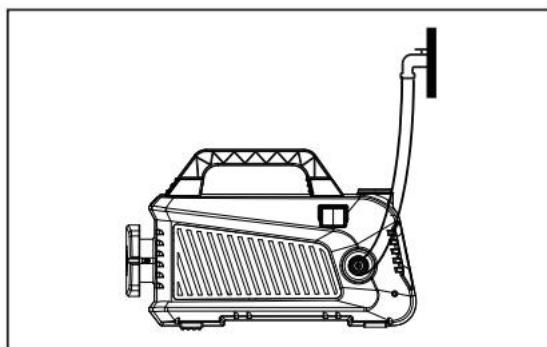

1.Screw the inlet connector to the water inlet


**Note:** The inlet filter must always be fitted in the water inlet pipe to filt out

sand, lime stone and other impurities as these will damage the pump valves.

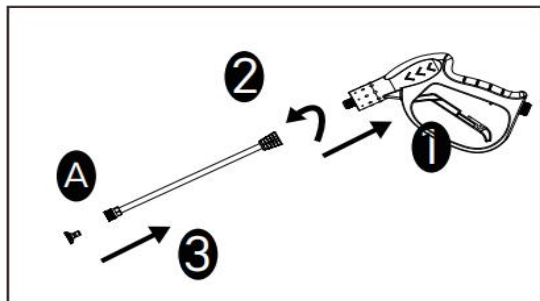

## 2.Install the gun lance and nozzle


Push gun lance into the trigger gun and turn it to fix. Please make sure the lance is properly fixed to the gun. Align the slot and push the nozzles into the lance. Press the black release button on the lance and turn nozzle to take off the nozzle.

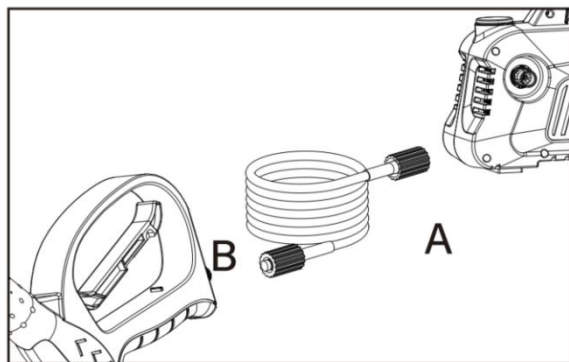

## 3.Install the high pressure hose

Screw the high pressure hose (A) tightly on the water outlet of machine. Press the yellow button on the trigger gun handle then plug the pressure hose (B) in and release the yellow button. Note: Please empty the pressure and water after using the product and then remove the pressure hose. Otherwise the pressure hose will be hard to remove. Tips for removing the

pressure hose:Screw off and then pull out.

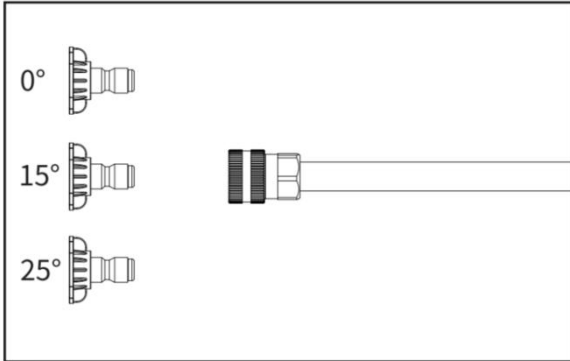

#### **4.Adjusting the spray**

When in use, nozzles with different pressures and water types can be replaced for different scenarios.

#### **5.Start/stop of the machine**

- 1)Please purge all air from the pressure hose before the first use.
- 2)Turn the start/stop switch
- 3)Activate the trigger of the trigger gun

Note:1)If the machine is idle for more than 5 minutes, turn it off. Disconnect the electrical plug from the socket. shut off the water supply and activate the trigger of the trigger gun to relieve the pressure of machine2)When releasing the trigger of the trigger gun ,the machine automatically stops. The machine will start again when you reactivate the trigger gun.

### **PAY ATTENTION**

- 1)The machine should be stored in a frost-free room!
- 2)Pump, hose and accessories should always be emptied of water prior to storing as follows:

Restart the machine and activate the trigger of the trigger gun, let the

machine run until no water runs through the trigger gun"

3) Always disconnect the electrical plug from the socket prior to maintenance or cleaning.

4) To ensure a long and problem free working life, please take the following advice:

Wash out water hose, high pressure hose, spray lance and accessories before mounting.

Clean the connectors of dust and sand, Rinse the detergent spraying attachment after use. Clean the nozzles."

5) Clean the water inlet filter regularly once a month or more frequently according to use. Carefully loosen the filter with a screwdriver and clean it. Check that it is intact before re-mounting it, The inlet filter must always be fitted inside the water inlet pipe to filter out sand, limestone and other impurities, as they will damage the pump valves.

6) To ensure an easy connection and that o-rings do not dry up; the couplings should be greased regularly.

## **BREAKDOWN SERVICE**

| Symptom                    | Cause                         | Recommended action                             |
|----------------------------|-------------------------------|------------------------------------------------|
| The machine will not start | The machine is not plugged-in | Plug the machine in                            |
|                            | Faulty receptacle             | Try another receptacle                         |
|                            | The fuse has blown            | Replace the fuse Unplug other appliances       |
|                            | Faulty extension cable        | Try without the extension cable                |
| Fluctuating pressure       | The pump is drawing in air    | Check that hoses and connections are airtight. |
|                            | Valves dirty, worn or         | Contact your service centre                    |

|                   |                                    |                                                                                                            |
|-------------------|------------------------------------|------------------------------------------------------------------------------------------------------------|
|                   | sticking                           |                                                                                                            |
|                   | The water supply is not sufficient | Increase water pressure, check for blockages and /or change the large pipe.                                |
|                   | Pump seals worn                    | Contact your nearest service centre                                                                        |
| The machine stops | The fuse has blown                 | Replace the fuse                                                                                           |
|                   | Incorrect mains voltage            | Unplug other appliances<br>Check that the mains voltage corresponds to the specifications on the nameplate |
|                   | Thermal sensor activated           | Leave the machine to cool for 5 mins                                                                       |
|                   | Partially blocked jet              | Clean the jet with a needle and by spraying water rearwardly through the jet                               |
| Fuse blown        | Fuse too small                     | Replace it with a fuse with higher amp consumption than the washer.                                        |
| Symptom           | Cause                              | Recommended action                                                                                         |
| Fuse blown        | Increase in the amperage           | Try without the extension cable                                                                            |
| Pulsing machine   | Air in inlet hose /pump            | Allow machine to run with open trigger until regular working pressure resumes                              |

|                                             |                                       |                                                                              |
|---------------------------------------------|---------------------------------------|------------------------------------------------------------------------------|
|                                             | Inadequate supply of water generated  | Increase water pressure, check for blockages and /or change the large pipe.  |
|                                             | Partially blocked jet                 | Clean the jet with a needle and by spraying water rearwardly through the jet |
|                                             | Water filter blocked                  | Clean the filter                                                             |
|                                             | Folded pipe                           | Unfold the pipe                                                              |
| The machine turns on and off by itself      | Pump fuse and/or trigger out of order | Contact your nearest service centre                                          |
|                                             | No water supply                       | Connect the inflow water.                                                    |
| The machine is on<br>Out but no water comes | Water filter blocked                  | Clean the filter                                                             |
|                                             | Blocked jet                           | Clean the jet with a needle and by spraying water rearwardly through the jet |

## STORAGE AND ENVIRONMENT

### Steps of storage

1. Switch the appliance off.
2. Turn off the water supply tap.
3. Remove the plug from the socket.
4. Discharge the residual pressure from the gun until all the water has come out of the nozzle.

5. Drain and wash out the detergent tank at the end of the working session. To wash out the tank, use clean water instead of the detergent.
6. Engage the gun safety catch. Don't overload the scale. This will permanently damage it!

### **Environment of storage**

1. The temperature should be 0 C -60°C.
2. The appliance must not be stored in a damp environment for extended periods.
3. Treat the appliance with non-corrosive, non-toxic antifreeze before storing it away for winter.

## **SAFETY RULES**

### **Safety "Must Nots"**

1. DO NOT use the appliance with inflammable or toxic liquids, or any products which are not compatible with the correct operation of the appliance. EXPLOSION OR POISONING HAZARD
2. DO NOT direct the water jet towards the unit itself, electrical parts or towards other electrical equipment, ELECTRIC SHOCK HAZARD
3. DO NOT direct the water jet towards people or animals. INJURY HAZARD
4. DO NOT touch the plug and/or socket with wet hands, ELECTRIC SHOCK HAZARD
5. DO NOT allow children or incompetent persons to use the appliance. INJURY HAZARD
6. DO NOT use the appliance outdoors in case of rain. SHORT CIRCUIT HAZARD
7. DO NOT use the appliance if the electrical cable is damaged, ELECTRIC SHOCK AND SHORTCIRCUIT HAZARD
8. DO NOT use the appliance if some important components like electrical cable, high pressure hose, gun and safety devices etc are damaged, EXPLOSION AND ELECTRIC SHOCK HAZARD

- 9.DD NOT jam the trigger in the opening position. ACCIDENT HAZARD
- 10.Check the data plate attached to the appliance, If not available, please contact the dealer. Do Not use the appliance without data plate because it's not sure safe or dangerous.
- 11.DD NOT tamper with or adjust the setting of safety valve or the safety devices. EXPLOSIONHAZARD
- 12.DD NOT alter the original diameter of the spray head nozzle and other operation setting;
- 13.Make sure that the high-pressure hose is free of being pressed by car or other heavy objects or cut by sharp objects.
- 14.DD NOT move the appliance by pulling electrical cable. SHORT CIRCUIT AND ELECTRICSHOCK HAZARD
- 15.DD NOT leave the appliance unattended, ACCIDENT HAZARD
- 16.DD NOT move the appliance by pulling high pressure hose. EXPLOSION HAZARD
- 17.When directed towards tyres, tyre valves or other pressurized components, the high-pressure jet is potentially dangerous, Do not use the rotating nozzle kit, and always keep the jet at a distance of at least 30 cm during cleaning, EXPLOSION HAZARD
- 18.DD NOT use this appliance to clean fragile objects. DAMAGE HAZARD
- 19.Check that the electrical supply voltage and frequency correspond to those specified on the appliance data plate.
- 20,The appliance should only be connected to a mains power supply equipped with an adequate earth connection.
- 21.DD NOT use the appliance after drinking alcohol, taking medicine or being tired.
- 22.DD NOT direct the jet towards the weak wall to avoid damage and danger.
- 23.Use only extension electrical cable with waterproof plug and socket.
- 24.Connecting or disconnection of plug and electrical cable MUST be carried out by qualified staff.
- 25.DD NOT pull fiercely when discharging the plug.
- 26.Electrical cable should be far away from fire and sharp object.

27. Cut the power supply immediately in case of breakdown or stop and find out the reason before re-start the appliance.
28. To be sure the appliance standing on dry surface.

### **Safety "Musts"**

1. All electrical conductors **MUST BE PROTECTED** against the water jet, **SHORT CIRCUIT HAZARD**

2. The appliance **MUST ONLY BE CONNECTED** to an adequate power supply in compliance with all applicable regulations. **ELECTRIC SHOCK HAZARD** Use of a safety residual current circuit-breaker (R.C.C.B) will provide additional protection for the operator.

Appliance without plug **MUST** be installed by qualified staff. Use only authorized electrical extension leads with suitable conductor gauge.

3. High pressure may cause parts to rebound: wear all the protective clothing and equipment needed to ensure the operator's safety. **INJURY HAZARD**

4. Plug **MUST** be pulled out after shutting the appliance or the appliance might start automatically or burn itself.

5. Holding the gun firmly before triggering it, **INJURY HAZARD**

6. **COMPLY WITH** the requirements of the local water supply company. According to EN12729(BA), the appliance may only be connected to the mains drinking water supply if a backflow preventer valve with drain facility is installed in the supply hose. **CONTAMINATION HAZARD**

7. Maintenance and/or repair of electrical components **MUST** be carried out by qualified staff.

**ACCIDENT HAZARD**

8. Shut down the appliance, cut power supply and water supply. Then, discharge the residual pressure by triggering the gun before disconnecting the unit hose. **INJURY HAZARD**

9. Before using the appliance, **CHECK** every time that the screws are fully tightened and that there are no broken or worn parts. **ACCIDENT HAZARD**

10. **ONLY USE** detergents which will **NOT** corrode the coating materials of the high-pressure hose/electrical cable. **EXPLOSION AND ELECTRIC**

## SHOCK HAZARD

11. ENSURE that all people or animals keep a minimum distance of 16yd. (15M) away. INJURYHAZARD

12. The unit should STAND when it's working.

13. This appliance can NOT be stored in damp environment.

14. When stopping the appliance, shut the appliance's switch before pulling plug out.

15. Use only original or manufacturer approved spare parts for safety sake.

16. Total Stop (motor stops when trigger released) does NOT always keep effective and the appliance can NOT be at Total Stop for long time, If ineffective (for inner seal damaged, local voltage too low etc), MUST turn off the switch to stop the machine during working.

## SAFETY“MUST KNOWS’

### Caution-Danger!

1. Do not tamper with or adjust the safety valve setting.Safety valve and/or pressure limiting valve.The safety valve is also a pressure limiting valve.When the gun trigger is released, the valve opens and the water recirculates through the pump inlet or is discharged onto the ground.

2.Safety catch (see Connection of gun and hose)Prevent accidental spraying of water.

3.Air outlet on plastic case and it should NOT be blocked during operation, or fire or electric shock hazard is possible.

**Manufacturer:** Zhejiang Gele Cleaning Equipment Co., Ltd.

**Address:** No.305 North Jiulong Rd Of Economic Development Zone,  
Yongkang, Zhejiang.

