



Upgrade · The Home Creator Way

PORTABLE PRESSURE WASHER

MODEL:LHP-01/LHP-02

VEVOR Support Center



LHP-01



LHP-02

MODEL:LHP-01/LHP-02



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
	This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

INSTRUCTIONS

Thank you for choosing the VEVOR LHP-01/02 Portable Pressure Washer. Please read all instructions carefully before use to ensure safe operation and optimal performance.

Experience superior cleaning versatility with this cordless pressure washer. Ideal for watering plants, cleaning vehicles (bikes, cars), patios, outdoor furniture, pet enclosures, and even as a camping shower, this all-in-one device is designed for convenience.

Key Features:

- Any-Position Lock Hose Reel: Pull the hose to your desired length—it locks automatically. A gentle tug retracts it for easy, tangle-free storage.
- Cordless & Rechargeable: Enjoy up to 30 minutes of runtime per charge (approximately 5-6 reservoirs), with a full recharge in 3-6 hours (depending on the charger).
- Foldable 2.64 Gallon Reservoir: Made from durable, leak-proof material, it unfolds for use and folds flat for compact storage and transport.

- **Dual-Action Spray Nozzle:** Comes with three interchangeable tips (Jet, Fan, Mist) to adapt to any cleaning task.

SAVE THIS MANUAL

Model	LHP-01	LHP-02
MAX Pressure	109 psi	
MAX Sater Flow	0.79 GPM	
Voltage/Frequency	DC 12V	
Rated Power	48W	
Degree of Protection	IPX5	
Water Capacity(Max.)	2.64 gal (10 L)	
Water Temperature Range	0°C to 40°C (32°F to 104°F)	
Charging Specifications	5V-2A	
Magnetic Sponge Brush Head	Not Included	Included
Magnetic Soft Brush Head	Not Included	Included

OPERATION INSTRUCTIONS

Water Reservoir Instructions

- To unfold the water reservoir, press one hand against the bottom while pulling the handle upwards with the other.



- To fold the machine, quickly press down on both sides of the water reservoir at the same time. It's normal that the reservoir might stick a little bit, apply more force it will fold properly.



- The water reservoir has been rigorously tested through thousands of folding cycles to ensure durability and quality. With a 2-year warranty, you can use it with confidence.

Operating

- Remove the device from the package and place it on a level, horizontal surface
- Verify all accessories are included.
- Extend the water hose and slightly pull it further to test the any-position lock system
- Charge the battery until the charging state LED lights up, indicating a full charge.
- Unfold the water reservoir and fill it with water.
- Pull out the water hose and the spray gun then attach the desired nozzle.
- Press the ON/OFF button to power on the device
- Press the trigger to begin the operating process.

Ending operation

- Press the ON/OFF button to turn the device OFF.
- Empty any remaining water from the reservoir.

- To drain the hose and pump: Turn the device ON. Press and hold the trigger until no water is emitted. Turn the device OFF.
- Point the spray gun in a safe direction and briefly press the trigger to release any residual pressure.
- Gently pull the hose to retract it completely.
- Allow the water reservoir and all components to air dry completely.
- Fold the water reservoir and attach the lid.
- Store the device in a dry, frost-free location. Stow the device.

Transport

- Be mindful of the device's weight during transportation.
- The water reservoir lid is not watertight. Escaping water can cause property damage.
- Handle the device with extra care if water is present.
- Always empty the water reservoir completely before transporting the device in a vehicle.
- Secure the device to prevent sliding, tipping, or shifting.

Storage

- Frost can damage the device if it is not fully emptied.
- Ensure the device and all accessories are completely dry before storage.
- Store the device in a frost-free, dry location, not outdoors

WARNINGS AND CAUTIONS

- Do not run the device without water, as this will damage the water pump.
- Do not operate if the water reservoir is empty.
- Do not leave water in the unit in freezing conditions, as it may cause damage.
- Switch off the device if it fails to build up pressure within 2 minutes.
- Never point the spray nozzle at people, animals, or electrical devices.
- When using detergents, follow the manufacturer's safety data sheet, particularly regarding personal protective equipment.

- Follow local regulations for the disposal or recycling of the lithium-ion battery.

SPRAY GUN INTRODUCTION

- Attach the desired nozzle to the spray gun.
- Turn on the machine and check for leaks at the connection point. Tighten if necessary.
- With the lock-on system, press the trigger once for continuous spraying. Press it again to stop.
- After use, turn off the machine.
- Squeeze the trigger to release any remaining water pressure in the spray gun and hose.
- Wipe down the spray gun to remove dirt and debris. Check the nozzle for clogs and rinse it if necessary.

HOSE REEL INSTRUCTIONS

- Gently pull the hose to the desired length. The reel's locking mechanism will hold it in place.
- Do not exceed the maximum length to avoid damaging the hose or reel.
- If you need to extend the hose further, release the lock by slightly pulling the hose, then pull it to the new length.
- After use, gently tug the hose to disengage the locking mechanism.
- Guide the hose with your hand as it retracts slowly and evenly to prevent tangling.
- After each use, wipe down the hose to remove dirt and debris.

HOW TO SWITCH NOZZLES

- Gently pull the quick connector inwards, then snap in the desired nozzle.



- To switch to another nozzle. First, Gently pull the quick connector inwards and take off the nozzle then replace the other nozzle in the same way



WATER THROUGH BRUSH INSTRUCTIONS

- The water through brush comes with 3 different brush heads:
 - 1.Soft Bristle Brush: For delicate surfaces such as cars, windows, and boats.
 - 2.Stiff Bristle Brush: For scrubbing dirt and grime off hard surfaces.
 - 3.Sponge Brush: For gentle cleaning and applying soap to smooth surfaces.
- Each brush head attaches to the handle via a magnetic connection for quick and secure application.
- Connect the provided quick connector to the brush handle.
- Apply the brush handle to the trigger gun.
- Align the chosen brush head with the connection point on the handle.
- Push the brush head gently into place until the magnets snap it securely.

- When to detach a brush head. Hold the handle firmly and pull the brush head away from the handle.
- Detach the brush head after use and rinse it thoroughly with water to remove debris.
- Allow the brush head to air dry before storing

Notice: Only the Pro model comes equipped with the water-through brush kit.

TROUBLE SHOOTING

Failure symptoms	Possible Cause(s)	Rectification
The device is not functioning	The battery power is too low to operate.	Recharge the battery
	Motor overload detected; the circuit breaker has shut off power,	Turn off the device, wait for a moment. then restart it to continue operation.
Failure symptoms	Possible Cause(s)	Rectification
Low pressure	The water supply in the reservoir is insufficient.	Refill the water reservoir with clean water.
	The filter inside the water reservoir is dirty.	Remove and clean the filter.
Frequent pressure surges or constant device restarting	The nozzle is clogged.	Clear the nozzle hole of dirt and debris using a needle, then rinse thoroughly with clean water from the front.

The water reservoir is stuck and notable to fold	The uneven force applied on two sides of the water reservoir, its body tilted to one side.	Unfold the reservoir and apply more force on both the opposite two sides simultaneously to fold it properly
--	--	---

2-YEAR LIMITED WARRANTY

Thank you for choosing our cordless pressure sprayer. We stand behind the quality and craftsmanship of our product and offer a 2-Year Limited Warranty from the date of purchase.

• **Warranty Coverage**

This warranty covers defects in materials and workmanship under normal use, provided the product has been used in accordance with the user manual.

• **What Is Covered**

Malfunction or failure due to defects in materials or workmanship.

• **What Is Not Covered**

- 1.Damage caused by misuse, abuse, or neglect.
- 2.Alterations, modifications, or repairs not performed by an authorized service provider
- 3.Normal wear and tear (e.g., scratches discoloration, or minor cosmetic issues)
- 4.Damage caused by improper assembly, storage or maintenance.
- 5.Commercial or industrial use.

Limitations and Disclaimers

This warranty is non-transferable and applies only to the original purchaser. Liability is limited to the repair or replacement of the defective product. We are not responsible for incidental or consequential damages.

- For any questions or warranty claims, please contact us through Amazon.

We are committed to your satisfaction and appreciate your trust in our product.

Manufacturer: Zhejiang Gele Cleaning Equipment Co., Ltd.

Address: No.305 North Jiulong Rd Of Economic Development Zone,
Yongkang, Zhejiang.

