

VEVOR

Upgrade · The Home Creator Way



XS-00B(US)



XS-00B(EU)



XS-003(US)



 
XS-003(EU)

VEVOR Support Center

CORDLESS PRESSURE WASHER

MODEL:XS-003/XS-00B

MODEL:XS-003/XS-00B

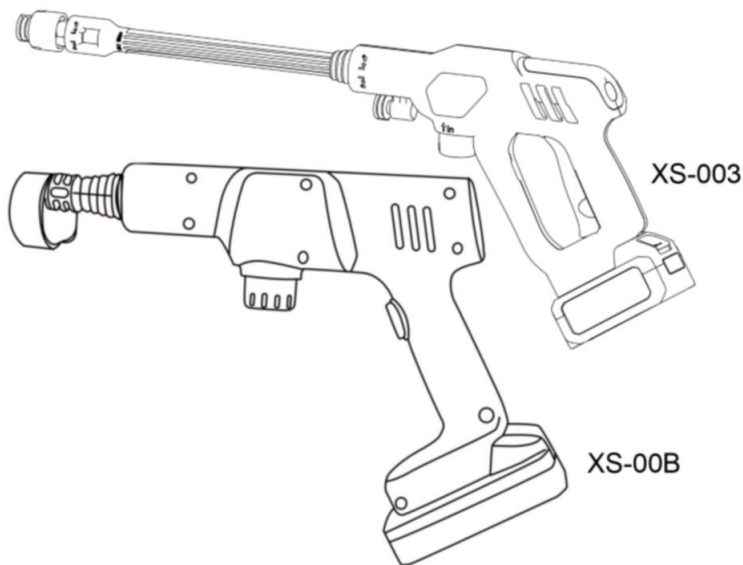

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

The product complies with relevant standards and regulations. Installation of

this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.

Please use the product according to the intended use, warn of potential injury from misuse.

CORRECT DISPOSAL

This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

When using electrical appliances, basic safety precautions should always be followed, including: read all instructions before use; ensure the supply voltage matches the product rating; do not leave the appliance unattended during use.

If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazard.

Do not use this equipment in rain or damp environments to prevent electric shock. This appliance is not intended for use by children. Store the appliance out of reach of children. Children aged 8 and above and persons with disabilities may use it under adult supervision.

Unplug the power cord before cleaning or maintenance. Do not wash the appliance directly with water or any other liquid.

Do not use this equipment in flammable or explosive environments.

Packaging materials (such as plastic bags) may pose a choking hazard to children. Keep packaging out of reach of children and dispose of in accordance with local waste sorting regulations.

This product uses a lithium battery. Do not dispose of batteries in fire, short-circuit, or disassemble. Remove batteries if not used for a long time and store in a cool, dry place.

Surfaces may become extremely hot during operation. Do not touch. Allow to cool completely before cleaning or maintenance.

WARNING! High-pressure jets can cause serious injury. Never point the spray gun at people, animals, live electrical equipment, or the gun itself. Do not change nozzles or perform maintenance while the jet is active.

This spray gun is equipped with a trigger safety lock. The safety lock must be engaged when not in use to prevent accidental discharge. Also engage the safety lock when the gun is left unattended.

Triggering the gun generates a reaction force (kickback) that may cause loss of control. Hold the gun firmly with both hands and maintain a stable stance. When using for the first time, test the kickback at low pressure.

The maximum working pressure of this spray gun is 652psi. Do not exceed this pressure, as it may cause the gun to rupture, burst, or dislodge fittings, resulting in serious injury.

The maximum fluid temperature for this spray gun is [XX]° C. When using hot water, ensure the temperature does not exceed the rated value to prevent burns or seal damage.

Before connection, ensure the threads of the gun and hose are clean and undamaged. Hand-tighten, then secure with a wrench, but do not overtighten. After connection, test for leaks at low pressure.

Before each use, inspect the gun, trigger, safety lock, and high-pressure hose for cracks, wear, or leaks. If any damage is found, replace immediately. Do not continue to use.

Before cleaning the gun, disconnect the high-pressure hose and release residual pressure. Wipe with a soft cloth and mild detergent. Do not use solvents, acids, or abrasive cleaners.

If not used for a long time, store the gun in a dry, frost-free location out of reach of children. Release pressure and engage the safety lock before storage.

This product is not a toy. Do not allow children to operate or play with it. Store the gun out of reach of children.

PRODUCT PAREMETERS

Model		XS-003	XS-00B
MAX Working Pressure		652PSI	652PSI
MAX Flow Rate		4L/min	3.5L/min
Rated Power		250W	200W
Usable Laundry Detergent		Neutral Detergent	
Battery	Battery Type	Lithium Battery	
	Voltage	DC21V	
	Capacity	4000mAh	
Charger	Input Voltage	AC 100-240V 50/60 Hz	
	Output Voltage	DC21V 0.75A	
	Charging Time	5 hours	

Min.Suction Height	3M
FCC statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.	

Product Introduction

Based on the principle of user experience first, quality first, the pursuit of convenience, fast, portable, energy-saving and other superior characteristics, for the majority of car-loving people and home cleaning and washing and customized development of a product, At the same time, the product is not limited by power supply, with strong and stable battery.Product can be carried with you, multi-scene application, anytime, anywhere for you to save time, save cleaning costs, high efficiency to bring DIY washing fun and quality experience.

PACKING LIST

 
XS-003



1. Fuselage Shell
2. Multi-Functional Six-In-One Sprinkler Head
3. Nylon Extension Rod
4. Water Inlet Connector
5. Filter Screen
6. Universal Sprinkler Head
7. Coke Bottle Connector

8. Foam Pot
9. Rotate The Gun Head
10. 6m Water Inlet Pipe
11. 4.0Ah Battery
12. Charger
13. 11 Liters Of Water Bucket
14. Carbon Fiber Storage Bag

XS-003

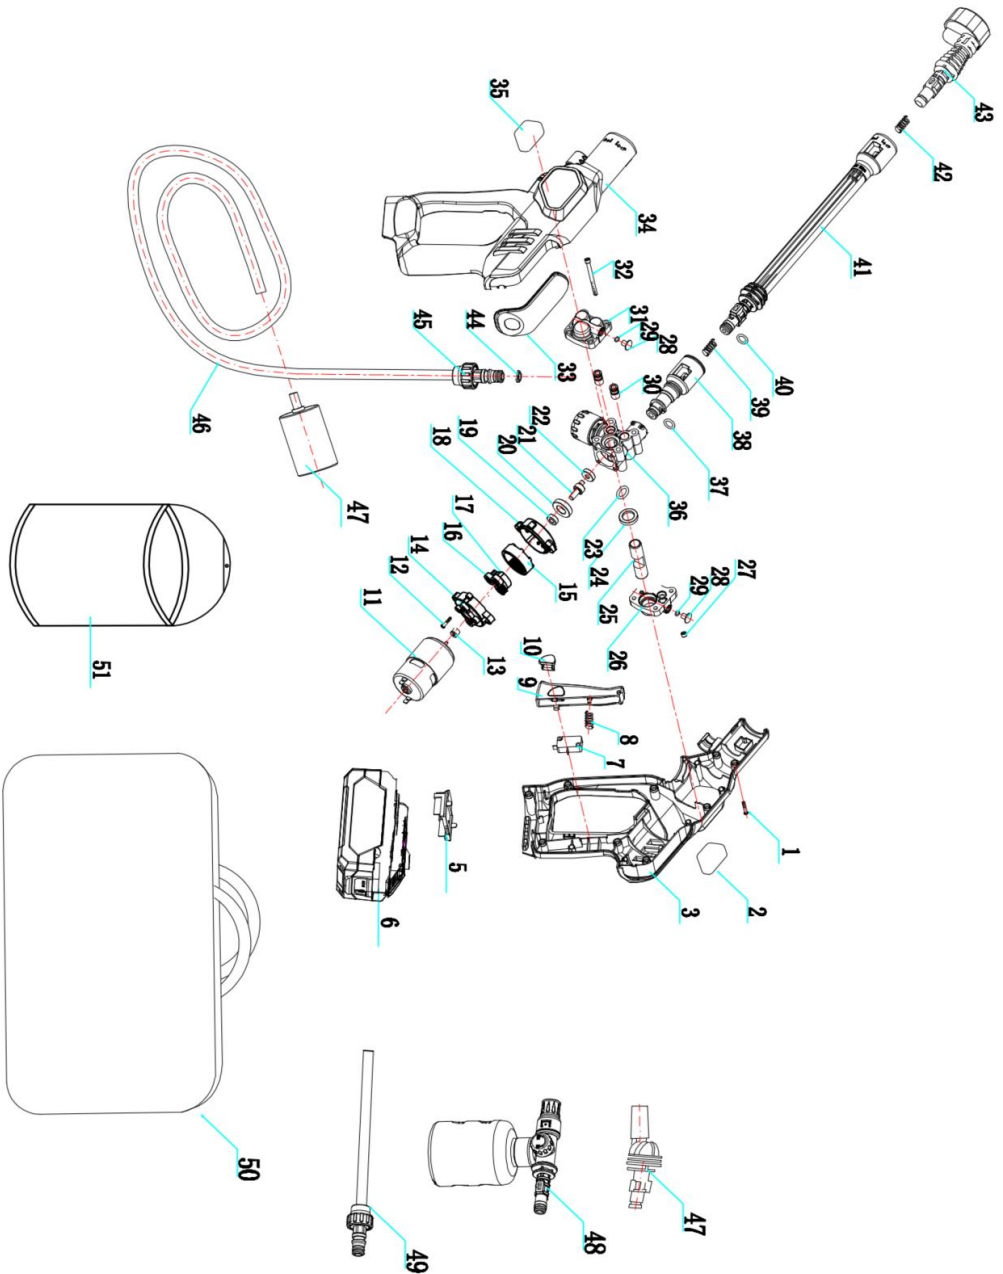

No.	Name	Qty	No.	Name	Qty
1	ST3*12 Cross Tapping Screw	11	26	Right Pump Cover	1
2	Parameter Label	1	27	M4 Nut	4
3	003 Shell (Right)	1	28	Cross Large Flat Head Screw	2
4	PCB Controller	1	29	O-Ring	2
5	Makita-Battery Pin	1	30	Check Valve	2
6	4Ah Battery	1	31	Left Pump Cover	1
7	Microswitch-16A	1	32	Socket Head Cap Screw	4
8	Trigger Spring	1	33	Rear Cover	1
9	003-Trigger	1	34	003 Shell (Left)	1
10	Trigger Latch	1	35	Logo Sticker	1
11	Motor	1	36	Pump Base	1
12	M4*14 Combination Screw	2	37	Logo Sticker	1
13	Motor Gear	1	38	Outlet Joint +Seal Ring	1
14	Motor End Cover	1	39	Barrel Seal Ring	1
15	Gear Ring	1	40	Water Outlet Joint	1
16	Support	1	41	Barrel	1
17	Planetary Gear	3	42	Barrel Seal Ring	1
18	Front Cover	1	43	6-In-1 Multi-Functional Sprinkler	1
19	Bearing	1	44	O-Ring	1
20	Bearing	1	45	Water Inlet Joint	1
21	Eccentric Shaft	1	46	Inlet Pipe	1
22	Bearing	1	47	360° Universal Nozzle	1
23	Water Seal Pressure Ring+O-Ring	2	48	High Efficiency Foam Pot	1
24	Water Seal Pressure Ring	2	49	Coke Bottle Connector	1
25	Plunger	1	50	Storage Net Bag	1
			51	Bucket	1

 
XS-00B



1. Fuselage Shell
2. Multi-Functional Six-In-One Sprinkler Head
3. Charger
4. 4.0Ah Battery
5. Coke Bottle Connector
6. 0 Degree Sprinkler
7. 40 Degree Sprinkler Head
8. Stainless Steel Extension Bar
9. Nylon Extension Rod

10. 6M Water Inlet Pipe
11. Foam Pot
12. Rotate The Gun Head
13. Screen Filter
14. Water Inlet Connector
15. Universal Sprinkler Head
16. Carbon Fiber Storage Bag
17. 11L Bucket
18. Gloves

XS-00B

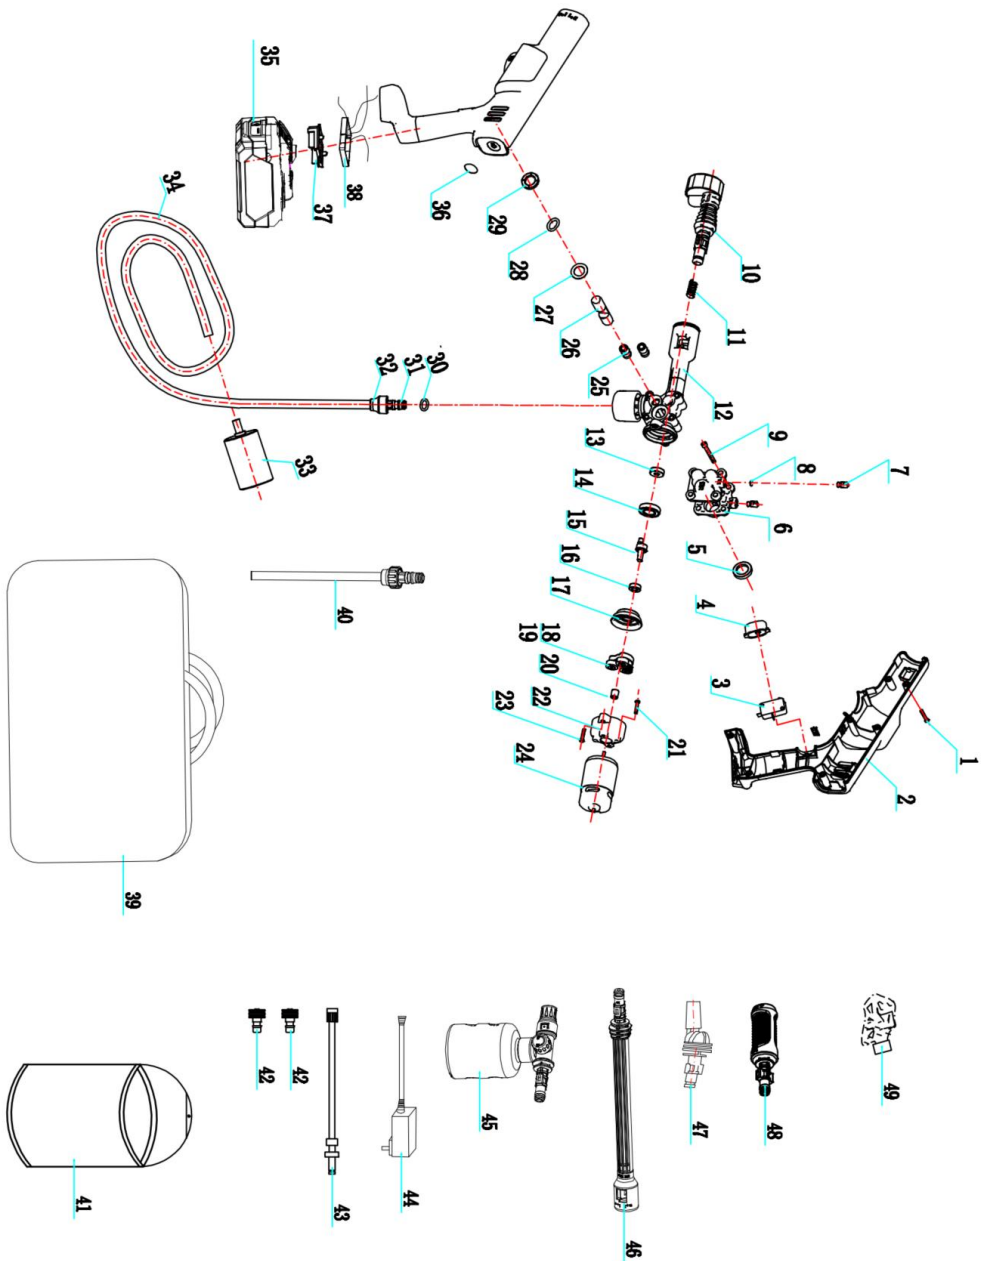

No.	Name	Qty	No.	Name	Qty
1	Self-tapping Screw	8	26	001 Slotted Plunger ϕ 12mm	1
2	XS00B Left and Right Machine Casings	1	27	12 Stainless Steel Gaskets	1
3	Brushless Controller + Switch + Pin Header	1	28	O-Ring	1
4	004 Trigger	1	29	Water Seal Pressure Ring	2
5	Water Seal	2	30	O-Ring	1
6	Left and Right Pump Covers	1+1	31	Water Inlet Quick Connector	1
7	Plug / Blocking Head	2	32	Water Inlet Quick-connect Cap	1
8	O-Ring	2	33	Heavy-duty Filter Screen	1
9	Self-tapping Screw	8	34	Water Inlet Pipe	1
10	Spray Head / Nozzle	1	35	4Ah Battery Pack	1
11	Ejector Rod Spring	1	36	Speed Regulation Label	1
12	Pump Base Assembly	1	37	Pin / Pin Connector	1
13	Deep Groove Ball Bearing	1	38	Brushless Controller	1
14	Deep Groove Ball Bearing	1	39	Carbon Fiber Storage Bag	1
15	Eccentric Shaft	1	40	Cola Bottle Adapter + 32cm Transparent Hose	1
16	Deep Groove Ball Bearing	1	41	11L Water Bucket	1
17	12 End Cover	1	42	0° + 40° Nozzles	1
18	Bracket	1	43	Stainless Steel & Pure Copper Gun Rod	1
19	Planetary Gear	3	44	Charger	1
20	Pinion	1	45	Foam Pot / Foam Generator	1
21	Screw	2	46	Gun Rod	1
22	12 Gearbox	1	47	360° Universal Spray Head	1
23	Self-tapping Screw	2	48	Duckbill Gun Head	1
24	Motor	1	49	Gloves	1
25	Water Inlet Check Valve	4			

SAFETY & WARNING



When using electrical appliances, base safety precautions should always be followed including the following:



READ ALL INSTRUCTIONS

1. Use shall not direct water flow to the crowd and live components.
2. Ensure that children are not exposed to the range area when the battery pack is charged.
3. Battery pack and charger are hit by drop collision or wet visible state should be stopped immediately!
4. Must charge the battery pack in the presence of someone!
5. Chargers must choose the original factory (without authorization or the original factory's proposal to prohibit the use of other charging accessories or charging methods.
6. Charging environment is prohibited in high temperature or unattended or accessible locations for children.
7. Unscheduled product inspection, charger, battery pack, car washing machine mainframe, if abnormal or damaged or malfunction do not modify or disassemble.
8. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Safety precautions for battery pack:

1. Do not disassemble, open or shred battery sets.

2. It is forbidden to expose battery pack to heat source or high temperature sunlight.
3. Do not short circuit the battery pack (positive and negative connection), do not put the battery pack in the box drawer to avoid short circuit between them or by other metal items.
4. Do not remove the battery or battery pack from the original package before use
5. Prohibit battery packs from falling or mechanical impact.
6. Once the battery leaks, do not touch the leaking liquid directly into the eyes or skin. In case of accidental contact, rinse the contact area immediately with plenty of water and consult a doctor in time.
7. Shall not use non-original charger and battery pack. (Causes machine malfunction or accidental personal injury)
8. Pay attention to the positive and negative signs on the battery pack to ensure proper connection.
9. Keep the machine and battery pack group away from children.
10. Ensure clean and dry battery pack. (If dust or residual water should be immediately wiped with clean cloth or natural air drying, do not use hair dryer or hot air gun drying)
11. The battery pack must be charged before use, using the correct charger and referring to the manufacturer's operating instructions or the original equipment instructions
12. Not using the machine, do not charge the battery pack for a long time, pay attention to the green light is full of electricity, red light is in charge.
13. In case of long-term storage of unused machines, battery packs should be subjected to several charge/discharge cycles to achieve optimal performance.
14. The use of battery pack groups at room temperature (20° C +5° C) performs best.
15. This product is only suitable for home doors and windows, courtyard, vehicles, garden cleaning operations, not for commercial operations or main frequency flow operations, not higher than the battery group use time or high frequency forced use.
16. Remove the battery pack whenever possible when not using the machine, disconnect from the mainframe and place it in a dry place not accessible to

children.

17. Battery pack group due to other human damage or collision, high temperature damage, reasonable treatment and recovery, do not discard the contaminated environment.

SAVE THESE INSTRUCTIONS

INSTALLATION GUIDELINE

Open the box to check whether the machine is in good condition and whether it is the corresponding model for purchase. Then take out the attachment one by one and place it in the plane. Install and use according to the operation procedure!

Note: If there is water in the machine, please don't get upset. The product is not second-hand. In order to ensure that you receive a product that is in perfect condition, each of our products undergoes a pumping test before leaving the factory.



 
1.Align the groove and clip the 6-inch nozzle into the washer




2.Press the locking nozzle into the groove and twist it to achieve self spraying



3.If angle adjustable nozzle or foam tank is to be used, the connection method is the same as step 01-02.

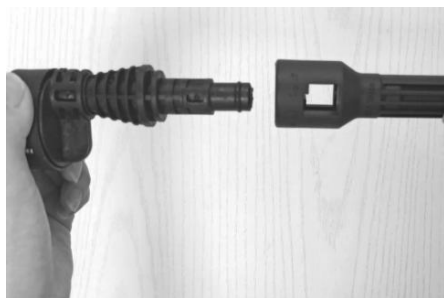

 4.Press the nozzle into the groove and twist it to achieve self-locking

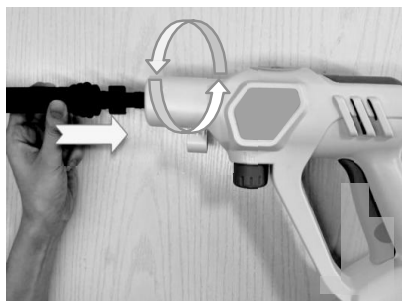

5. Press the nozzle into the groove and twist it to achieve self-locking.

6. The extension rod is applicable to all nozzles, including foam tank joints, and the connection method is the same as that in step 04-05.



7. Align the groove and clip the foam can into the extension joint.



8. Press the foam tank connector into the groove in the hose and twist it for self-locking.



9. The foam volume can be adjusted by turning the button on the adapter.

 


10. Connect the quick connector to the pressure washer. (Loosen the lock nut and engage upwards to remove the pipeline)



11. Inject water into the bucket and immerse the filter holder in water.

12. If you choose a six-in-1 nozzle, you can twist the nozzle to change the spraying mode.

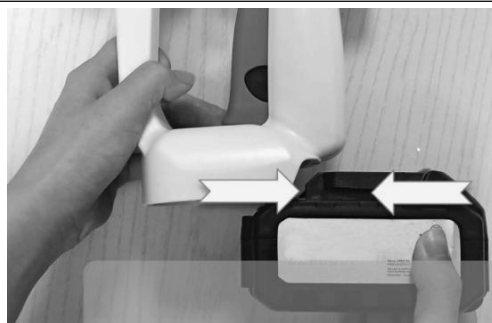

13. Connect the battery to the cleaning machine.



14. Press the black safety lock button to disconnect the cleaning machine.



15. Press and hold the start switch to operate.



16. Press this button to switch between three gear modes. (TIPS: XS-002 don't have this function.)



17. After completing the work, press the safety lock button back. (TIPS: XS-002



18. Press the button to remove the battery.

and XS-00B don't have this function.)	
	
19. Press the red button to display the battery level.	20.Plug in the power to charge.

TROUBLE-SHOOTING

Frequently Asked Questions	Cause analysis	Solutions
Normal operation of machine without water suction	1. Machine is too high above water	Down to below 1.5 m ground
	2. Filter screen foreign body clogging	Remove filter and clean
	3. Failure of connection of intake pipe to machine or rupture of intake pipe	Check and replace water pipes,please contact customer service
	4. Intake pipe bending clamp	Straighten out intake pipes and reconnect
	5. The pump froze because of the cold weather	Restart after thawing

Sudden increase in effluent pressure or abnormal water type	The head of the water gun was blocked by a foreign body	Use a needle to clear the nozzle or replace the new gun head
Machine does not start	1. Battery pack not Installed	reinstallation
	2. Battery pack Is dead	Charge or replace new battery pack
	3. Battery pack is broken	Replacement of battery pack
Battery pack not charged	Charger mismatch or broken	Replacement of matching charger
Machine pressure discontinuity	Air in 1.pump	Check that joints and pipes are in good condition
	2. Machine in low voltage mode	Normal at low pressure, no treatment required
Machine automatic stop	1. Battery pack is dead	Charge or replace battery pack
	2. Gun head blocked, current protection	To clear or replace the head
Leakage Inside machine	Chemical acid source or assembly cause	Avoid using chemical sources

REPAIR AND MAINTENANCE

1. Each time before use, please check if the machine and parts are damaged, if there is damage stop using the machine, contact the supplier or manufacturer to

replace the parts.

2. Intake pipes and filters must be cleaned after each use and bags should be kept to avoid oxidation for easy use in the future.

3. After the use of the mainframe, the empty machine should run for a few seconds to drain the residual water from the machine, avoid oxidation dirt and weather ice, and store in a dry cool place.

4. Waste disposal: for damaged accessories and packaging materials must be classified and recovered, do a good job of marking.

5. Do not store in the trunk of the car high temperature weather to avoid fire caused by high temperature. Warning: do not use chemical acid and muddy water, must use clean, impurity-free clear water.

CORRECT DISPOSAL



This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

BATTERY DISPOSAL



Li-Ion battery This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances

