

WARNINGS:

- Wipe with a clean cloth when needed.
- Not suitable for children under 4 years of age.
- Choking Hazard: Contains small parts and foam balls. Not for children under 3yrs.
- Do not modify, disassemble, or otherwise alter the product, or use with anything other than the included soft suction darts.
- Do Not Aim at Face or Eyes: Never point or shoot darts at people or animals. Always aim at the intended targets only.
- Eye Protection Recommended: Wear protective eye wear during play for added safety.
- Adult supervision is recommended, especially for young children.
- Use in a clear, open space away from fragile objects, breakables, or obstacles.
- Inspect darts and launcher regularly for damage. Do not use if any parts are broken or worn.
- Do not expose the product to extreme heat, open flames, or moisture.
- Store all parts in a safe place out of reach of very young children (under age 4) when not in use.
- Important: Failure to follow these safety guidelines may result in injury or damage. Always play responsibly.
- Turn off the unit when not in use to conserve battery life.
- Discontinue use if product becomes damaged or malfunctions.
- Installation of batteries & charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

GLOW HOVER

TARGET SHOOTING GAME



FOR AGES 4+ | Model: TOY-AIRTARGET



Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
MADE IN CHINA



Instruction Manual

Please read this instruction manual carefully before using.

Contents:

1 x Glow Hover Target Base	5 x Glow Target Pedestals
1 x Glow Blaster Pistol	1 x Dart Clip
12 x Foam Darts	10 x Glow Target Balls

Glow Hover Target Base



Glow Blaster Pistol



Insert Pedestals

1. Place the Glow Hover Base on a flat, level, and stable surface.
2. Insert the 5 glow pedestals fully into the receiver holes on the top of the Glow Hover.

Note: Ensure that the pedestals are inserted fully and standing strait up.

Load The Blaster

1. Grasp the blaster pistol handle firmly with one hand and the cocking slide on the top rear of the blaster pistol with the other hand.
2. Pull the cocking slide back fully until it clicks, then move it back to its original position.
3. Remove one dart from the dart clip and place the foam end opposite the suction cup into the barrel of the blaster pistol.
4. Press lightly on the suction cup end of the dart to ensure it is fully inserted into the barrel.
5. Your blaster pistol is now ready to fire.
6. Squeeze the trigger on the blaster to fire the dart.
7. Repeat the above steps to reload and fire additional darts.



Cocking Slide

Turn On The Glow Hover Base

1. Place one of the target balls on the top of each of the five pedestals.
2. Move the power switch on the top back of the Glow Hover Base to the MED position to activate the hover airflow.
3. The target balls will begin to hover above the pedestals.
4. For a more challenging target array, move the power switch to the MAX position.
5. To turn the hover airflow off, move the power switch to the OFF position.

Glow-In-The-Dark Feature

To activate the glow-in-the-dark feature, the glowing components of the game must be exposed to bright light for a period of approximately 5-10 minutes to “charge” the components.

Note: The power of sunlight vs artificial light varies greatly. You may need to experiment with light sources to achieve the brightest results.

Music Option

Move the Music switch located on the bottom back of the Glow Hover Base to the ON position.

Note: Hover airflow power switch must be ON to activate music option.

To turn the music off, move the MUSIC switch to the OFF position.

Battery Installation


Before first use

1. Locate the dual battery compartments on each side of the back of the Glow Hover.
2. Remove the battery compartment covers using a mini screwdriver.
3. Insert 2 C batteries into each of the Glow Hover’s dual battery compartments according to the polarity graphics inside each compartment.
4. Replace battery compartment covers and tighten the screws until they are snug.

Use

Attach Dart Clip to Glow Blaster Pistol

1. Slide the clip mount cover on the top of the blaster to the open position.
2. Insert the clip attachment into the mounting slot and press in until the clip is locked into place.
3. Load the darts into the clip receiving holes.

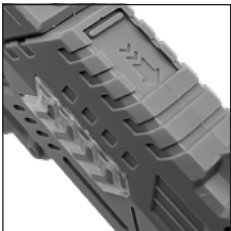

Clip Mount Cover



Mounted Dart Clip