

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Instruction manual shall include,

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

FCC Radiation Exposure Statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
MADE IN CHINA



Flipo RC Vapor Raptor

Interactive RC Dinosaur



Instruction Manual
For Ages 3+ | Model: TOY-VRAPTOR

Please read this instruction manual carefully before using.

Contents:

- 1 x Vapor Raptor RC-Interactive Dinosaur
- 1 x 2.4 GHz Remote Control
- 1 x USB-A to USB-C Charging Cable
- 1 x Water Fill Bottle

Battery Installation & Charging

Before First Use

Charging the Raptor

IMPORTANT: Use ONLY the included USB-A to USB-C charging cable to charge your Raptor. Plug the USB-A (large end) of the cable into a USB port or an adapter to use an AC outlet. Plug the USB-C (small end) of the cable into the USB-C charging port on the underside of the Raptor adjacent to the rear legs.

Note: When charging, a faint red indicator light inside the USB charging port on the toy will light. When charging is complete, the red indicator light will turn OFF.

Installing Remote Control Batteries

1. Locate the battery compartment on the back of the remote control.
2. Loosen the screw and remove the battery compartment cover.
3. Insert 2 AAA batteries according to the polarity graphic located inside the battery compartment.
4. Replace the compartment cover and tighten the screw until snug.

Assembly

Front Arms:

1. Align the square receiver on the right front arm (the claws facing forward) with the square connector in the front arm socket.
2. Push into position fully to lock.
3. Repeat this step for the left front arm.
4. To remove the front arms, pull them out of the arm socket.

 
Tail:

1. Align the slot on the tail with the connector arm on the rear of the Raptor.
2. Push the tail onto the connector arm fully until it clicks and locks into place.
3. To remove the tail, depress the locking button and pull the tail out.


“Smoke” breathing effect

1. Fill the included water bottle.
2. Remove the cap from the top of the Raptor’s head.
3. Fill the water reservoir and replace the cap.


RC Raptor Charging

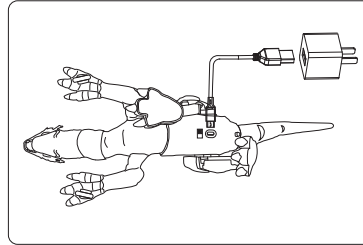



Remote Control Battery Installation

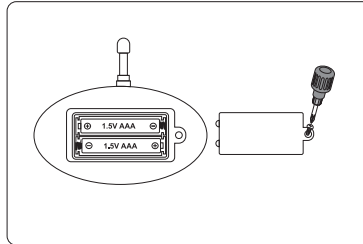 

Raptor Assembly

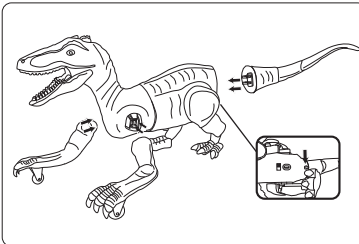 

Water Reservoir Refill

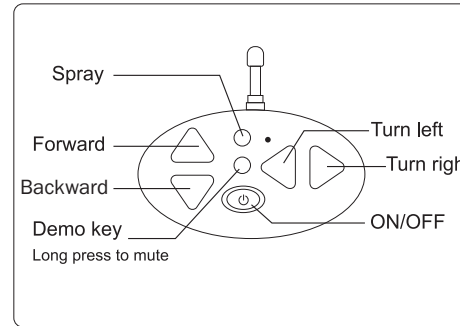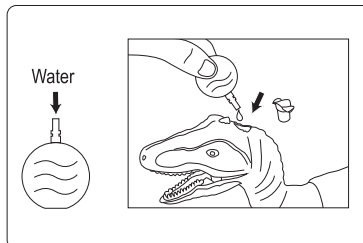  

Use

Remote Control Functions

1. Locate the power switch on the underside of the Raptor and move it to the ON position. Note: The Raptor will briefly roar and breathe “smoke” and “fire” when turned ON. The red LED that creates the fire effect will then flash until the remote control is turned ON and linked to the Raptor.
2. Locate the power button on the remote control.
3. Press the power button to turn the remote control ON. Note: The red LED in the Raptor’s mouth will stop flashing when the remote control and the Raptor are linked.
4. Press the arrow buttons on the left side of the remote control to move the Raptor forwards and backwards in the corresponding direction.
5. To turn the Raptor, simultaneously press the arrow buttons on the right side of the remote control in the desired direction while moving forward or backward.
6. Press the top center button above the power button to activate the roaring sounds, “fire”, and “smoke” effects.
7. The lower center button above the power button will activate the demo mode to display all the Raptor’s functions. Demo mode lasts for approximately 15 seconds and can be interrupted by pressing any of the arrow buttons. Long-press the demo button at any time during the demo to mute/unmute the sound effects.

Power Saving Mode

The remote control will automatically turn OFF after an extended period of inactivity (approximately 3 minutes). To resume using the toy, simply press the power button on the remote control.

CARE & MAINTENANCE:

- Wipe with a clean cloth when needed.
- If you plan to discontinue use for an extended time, remove all batteries.
- If the Dinosaur slows down or does not respond to the remote control, your batteries may need to be charged/replaced.



CAUTIONS:

- Use ONLY the USB cord included with your Raptor to charge the rechargeable battery.
- Not suitable for children under 3 years of age.
- Installation of the batteries and charging should ALWAYS be supervised by an adult.
- Do not put your toy or transmitter near any source of heat.
- Avoid using on sand and loose gravel.
- Do not let any parts of the Raptor get wet, other than the water reservoir for the vapor/“smoke” effect.
- Do not run through water or operate in the rain.
- Do not modify, disassemble, or otherwise alter the product.
- If the Raptor is damaged and any broken parts are exposed, the toy should not be used.
- Watch for and avoid obstacles.
- For best results, operate on hard flat surfaces.

BATTERY SAFETY:

- Installation of batteries & charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not swallow batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Batteries must be recycled or disposed of properly.