

Data Transmission/Computer Camera Functions

1. Turn on the camera before connecting it to a computer using the included Type-C cable. With a microSD card inserted, the camera can connect as an external device for viewing and transferring photos and videos saved to the memory card.

Note: A microSD card must be inserted for the camera to appear as an external device on the computer. When connected properly with a microSD card inserted, the screen will display a red USB icon.

Note: When connected as an external device, the camera may appear as a removable drive/device on your computer.

2. Images saved to the camera's internal memory cannot be viewed or transferred to a computer or external device.

3. Photos and videos saved to the microSD card can be viewed and transferred while the camera is connected to a computer or external device using the included Type-C cable.

4. The camera can also function as a web camera without a microSD card inserted for use with compatible video applications. To use web camera mode, power the camera OFF before connecting it to a computer using the included Type-C cable. The display screen will show a camera icon.

Note: In web camera mode, the camera may automatically connect through compatible video applications or your computer's camera settings menu.

Note: Web camera mode supports video display only. This device does not include a microphone. Users must configure separate audio input and output devices.

Tip: For smoother playback, it is recommended to transfer video files to your computer before viewing.

⚠ WARNINGS:

- Wipe the product clean with a soft, dry cloth when needed.
- Store the product in a cool, dry place when not in use.
- Turn the product off when not in use to conserve battery life, if applicable.
- Keep the product away from heat sources, open flame, and direct prolonged sunlight.
- Do not use near water or in wet conditions unless specifically designed for water use.
- Do not modify, disassemble, or otherwise alter the product.
- Discontinue use if the product becomes damaged, overheats, or malfunctions.
- Keep fingers, hair, loose clothing, and small objects away from moving parts, where applicable.
- Adult supervision is recommended during setup, charging, and battery installation, where applicable.
- Use only the included or recommended accessories and charging components, where applicable.
- Follow all operating instructions before use.
- Keep packaging materials away from children and dispose of properly.
- Not suitable for children under the recommended age listed on packaging.
- Do not dispose of the product in fire.
- Recycle or dispose of batteries properly according to local regulations.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Mini Pocket Camera

Rechargeable Digital Camera



Product Specifications:	
Camera Measures Approx.:	1.8 x 1.3 x 0.95 in
Display Screen Measures Approx.:	0.96 in
Internal Memory:	2 MB (approximately 50 still photos)
Video Format:	AVI
Video Resolution:	1920 x 1080P
Image Format:	JPG
Memory Card:	Maximum 32GB microSD card (Included 256MB)

FOR AGES 6+ | Model: TOY-MINICAM



Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
MADE IN CHINA

Instruction Manual

Please read this instruction manual carefully before using.

Contents:

1 x Mini Digital Camera	1 x Chain Lanyard
1 x USB-A to USB-C Charging Cable	1 x Keychain Clasp
1 x 256MB microSD Starter Memory Card	



1. On/Off Power Button
2. Video/Photo Capture
3. Scroll Up
4. Scroll Down

Charging Your Camera

Before first use

1. Charge your camera fully using only the included USB-A to USB-C charging cable.
2. To charge, insert the USB-C (small end) of the charging cable into the USB port on the bottom of the camera.
3. Insert the USB-A (large end) of the charging cable into a USB port or an adapter to use an AC outlet.
WARNING: A 5V/1A or lower charging adapter is recommended. Exceeding 1A may damage the camera.
4. While the camera is charging, the red charging indicator light and the blue power indicator light on the right side back of the camera will both be ON.
5. When charging is complete, only the blue light will remain on.
6. When the battery charge is low, the camera will enter protection mode and will not turn ON. Recharge the battery according to the above instructions.

Use

Inserting the microSD card

Before taking photos or recording videos, ensure that the memory card is inserted correctly into the camera.

1. Locate the microSD slot located next to the USB port on the bottom of the camera.
2. Insert the microSD card into the slot with the metal contacts entering first. Note: Do not force the card into the slot. Incorrect insertion may damage the card or device.
3. Gently press the card into the slot until it clicks into place.
4. Ensure the card is fully seated before powering the camera ON.

Removing the microSD card

1. Power the camera OFF before removing the card.
2. Gently press the microSD card inward until it releases.
3. Carefully pull the card out of the slot.

Power ON/OFF

1. Locate the Power ON/OFF button on the top of the camera.
2. Press the Power ON/OFF button until the blue power light comes ON and the sound prompt/welcome LCD screen indicates the camera is ON.
3. To power OFF the camera, press and hold the ON/OFF button until the sound prompt/goodbye displays and the LCD screen turns black.

Note: To preserve battery life, the camera has an Auto Power OFF setting. After the selected time setting is saved, the camera will give a sound prompt and turn OFF after the selected amount of time .

Auto power OFF

The device will automatically save video data and shut down in the following cases:

1. When recording, if the battery power is low, the system will first save the video content and then shut down automatically.
2. When the disk space is full, the device will automatically save the files and shut down.
3. In standby mode, if there is no operation for 3 minutes, the system will shut down automatically.

Taking photos

1. Ensure that the memory card is inserted in the camera's card slot.
2. The device enters the photo mode directly after power-on, with the blue light ON continuously.
3. Short press the Photo/Video Capture button to take a photo.
4. In photo mode press and hold the Down button, located on the right side of camera, to turn the flash ON/OFF.

Photo/video filters

While in Photo or Video Mode, press the Up or Down buttons, located on the right side of the camera, to cycle through different color effects and screen filters. The selected effect will be applied to photos and videos until changed or turned off.

Recording videos

1. After power-on, short-press the Power ON/OFF button once to switch to video recording mode.

Note: Included memory card must be inserted to record video.

2. Short press the Photo/Video Capture button once to start video recording and press it again to end or pause the current recording.

Note: The blue power indicator light will slowly flash when video is recording.

3. Press the Power ON/OFF button to preview the current video.
4. Press the Photo/Video Capture button to play or pause the current video.
5. Press the power ON/OFF button once to exit and move to settings mode and a second time to return to photo mode.

Viewing photos & videos

1. Short press the Power ON/OFF button twice consecutively to switch to the gallery mode, where you can view videos or photos.
2. Press the Photo/Video Capture button to play or pause videos.
3. Press the Up/Down button to switch between photo or video files.
4. Press and hold the Photo/Video Capture button to pop up the file deletion prompt.
5. To delete a photo or video, press and hold the Photo/Video Capture button to enter Delete Mode. Use the Up/Down buttons to select "Yes" or "No," then press the Photo/Video Capture button to confirm.

Settings

1. Short press the Power ON/OFF button three times continuously to switch to the settings mode.
2. Then short press the Up/Down button to select the item to be set and press the Photo/Video Capture button to confirm and save the settings.
3. Press the power ON/OFF button to exit settings menu.

Setting Options

1. **Size:** 3M/2M - Adjusts photo resolution.
2. **Capture Timer:** Off/2s/5s/10s
3. **Resolution:** Select video recording size and quality (1080P/720P/VGA).
4. **Time Stamp:** Displays the date and time on photos. (Off/On)
5. **Languages:** English/Simplified Chinese/Traditional Chinese/Japanese/French/German/Korean/Italian/Portuguese/Russian/Thai/Hebrew
6. **LCD Off:** Select auto screen shut-off time. (Off/1min/2min/3min)
7. **Auto Off:** Select automatic power-off time. (Off/3min/5min)
8. **Volume:** 0/1/2/3/4/5/6/7
9. **Format:** Cancel/OK (**WARNING:** when you select "OK", the camera will erase all the photos and videos currently stored on your memory card and rebuild the file system, so it is clean and ready to use.
10. **Date & Time Setting:** Press the Photo/Video button to scroll through settings. Use Up/Down buttons, located on the right side of the camera, to change the date or time. Press the Photo/Video button to save and continue. After the final setting, the camera will automatically exit to the Settings menu.
11. **Syst. Reset:** Resets all settings and deletes all saved photos/videos. (Cancel/Ok)
12. **Version:** Camera model version.