




Assembly Instructions

42" Square Fire Pit Nightfall Forest

Model # 5A-HA174

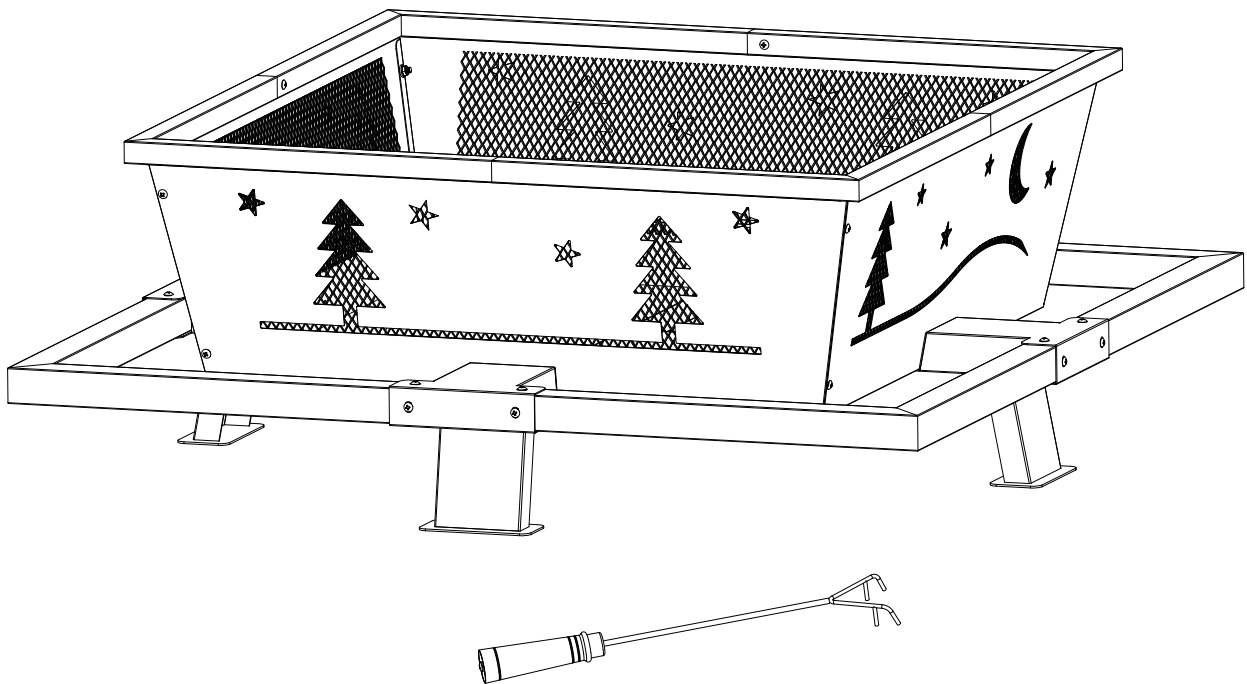

Please keep this instruction manual for future reference

WARNING

READ INSTRUCTION MANUAL BEFORE ATTEMPTING TO
ASSEMBLE OR OPERATE THIS PRODUCT.

Adult assembly required.

Keep screws and parts out of reach of children.

(Made in China)

PRECAUTION


Use caution and common sense when using your outdoor fire ring . Failure to adhere to the safety warnings and guidelines in this manual could result in bodily injury or property damage . Save this manual for future reference.

WARNING

1. DO NOT use this fire pit without reading all warnings and instructions.
2. Always empty the fire pit before each use.
3. Place the fire pit no closer than 24 inches from walls during use.
4. Avoid using near or under overhanging trees and shrubs.
5. Use on a hard, level, non-combustible surface (e.g., concrete, rock, or stone).
6. DO NOT use on wooden decks, carpet, grass, or furniture.
7. This item is for outdoor use only. DO NOT use in buildings, garages, or enclosed areas.
8. Keep all electrical cords away from the hot fire pit.
9. Never store or use gasoline or other flammable liquids near the fire pit.
10. DO NOT store or use an LP gas cylinder within 10 feet (3.05 m) of this fire pit while in operation.
11. DO NOT move or touch the unit during use.
12. Never leave the hot fire pit unwatched.
13. Keep children and pets away from the fire pit during use.
14. DO NOT lean over the fire pit when lighting or in use.
15. Use long, sturdy fire pit tools when adding or moving logs.
16. DO NOT use gasoline, kerosene, diesel fuel, or lighter fluid to start or relight fires.
17. DO NOT use in windy conditions.
18. DO NOT use in or on boats or recreational vehicles.
19. DO NOT put away the fire pit until it has cooled down.
20. DO NOT use water to extinguish the fire.
21. Never leave the fire pit out in the rain without a cover.
22. Ensure the fire pit is thoroughly cooled before storage.
23. DO NOT alter this fire pit in any way.
24. This fire pit is very hot!
25. Toxic carbon monoxide fumes can accumulate and cause asphyxiation or death.
26. Rain mixing with ash can form corrosive agents.
27. Death, serious injury or damage to property may occur if the above is not followed exactly.

 **WARNING:** Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, can expose you to chemicals including carbon black, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

Parts List

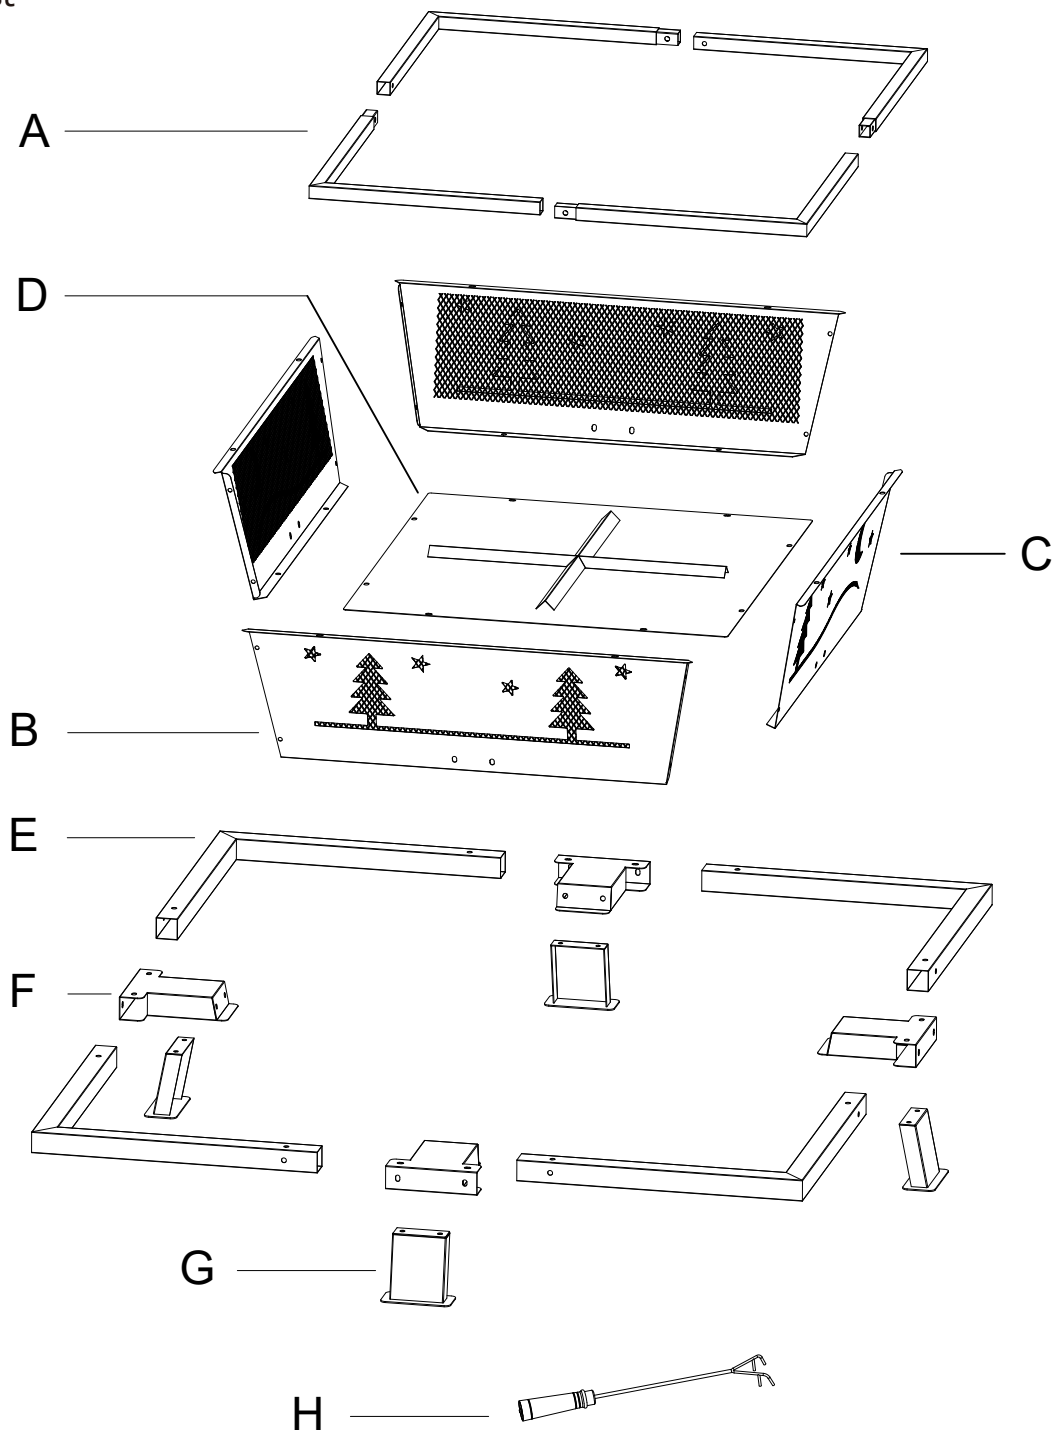

Part	Description	Quantity
A	Bowl Rim	4
B	Side Panel B	2
C	Side Panel C	2
D	Bowl Base	1

Part	Description	Quantity
E	4-Section Tube	4
F	4-Section Tube Connector	4
G	Leg	4
H	Fire Poker	1

HARDWARE	Description	Quantity
AA	M6×12 mm Bolt	60
BB	M6 Nut	8




AA




BB

Step 1

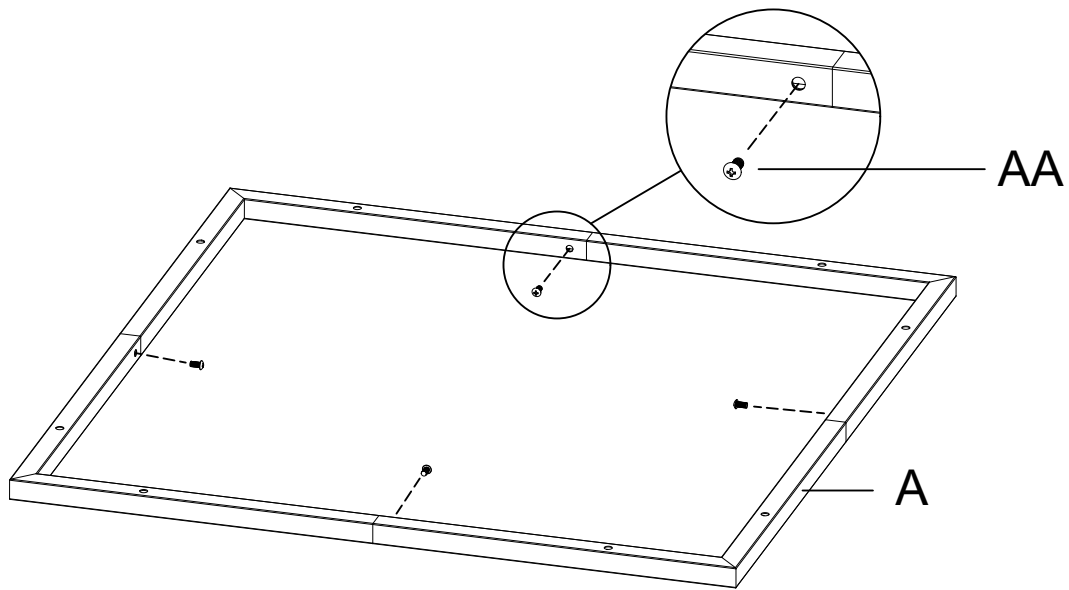


Attach the Fire Bowl Rim (A) using 4 × M6
× 12 mm Bolts (AA).

Step 2

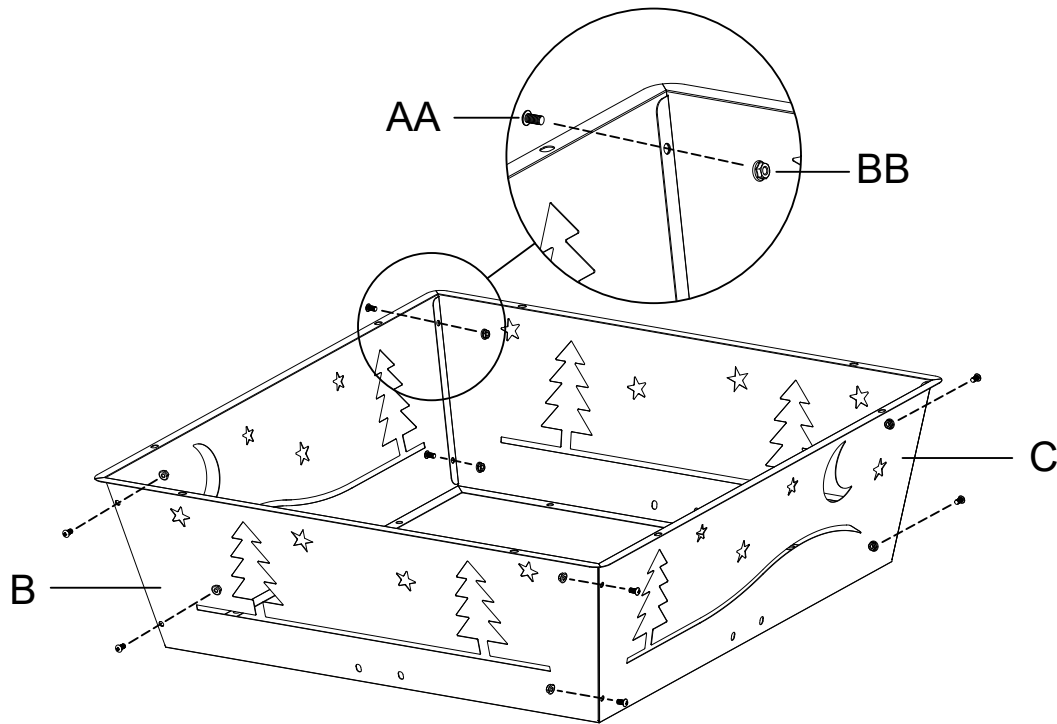


Attach Side Panel (B) to Side Panel (C) using 8 × M6 × 12 mm Bolts (AA) and 8 × M6 Nuts (BB).

Step 3

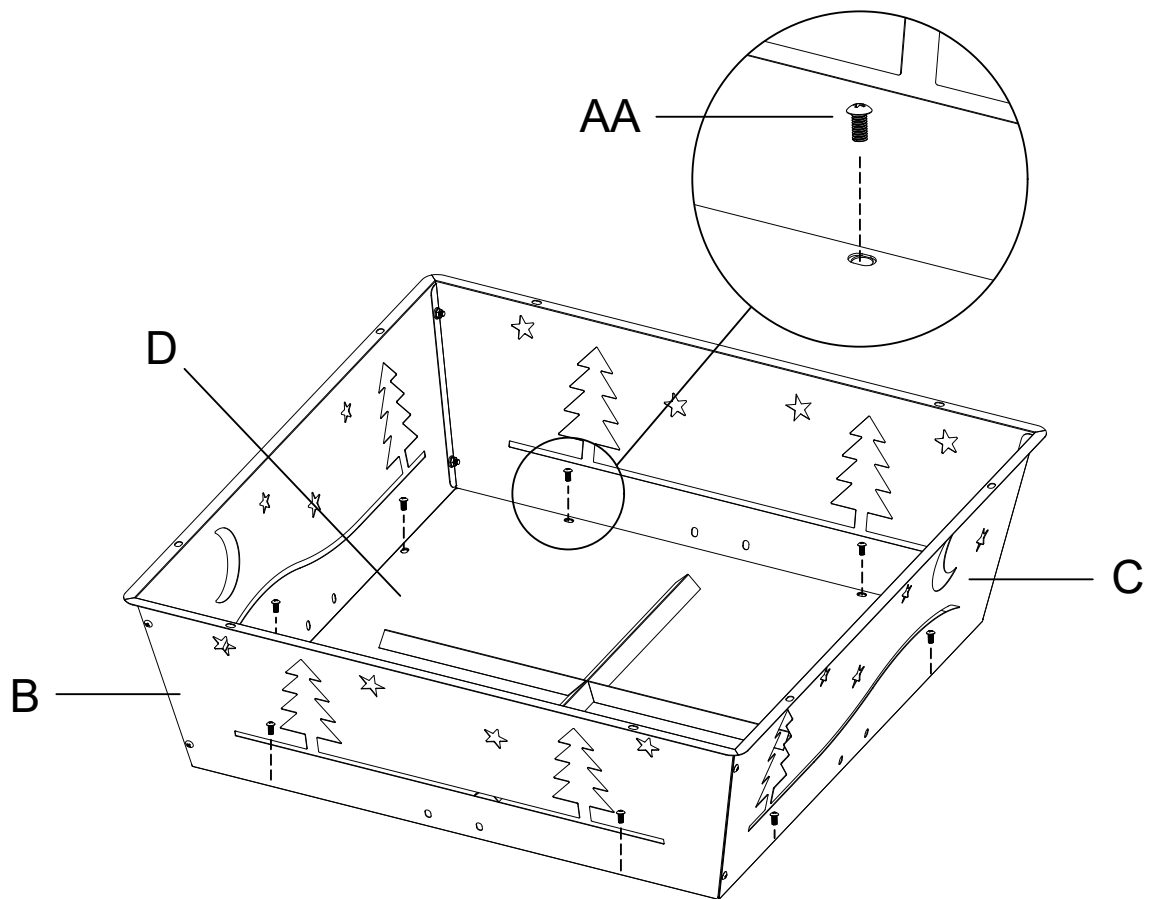


Attach the assembled Side Panels to the Fire Bowl Bottom (D) using 8 × M6 × 12 mm Bolts (AA).

Step 4

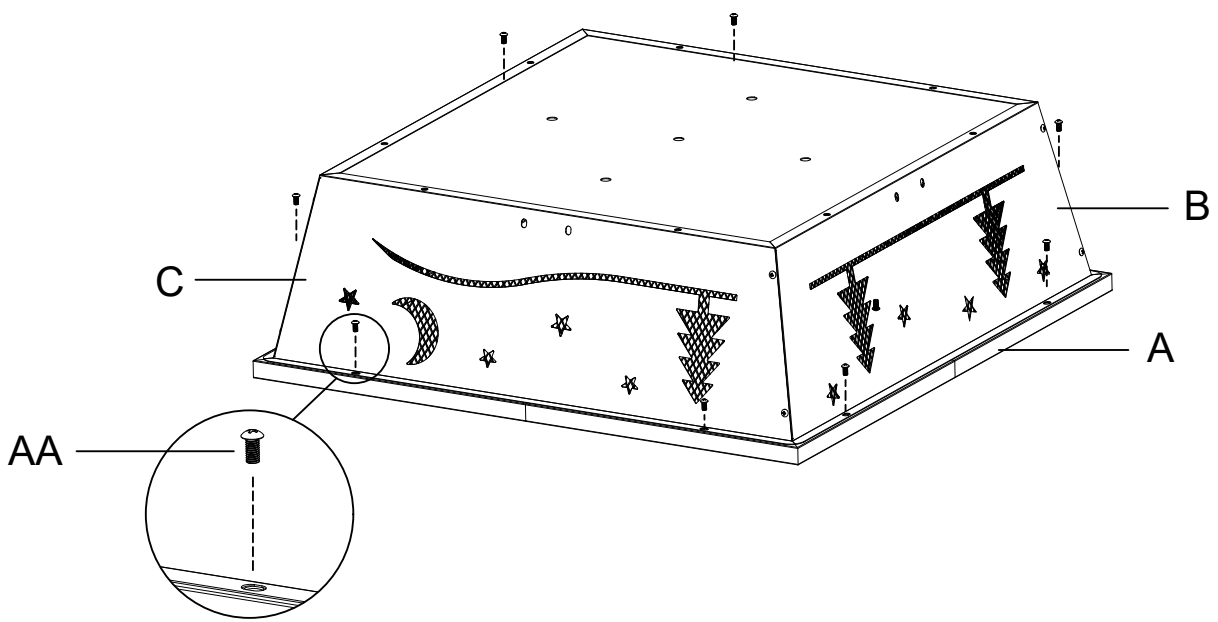


Attach the assembled Fire Bowl to the Fire Bowl Rim (A)8 × M6 × 12 mm Bolts (AA).

Step 5

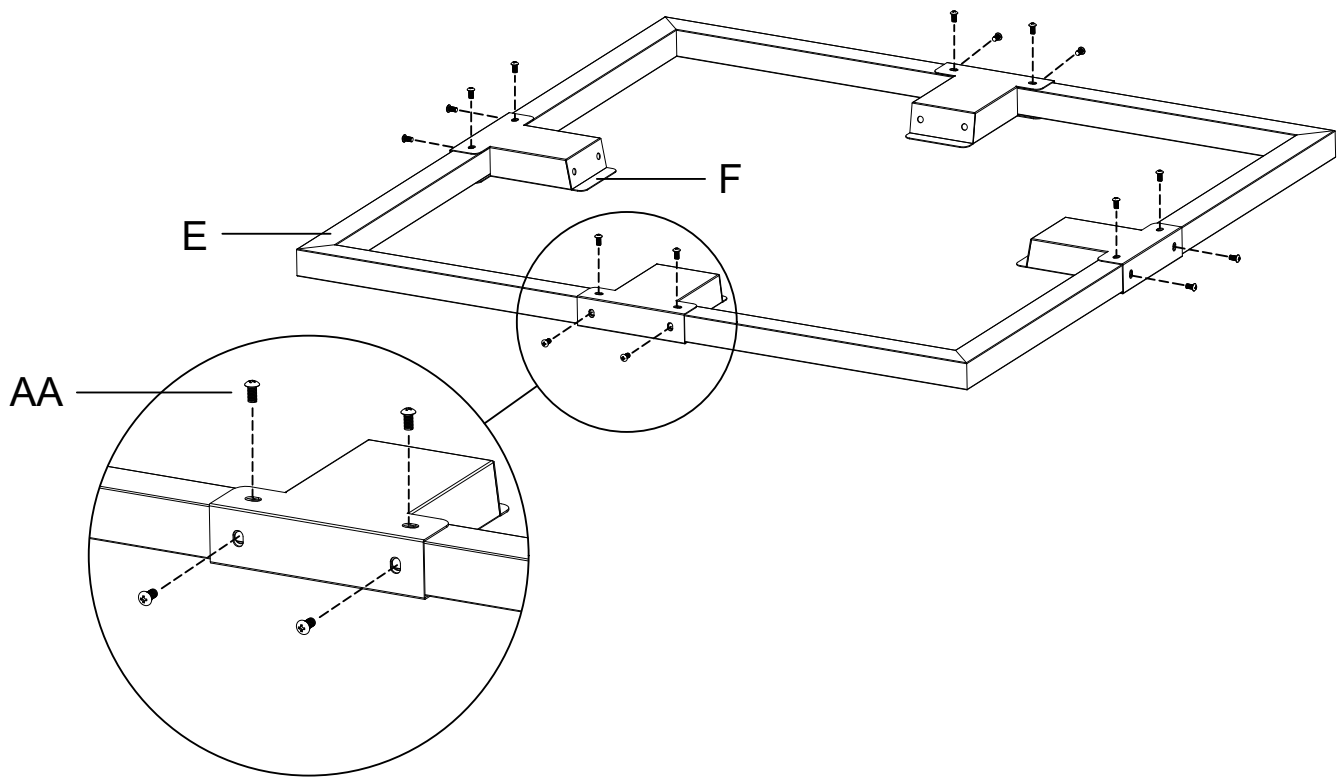


Attach the Tube Sections (E) to the Tube Connectors (F) 16 × M6 × 12 mm Bolts (AA).

Step 6

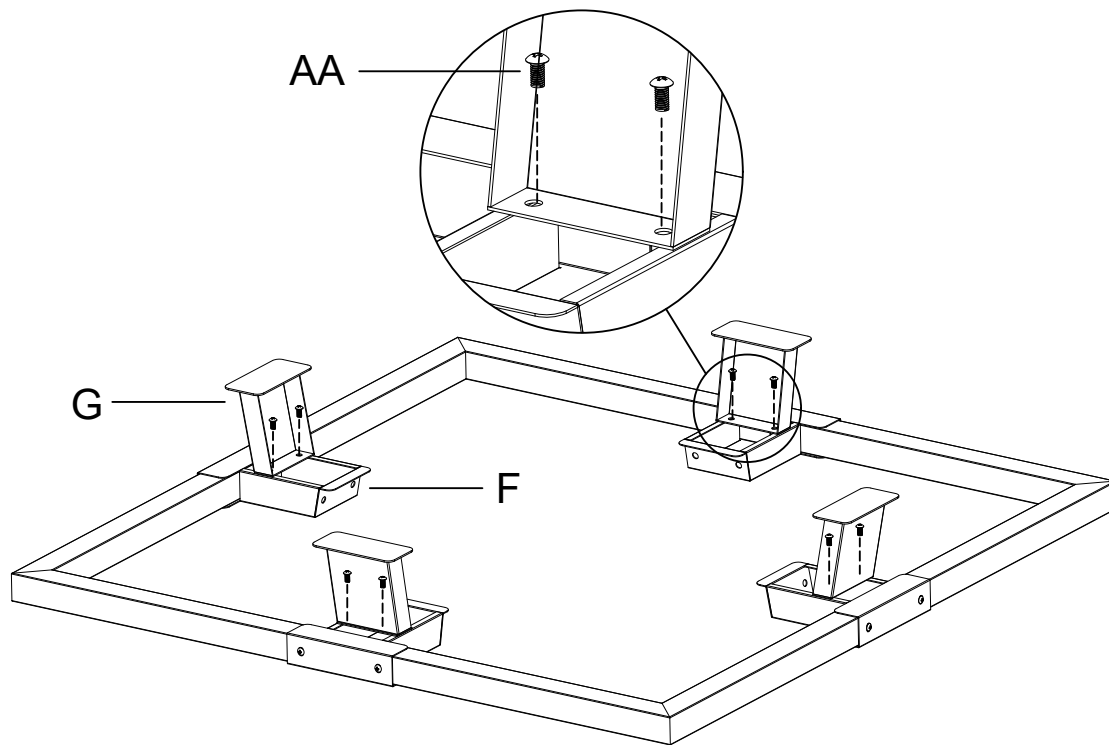

Attach the Legs (G) to the Tube
Connectors (F) 8 × M6 × 12 mm Bolts (AA).

Step 7

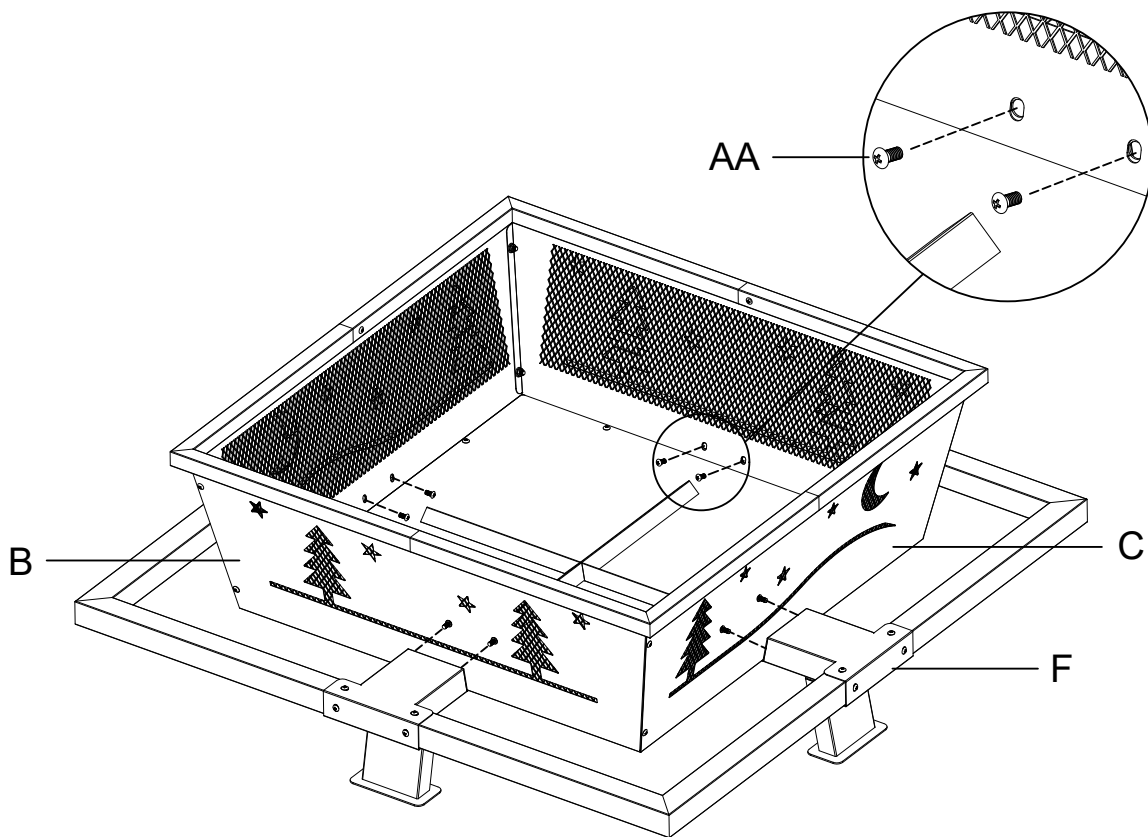

Attach the assembled Fire Bowl (from Step 4) to the Tube Connectors (F) 8 × M6 × 12 mm Bolts (AA).

WARRANTY INFORMATION

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer/purchaser that all aspects of this product will be free of defects in material and workmanship for one (1) year from the date of purchase. A replacement for any defective part will be supplied free of charge for installation by the consumer. Defects or damage caused by the use of other than genuine parts are not covered by this warranty. This warranty shall be effective from the date of purchase as shown in the purchasers receipt.

This warranty is valid for the original consumer/purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse, or product misuse, whether performed by a contractor, service company, or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.



For questions or comments please call 800-545-9633.