



Thank you for choosing Haunted Hill Farm!
If you have any questions, concerns or suggestions,
please contact us directly.

Boo@HauntedHillFarm.com (Anytime)

1-888-840-4559

9AM-9PM EST Monday-Friday

9AM-5PM EST Saturday-Sunday

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

If you picked up your product up at a retail store, please also advise the name, city and state of the store where you received your product.

Please do not return this item to the retailer.

See the full Haunted Hill Farm collection and get online support for assembly, troubleshooting, care and maintenance at:

www.HauntedHillFarm.com

Follow us on social!

Facebook & Instagram: *@officialhauntedhillfarm*

YouTube & TikTok: *@hauntedhillfarm*

Please follow the step by step guide and enjoy your-

HHBRDEGRM-1FLSA



The model number of your item is printed on the side of your carton.
Always use this number to identify your item.


Thank you for your purchase of this quality Halloween decor. With proper use and care, your Halloween decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, **DO NOT** return it to the place of purchase. Please call our toll-free number: **1-888-840-4559** and a customer service representative will assist you. Enjoy your Holiday!

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT. CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM, OR BY PHONE 9AM-9PM EST MONDAY-FRIDAY, 9AM-5PM EST SATURDAY-SUNDAY AT 1-888-840-4559.


INSTRUCTIONS

PARTS

A.

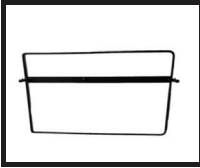

B.

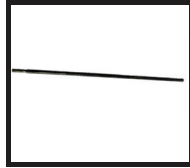

C.




D.




E.



F.

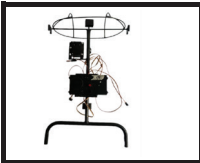

G.

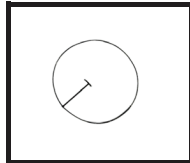

H.



I.



J.




K.



L.



M.

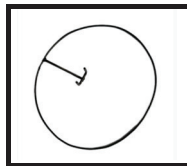

N.



O.



P.




Q.



R.




S.

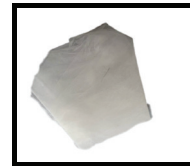

T.



U.






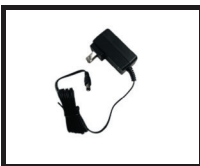


- A. BASE
- B. SUPPORT POLES
- C. SUPPORT POLES (4)
- D. SHOES
- E. PANTS
- F. TORSO FRAME
- G. HIP
- H. CLOTHES
- I. RIGHT ARM

- J. LEFT ARM
- K. HEAD
- L. TORSO FRAME
- M. HIP
- N. DRESS
- O. RIGHT ARM
- P. RIGHT ARM
- Q. FLOWER
- R. HEAD

- S. VEIL
- T. TRY ME BUTTON
- U. ADAPTER

ASSEMBLY

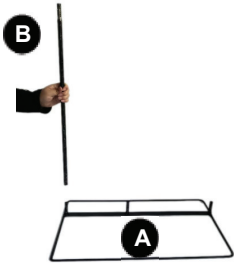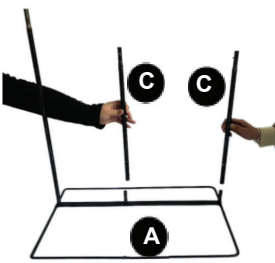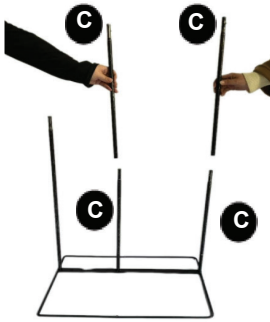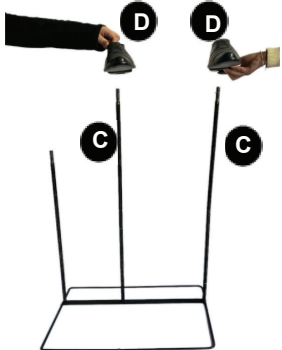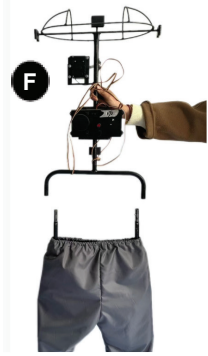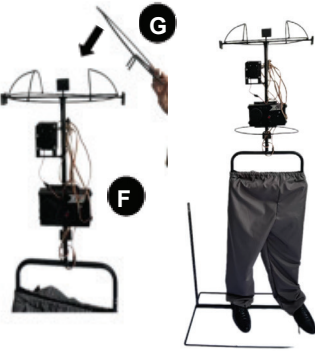			
1. The longer end of the base (A) goes toward the front. Attach support poles(B) to the base (A) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.	2. Attach support poles(C) to the base (A) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.	3. Attach support poles(C) to the support poles (C) as shown and secure by aligning the quick-connected push button into the pre-drilled holes.	4. Setting the shoes(D)to the support poles(C) as show.
			
5. Lower the pants (E) over the support poles(C) as show.	6. The torso frame (F) to the support poles(C)as shown.	7. Lower the hip (G) over the torso frame(F) into the hole on the torso frame as shown.	8. Lower the costume(H) over the torso frame(F) as shown .
			
9. Side the arms (I) & (J) up through the sleeve and slide the forked- hooked into hole on the torso frame (F).	10.Set the head (K) onto the torso frame into the hole,carfully connect conector jack wired from the funtion box to the head,	11. The torso frame (L) to the support poles(B)as shown	12. Lower the hip (M) over the torso frame(L) into the hole on the torso frame as shown.

ASSEMBLY



13. Lower the dress (N) over the torso frame(L) as shown .



14.Side the arms (O) & (P) up through the sleeve and slide the forked-hooked into hole on the torso frame (L).




15. Setting the flowers(Q)



16. Set the head (R) onto the torso frame into the hole, carefully connect the connector jack wired from the function box to the head, then setting the veil (S) as shown.

OPERATING INSTRUCTIONS

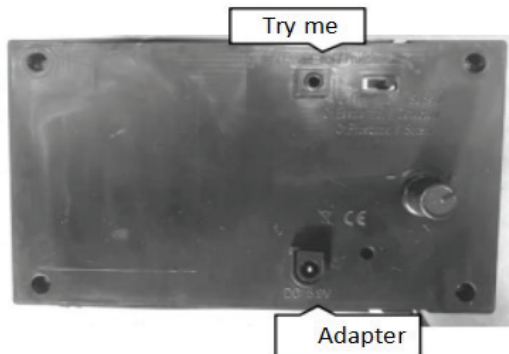

1. The Witch has 2 operation settings which can be the main function control box on the torso frame.

2. Try me: This setting allows the item to only be activated when you push the try me button is activated.

Sensor: This setting included IR sensor ,this setting allows the item to only be activated.

When the sensor is activated,the item will operate for one audio-cycle with sensor activation.


IMPORTANT SAFETY INSTRUCTIONS



Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 15.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

Battery Diagram

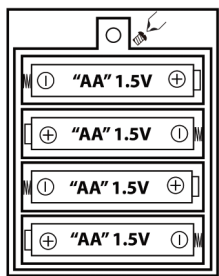

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Haunted Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and subcomponents of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HAUNTED HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Boo@HauntedHillFarm.com