



#2803880
Motion Activated
Animated Witch

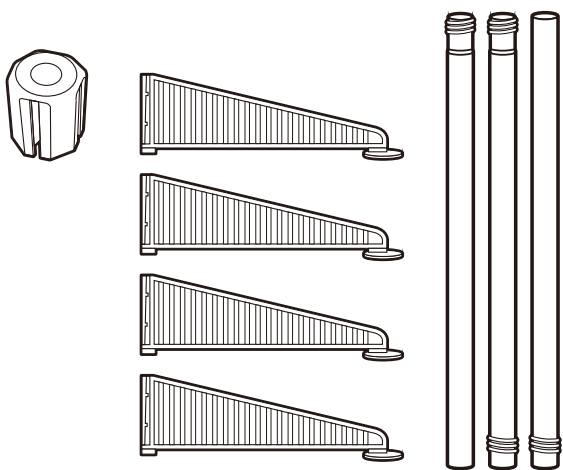


1

Battery Fitting.
Locate the battery compartment under garments at the base of the head.
Unscrew and remove the battery cover.
Install new AA batteries.
Refit the battery cover and screw.
Slide **ON/OFF** switch to **ON**.

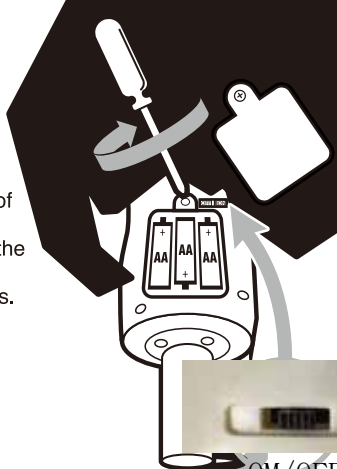


2

Stand Base.
Slide and push the four feet firmly into the centre support of the stand.

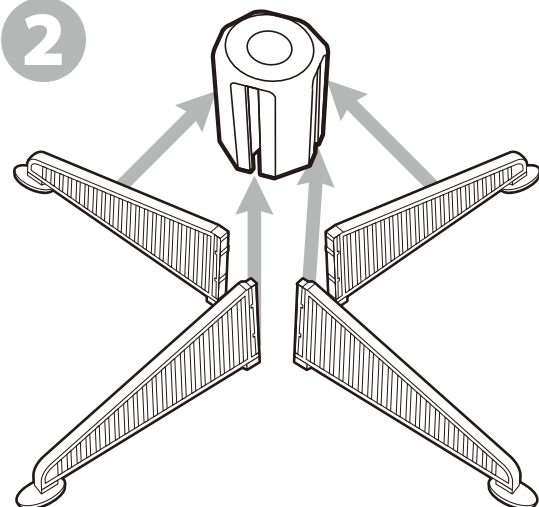

3


Assemble the stand poles by tightening together. Push the pole firmly into stand base.

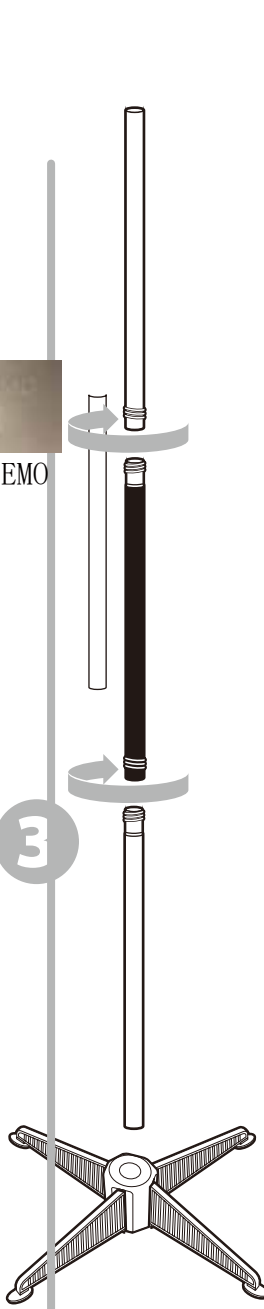

4

Push the battery compartment firmly onto stand and arrange the character's garments. Push the button found on the hand/wrist. Push once for Demo mode. Push twice to fully activate. To turn off, slide switch to OFF on the battery compartment.

ACTIVATE

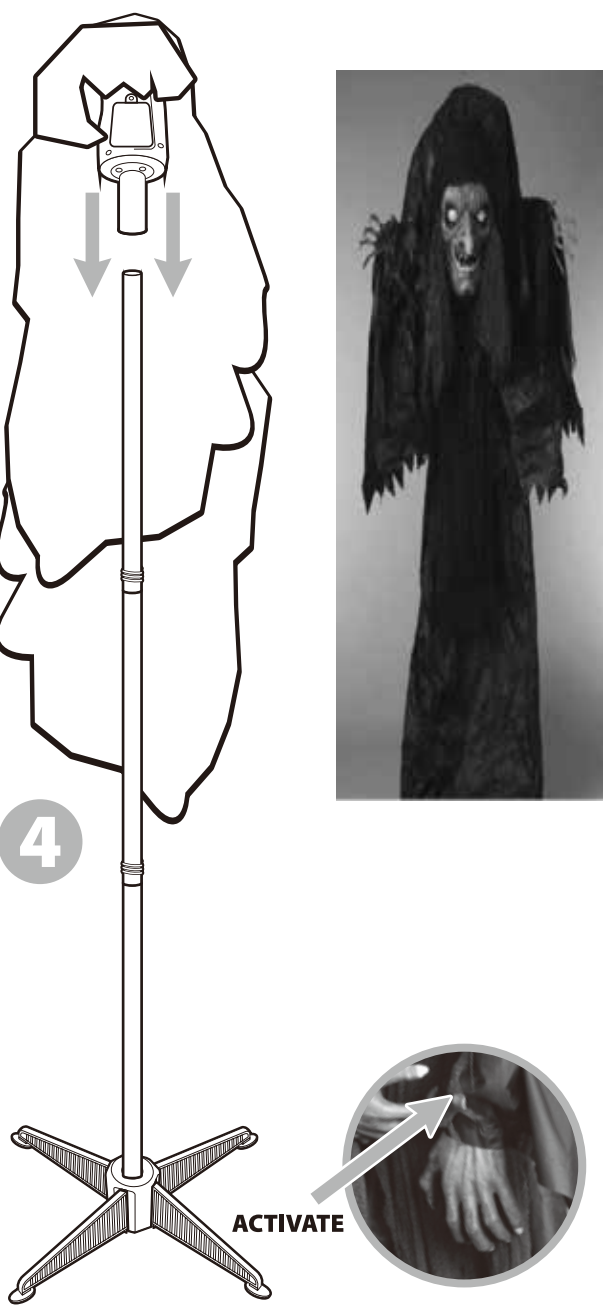

3AA(1.5v) BATTERIES REQUIRED (INCLUDED)
三档开关: ON/OFF/DEMO
(1) ON:眼睛亮灯, 声音, 动作, 此功能持续60秒后结束, 需声控感应触发
(2) OFF:关机状态
(3) DEMO: 使用TRY ME 功能, 眼睛亮灯, 声音, 动作, 此功能持续60秒后结束