 


Wastewater Separation Pet Fountain

Model: PW17

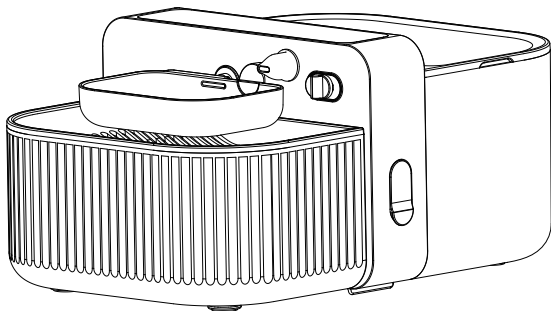

User Manual

Safety Warnings

 
1. This water fountain is recommended for pets over 6 months old.
2. Designed for indoor use only. Keep away from direct sunlight.
3. Always use the adapter provided with this product. Using other adapters may cause malfunction or damage.
4. Do not immerse the main unit in water or any other liquid. Keep it dry at all times.
5. To prevent your pet from knocking over the fountain, place it against a wall or in a secure location.
6. Children should use the fountain only under adult supervision.
7. Unplug the power cord when the fountain is not in use.
8. Do not operate the fountain without the sewage tank to avoid spills.
9. Since the device is often used in damp conditions and is subject to water splashes, battery removal and replacement must be performed by a professional to avoid safety hazards caused by water entering the battery compartment. If repair is needed, please contact the manufacturer directly.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Package Contents



Smart Pet Water Fountain



Power Cable



Power Adapter



User Manual

Product Introduction

 
Display Screen

Stainless Steel Bowl

Water Bowl Base

Sewage Tank Lid

Sewage Tank

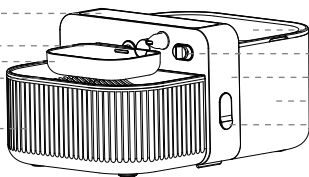

Clean Water Tank Lid

Bowl Release Switch

Main Unit

Clean Water Tank


Power Button
(Type-C Port with
Rubber Cover)

Specifications


Model	PW17
Dimensions (L × W × H)	9.06 × 13.07 × 5.91 in (23 × 33.2 × 15cm)
Clean Water Tank Capacity	3.5L
Sewage Tank Capacity	2L
Material	ABS, 304 stainless steel
Input	5V $\overline{\text{---}}$ 1A

Installation

 
1. Take out the water fountain and all its accessories.

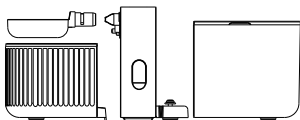

 
2. Assemble the water bowl as shown, then securely attach the clean water tank lid.

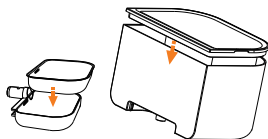

 3. Align and insert the clean water tank onto the base.

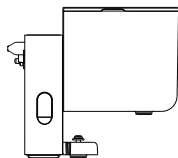

 4. Slide and hold the unlock button to the right, then insert the water bowl into the slot, ensuring it aligns with the guide rails.

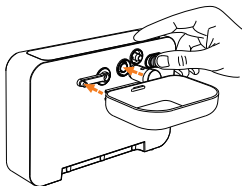

5. Insert the water outlet rubber sleeve into the slot.



 
Scan QR code for
installation video




Assembly
Tutorial

6. Install the sewage tank cover as shown.

Align the main unit with the sewage tank, lower it vertically, and secure it in place.

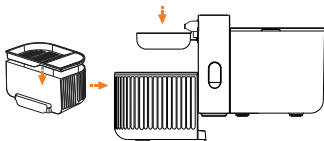

LED Display Overview

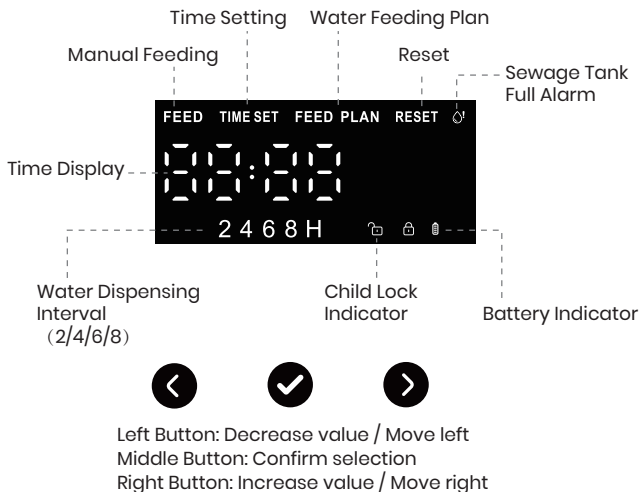 


Note:

Use the Left and Right buttons to navigate or adjust settings.

Function Introduction

Before setup, open side cover and switch ON.

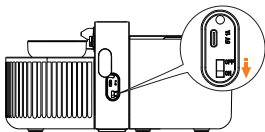

1. Manual Water Feeding



Press and hold the "✓" button for 2 seconds to unlock.

Select "FEED", then press "✓" to confirm.

2. Automatic Water Feeding

2.1 Current Time Setting

Hold "✓" for 2 seconds to unlock.

Press "◀ ▶" to select TIME SET, then press "✓".

The hour will flash — use "◀ ▶" to adjust, then press "✓" to confirm.

Set the minutes in the same way, then press "✓" again to finish.



Note:

Exits setting mode automatically after 30s of inactivity and return to standby.

The local time setting is for reference only.

2.2 Water Dispensing Schedule

Press and hold the "✓" button for 2 seconds to unlock.

Press "◀ ▶" to select "FEED PLAN", then press "✓" to confirm.

Use "◀ ▶" to select the dispensing interval: 2H / 4H / 6H / 8H

(The unit will automatically dispense water every 2 / 4 / 6 / 8 hours based on your selection.)

Press "✓" to save your setting.

Scan QR code for
water schedule video



Water Schedule
Tutorial

Example:

Selecting 4H dispenses water automatically every 4 hours.



Note:

Default dispensing interval is 4H.

3. Battery Status

Charging: Green light flashing.

Fully Charged: Green light steady on.

Low Battery: Red light flashing.



Note:

In battery mode, the lock indicator flashes every 5 seconds. This is normal and not a malfunction.

Connect the charger to stop the flashing. The battery indicator will remain solid.

4. Sewage Tank Full Alarm

Red light flashing – tank full, please empty promptly.



5. Reset



While unlocked, press “◀ ▶” to select RESET (flashing), then press and hold “✔” for 5s to reset the feeder. All settings, including time (00:00) and water feeding plans, will be cleared.

Note:

Two beeps confirm the reset.

Maintenance Tips



1. Fresh Water

Refill every 3–9 days



2. Sewage Tank

Empty every 3–6 days to help prevent bacteria growth




3. Stainless Steel Bowl


Clean once a week

Disassemble for Cleaning


1. Unplug the device before cleaning.

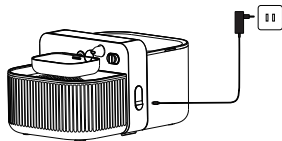


2. Remove the clean water tank and sewage tank, and empty any remaining water.

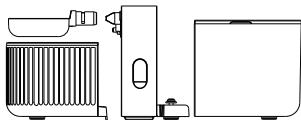


3. Release and remove the water bowl by pressing the bowl release switch.

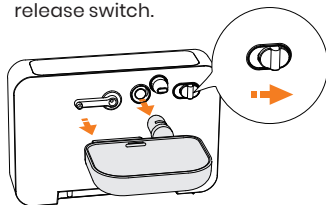

4. Washable parts:
Clean the water tank, sewage tank, and water bowl.

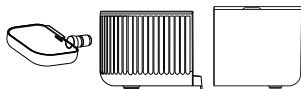

5. Non-washable parts:
Do not immerse or rinse the main unit; wipe with a dry cloth.

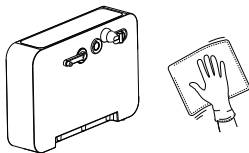

Scan QR code for
cleaning video



Disassembly &
Cleaning Guide

Troubleshooting

Problem	Solution	Note
No water output	Restart the device. Use manual dispensing to check if the pump and bowl rotation work properly.	/
Bowl does not reset	Ensure the bowl is correctly installed and aligned with the guide track.	/
Device Not Powering On	Check if the power switch is turned on. If the switch is on but the device still won't start: • Battery voltage may be low. Connect the charger and charge for 10 minutes, then restart the device. • If the issue persists, the main unit may be defective.	Do not rinse the main unit. Wipe with a damp cloth only.
Screen Shows "88:88" Flashing Alarm	Water bowl is blocked by a foreign object. Remove the obstruction, dispense water manually once or restart the device to clear the alert.	Ensure the water bowl area is free from obstructions during use.
Pump Not Working / Loud Noise	Refill the clean water tank promptly.	/
Sewage Indicator On / Flashing	Remove the sewage tank, then empty and clean it when full.	/
Battery Status Flashing / Device Won't Power On	Recharge the batteries.	After low battery red flash, there is a short buffer period. Charge promptly to ensure continuous water supply.
No Sewage Full Alarm	Ensure the float sensor in the Sewage tank is installed correctly. Clean or remove debris if blocked.	Reinstall properly after cleaning to avoid malfunction.
Cannot Charge	Confirm charger output is stable at 5V. Replace with a compliant charger if needed. Replace damaged charging cable. Ensure plug contact is secure. Keep silicone cover on charging port to prevent water ingress.	/

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1877-522-8578(US) Mon-Fri 8am-5pm(PST)

🌐 www.oneisall.com



Oneisall support



@Oneisall Official



Any problem you have, please contact us:
support@oneisall.com



Oneisall
support

ON-D231