

Drivable Snowmobile Dolly


Instructions for Part # SMDOLLY



GENERAL GUIDELINES & SAFETY

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- All circumstances cannot be addressed in these instructions.
- Please use common sense and practice general safety measures when using this product.
- Parts and/or instructions are subject to change without notice.
- Do not run the snowmobile motor while the track dolly is in place.
- When driving with the ski dollies, do not exceed 5 mph.

PARTS

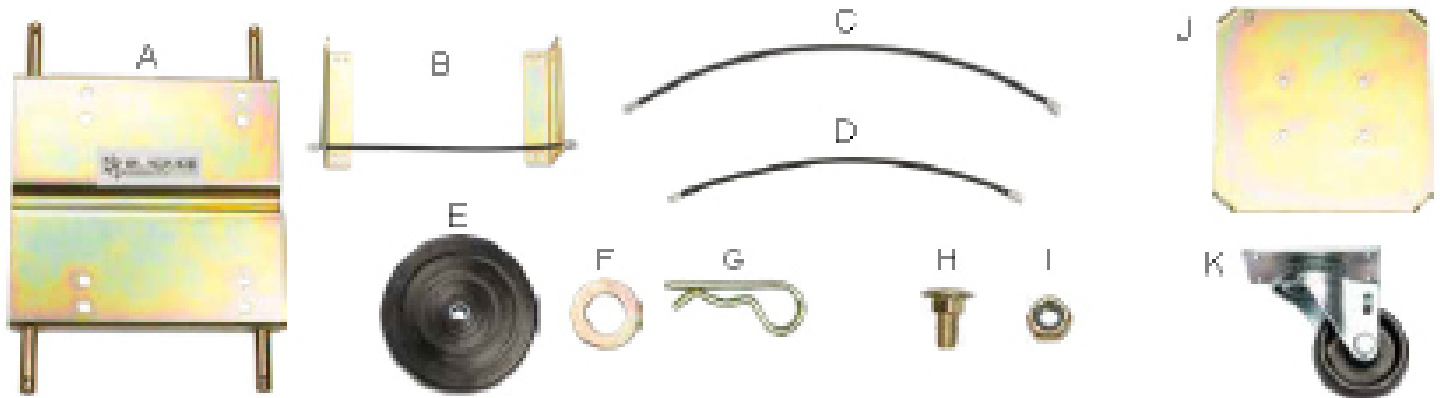


Tools Needed (not included): 10mm wrench

Part	Description	Qty.
A	Ski Dolly Base	2
B	Support Brace	2
C	Long Support Cable	2
D	Short Support Cable	2
E	Wheel	8



Part	Description	Qty.
F	M12 Washer	16
G	Pin Clip	8
H	M6x12 Carriage Bolt	12
I	M6 Lock Nut	12
J	Track Dolly Plate	1
K	Swivel Wheel	1

ASSEMBLY

Step 1. Assemble the track dolly: Attach the swivel wheel (K) to the track dolly plate (J) using four M6x12 carriage bolts (H) and four M6 lock nuts (I). Secure the nuts on the underside of the plate using a 10mm wrench.

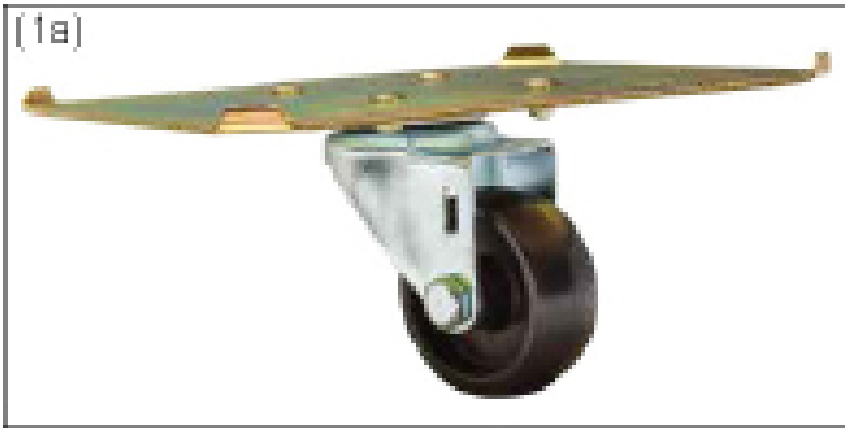


Step 2. Assemble the ski dollies. Attach the support brace (B) to the ski dolly base (A) using four M6x12 carriage bolts (H) and four M6 lock nuts (I). Secure the nuts on the underside of the base using a 10mm wrench. The support braces can be attached at different points to fit various ski sizes - measure your snowmobile skis before assembling.

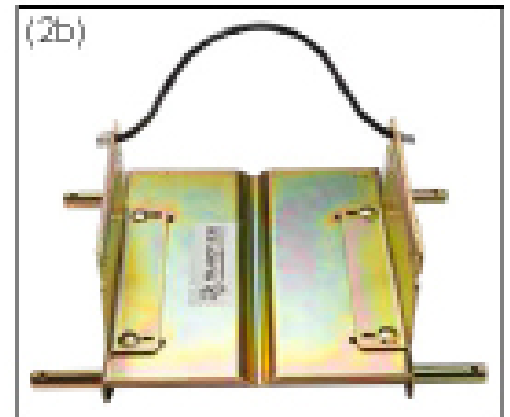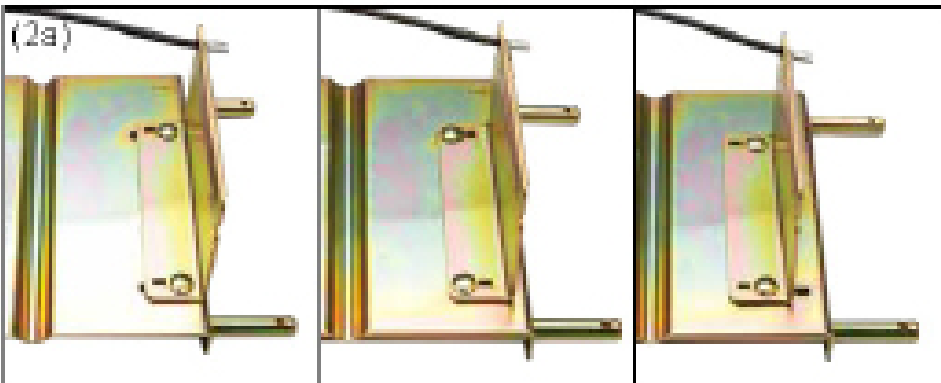

Step 3. Choose either the long support cable (C) or short support cable (D) depending what works best with your snowmobile. Fit one end of the cable into the support brace. The other end will be attached after the ski fits into the assembled dolly.



Step 4. Connect the wheels to the dolly. For each wheel, slide a washer (F) onto the axle, then a wheel (E), and another washer (F). Secure in place with a pin clip (G).

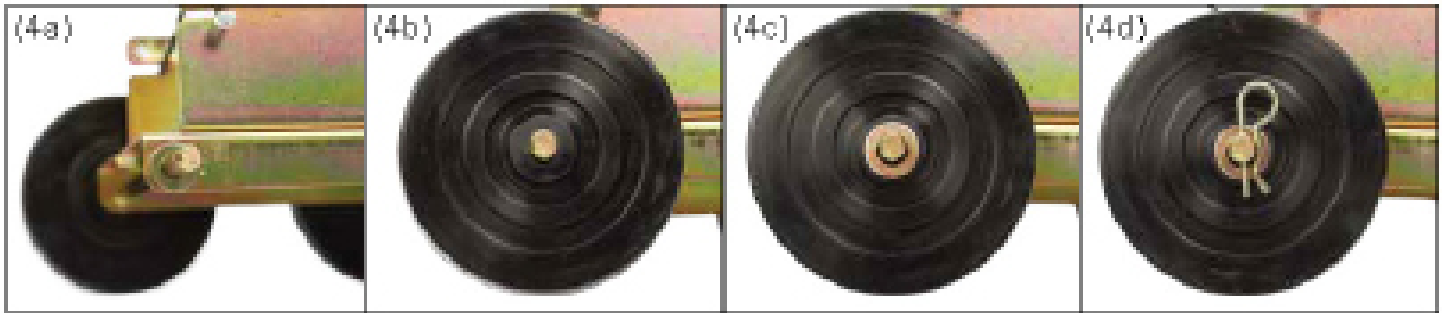


INSTALLATION AND USE

Fit the ski dollies onto the snowmobile skis. Position the dolly so the attached cable is towards the rear of the snowmobile. Tilt the ski up and slide the dolly into place so that the attached cable fits around the front of the ski leg. Loop the loose cable around the back of the leg and attach on the other side. The cables will cross over each other.

Place the track dolly under the snowmobile track. Lift the rear of the snowmobile and place the dolly in the center of the track, approximately 1' from the back of the track. Do not run the motor when the track dolly is in place.

The snowmobile can be driven with just the ski dollies in place. Do not exceed 5 mph when driving with the ski dollies installed.

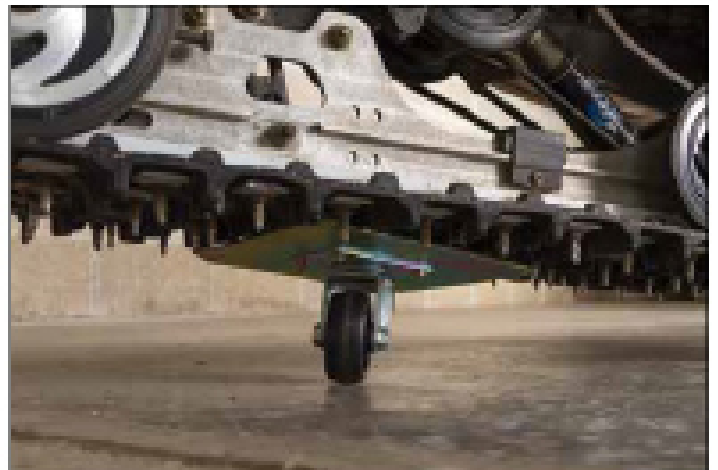

PRODUCT WARRANTY & LIABILITY

GENERAL PRODUCT WARRANTY: Products purchased from the Authorized Dealer (original place of purchase) or Merchant ("Dealer") will be free of defects in material and workmanship at the time of receipt, and will meet the specifications stated at the place of purchase transaction or online at the Dealer's website, under normal use and service when correctly installed, operated and maintained. This product warranty is effective for the period of time stated below, unless otherwise stated in the product instructions or depicted in the product advertisement. All Authorized Dealer warranties are NON-TRANSFERABLE and cover only the original end purchaser. This limited warranty does not cover products purchased through non-authorized dealers. Non-authorized dealer receipts are not accepted for warranty verification.

*****WARRANTY CLAIMS MUST BE MADE DIRECTLY TO THE ORIGINAL PLACE OF PURCHASE.*****

WARRANTY PERIOD: This warranty remains in force for one year from the date of the product's accepted delivery. The Authorized Dealer offers a one year manufacturer's warranty for most products unless otherwise specified on the product advertisement.

WARRANTY SERVICE: The Authorized Dealer will replace any defective or malfunctioning part at no charge, including payment of the shipping costs of parts or replacement product to and from the manufacturer. The purchaser is responsible for labor charges. If the product does not meet specifications as depicted in the advertisement, the Authorized Dealer will refund the full purchase price of the product.

Questions regarding the warranty on a specific product and warranty claims should be directed to the Authorized Dealer with whom the purchase transaction was made.

WARRANTY LIMITATIONS: The above warranty does not apply to products that are repaired, modified or altered by any party other than the Authorized Dealer; are subjected to unusual physical stress or conditions (such as overloaded ramps or corrosion), natural disaster, governmental actions, wars, strikes, labor disputes, riots, theft, vandalism, terrorism or any reason beyond reasonable control; are damaged due to improper installation, misuse, abuse, accident or negligence in use, storage, transportation or handling, or tampering; or to products that are considered consumable items or items requiring repair or replacement due to normal wear and tear.

Product should be inspected prior to signing for delivery. Product damage incurred during shipping, unless noted on the Bill of Lading at the time of delivery, renders this warranty void.

LIMITED LIABILITY: In no event shall **THE AUTHORIZED DEALER** be liable to the purchaser or any third party for any indirect, incidental, consequential, special, exemplary or punitive damages arising out of the use of the product, including, without limitation, property damage, loss of value of the product or any third party products that are used in or with the product, or loss of use of the product or any third party products that are used in or with the product.

