



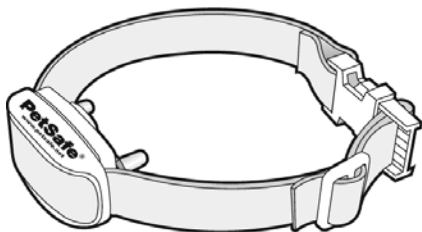

protect. **teach.** love.®

Model Number
PWF00-11923

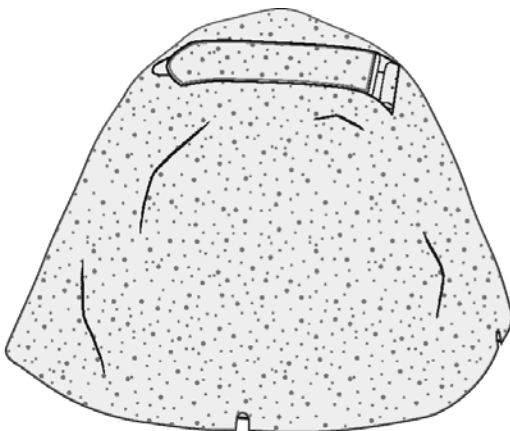

pawz away[®]
outdoor pet barrier
operating and training guide

PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠️ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠️ CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE

NOTICE is used to address safe use practices not related to personal injury.

⚠️ WARNING

- Not for use with aggressive dogs. Do not use this product if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury or death to their owners and others. If you are not sure that this product is right for your dog, please talk to your veterinarian or a certified trainer.
- Underground cables can carry high voltage. Have all underground cables marked before you dig to bury your wire. In most areas this is a free service. Avoid these cables when you dig.

CAUTION

This System is NOT a solid barrier. The system is designed to act as a deterrent, using Static Correction to condition pets to remain outside of the established barrier area. It is important that you reinforce training with your pet on a regular basis. Since the tolerance level to Static Correction varies from pet to pet, Radio Systems® Corporation CANNOT guarantee that the system will in all cases keep a pet outside of the established barrier area. Not all pets can be trained to avoid entering the barrier area. Therefore, if you have reason to believe that your pet may harm himself or pose a danger to others if he is not kept from entering the barrier area, you should NOT rely solely upon this system to restrict your pet. Radio Systems® Corporation shall NOT be liable for any personal injuries, property damage, injury to or death of your pet, economic loss or any consequential damages sustained as a result of any animal entering the barrier area.

Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage, ranging from redness to pressure ulcers. This condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.
- For additional information on bed sores and pressure necrosis, please visit our website.

These steps will help keep your pet secure and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

You may need to trim the hair in the area of the Contact Points. Never shave the dog's neck; this may lead to a rash or infection.

- To prevent an unintended correction, do not perform set up procedures while the Receiver Collar is on your pet.
- If you are using a collar and leash for training, be sure the extra collar does not put pressure on the Contact Points of the Receiver Collar.

NOTICE

To avoid damage to the transmitter do not submerge in water.


Thank you for choosing PetSafe® Brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products provide you with the tools and technologies to successfully train your pet. If you have any questions about our products or training your pet, please visit our website at www.petsafe.net or contact our Customer Care Center at 1-800-732-2677.

To get the most protection out of your warranty, please register your product within 30 days at www.petsafe.net. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, we will never give or sell your valuable information to anyone. Complete warranty information is available online at www.petsafe.net.

Components

Table of Contents

Components.....	5
Other Items You Will Need	5
How the Pawz Away® Outdoor Pet Barrier System Works.....	6
Key Definitions	6
Operating Guide - Wireless Option	7
Power Up the Barrier Transmitter.....	7
Set Up the Barrier Transmitter.....	7
Test the Barrier Area.....	7
Fit the Receiver Collar on Your Pet	8
Operating Guide - Wire Option	10
Determine Placement of Barrier Transmitter & Wire Layout.....	10
Connect the Wires to the Barrier Transmitter.....	12
Test the Barrier Area.....	13
Install the Boundary Wire	13
Fit the Receiver Collar	14
Additional Feature	14
Training Guide	15
Begin Your Pet's First Session	15
Further Training	15
Additional Information	16
Accessories.....	16
Troubleshooting	17
Terms of Use and Limitation of Liability	18
Compliance	19
Customer Care International	19
Perchlorate Battery.....	19

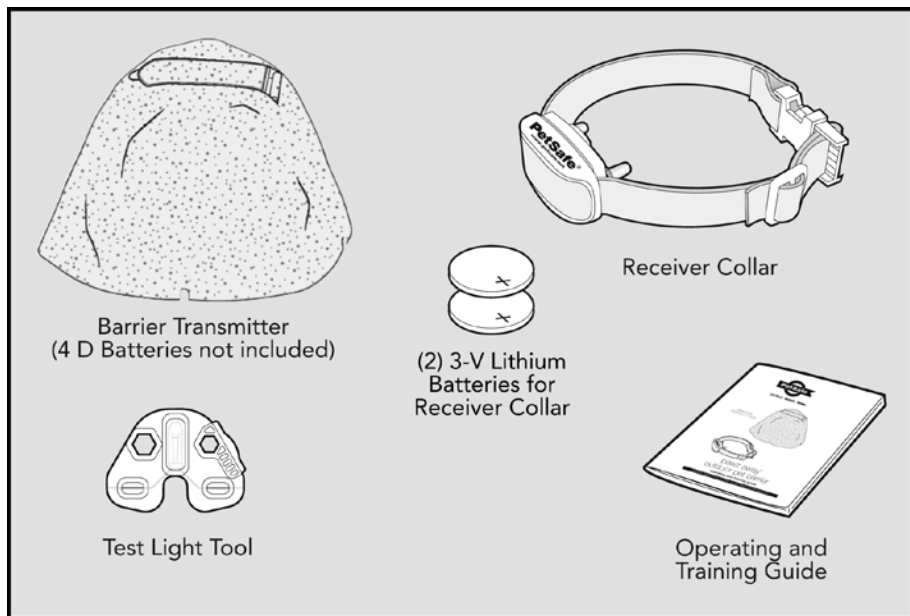

Barrier Transmitter
(4 D Batteries not included)

Receiver Collar

(2) 3-V Lithium
Batteries for
Receiver Collar

Test Light Tool

Operating and
Training Guide

Other Items You Will Need

- 4 alkaline D-batteries
- Phillips screwdriver
- Non-metallic collar and leash
- Scissors
- Lighter

Items needed for Custom Layout

- Boundary wire rated for direct burial
- Pliers
- Wire stripping pliers
- Shovel or lawn edger
- Circular Saw with Masonry Blade (depending on your layout)
- Waterproofing Compound (depending on our layout)

How the Pawz Away® Outdoor Pet Barrier System Works

The Barrier Transmitter, disguised as a rock in your landscape, sends a spherical radio signal up to 16 feet in diameter or an 8 foot radius. Your pet wears a Receiver Collar with Contact Points that touch his neck. When your pet enters the Barrier Area, he'll hear a series of audible tones from the Receiver Collar and he will feel a safe progressive Static Correction, delivered through the Contact Points on his neck. It is designed to startle, not to punish. The progressive Static Correction will get your pet's attention, but will not cause harm. The correction continues until your pet leaves the Barrier Area. If your pet doesn't leave, the collar will continue to correct at the maximum level after 3 seconds until the 15 second time-out. The system has been proven safe, comfortable and effective for pets at least 6 months old and over 5 pounds.

You also have the option to create a custom shaped barrier using Boundary Wire. Create a barrier loop up to 150 feet.

CAUTION

This is a deterrence system designed to keep pets away from areas in your landscape you want to protect. THIS IS NOT A CONTAINMENT SYSTEM. Do not use this system to keep your pet contained in your yard. The static correction is not intended to keep your pet contained.

Key Definitions




Barrier Transmitter: Transmits the wireless radio signal.

Barrier Area: Area that you want to prevent your pet from gaining access to.

Receiver Collar: Receives the radio signal from the Barrier Transmitter.

Contact Points: Deliver the safe progressive Static Correction when your pet enters the Barrier Area.

Progressive Static Correction: Static Correction begins at the lowest level and automatically increases to the maximum level within 3 seconds of first detection in the Barrier Area. From 3 seconds until the 15 second time-out, the collar will continue to correct at the maximum level until your pet leaves the Barrier Area.

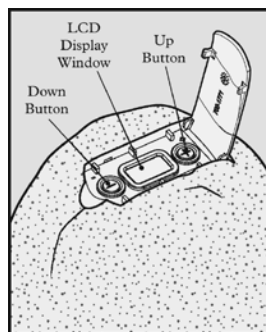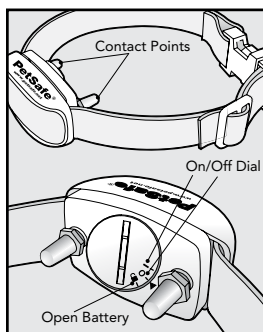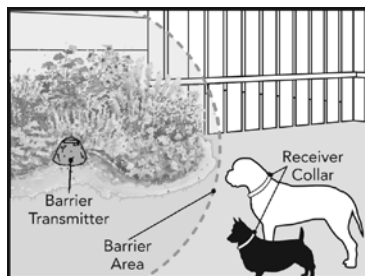

Operating Guide - Wireless Option

Step 1 Power Up the Barrier Transmitter

Locate the battery door on the bottom of the Barrier Transmitter. Loosen the 4 Phillips head screws. The screws will stay in the battery lid. Install 4 alkaline D-batteries and replace the battery door.


Under normal conditions, the batteries will operate the transmitter for up to one year. Test the system every month to ensure it is working properly.

Step 2 Set Up the Barrier Transmitter

CAUTION

To prevent an unintended correction, never perform set-up procedures while your pet is wearing the Receiver Collar.



1. Turn the Barrier Transmitter upright and open the lid exposing the LCD display and range buttons.
2. Press the up (+) button once to turn ON the Barrier Transmitter. A black segment in the bottom of the LCD display indicates the unit is set to the lowest range (2A).
3. Each segment represents approximately two feet of diameter. You can create a Barrier Area up to 16 feet in diameter. Using the up (+) and down (-) buttons, adjust the range to fit the desired pet Barrier Area.

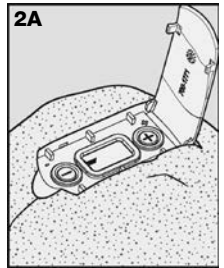

Step 3 Test the Barrier Area

Keeping your hands away from the Contact Points, use the edge of the Test Light Tool to turn the receiver battery door to the ON(I) position.

4. Hold the Receiver Collar with the Contact Points facing up. Place the Test Light Tool on the Contact Points so that the wire in the Test Light Tool touches the Contact Points (3A). The PetSafe® logo on the Receiver Collar should face the Transmitter.
5. Hold the Receiver Collar at the approximate height of your dog's neck (3B). Start outside of the range and walk slowly toward the Barrier Transmitter. As you reach the Barrier Area, the Receiver Collar emits a series of high-pitched tones. For each tone you hear, you should notice the Test Light flashing which indicates that a progressive Static Correction is being delivered. The Receiver Collar's tone is easily heard by dogs but may be at a volume level difficult for some humans to hear.
6. Check the range of the Barrier Area from multiple angles to ensure you are getting the desired coverage.

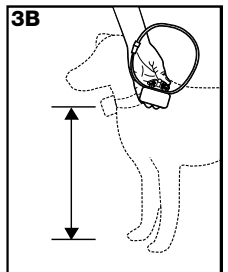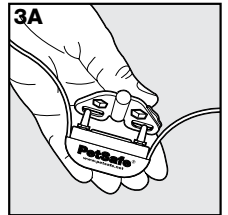

If you place the Barrier Transmitter close to your house, the signal may transmit through a wall. Be sure to test the Receiver Collar inside your home.

Important: Should you find that you are not getting the desired range at the maximum setting, move the Barrier Transmitter a few feet. A variety of factors can affect the magnetic field. For best results, place the Barrier Transmitter on a non-conductive surface, i.e., lawn or landscape bed. Metal objects may distort the Barrier Area size.

Do not:

- **Place Barrier Transmitter on metal surfaces.**
- **Place Barrier Transmitter near large metal objects such as heating and air conditioning units, metal outbuildings, metal trash cans, etc.**
- **Place the Barrier Transmitter in a location where it may become submerged in water. While the Transmitter is waterproof, submersion in water is not recommended.**
- **For the longest battery life, avoid exposing the transmitter to extreme temperatures for any extended time.**

Step 4

Fit the Receiver Collar on Your Pet

Important: Proper fit and placement of your Receiver Collar is necessary for effective operation. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

CAUTION

Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- Examine the contact area daily for signs of a rash or a sore.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.
- For additional information on bed sores and pressure necrosis, please visit our website.

These steps will help keep your pet secure and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.


You may need to trim the hair in the area of the Contact Points. Never shave the dog's neck; this may lead to a rash or infection.

To assure a proper fit, please follow these steps:

1. Using the Test Light Tool, turn the battery door to the OFF(O) position.


Start with your pet standing comfortably (4A).

2. Place the Receiver collar on your pet so that the PetSafe® logo is facing your pet's chin. Center the Contact Points underneath your pet's neck, touching the skin. If your pet has a long or thick coat then it may be necessary to trim the hair around the Contact Points to make sure that contact is consistent.

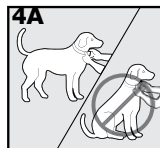

Note: The Receiver Collar comes with short Contact Points. Long Contact Points are available and can be purchased through the Customer Care Center. Please see the Accessories section of this Operating and Training Guide for more information.


Adjust the tightness of the Receiver Collar to fit your pet's neck. Check the tightness of the Receiver Collar by inserting one finger between the end of a Contact Point and your pet's neck. The fit should be snug but not constricting (4B).

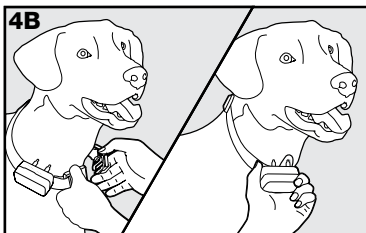


3. Allow your pet to wear the Receiver Collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Receiver Collar.

Once you are satisfied with the fit of the Receiver Collar then you may trim any excess collar strap as follows (4C):


- a. Mark the desired length of the Receiver Collar with a pen. Allow for growth if your pet is young or grows a thick winter coat.
- b. Remove the Receiver Collar from your pet and cut off the excess.
- c. Before placing the Receiver Collar back onto your pet, seal the edge of the cut collar by applying a flame along the frayed edge.

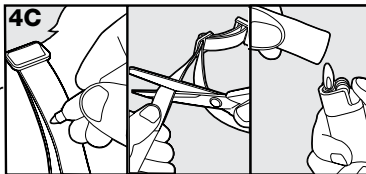


To Re-Thread the Collar



The slide buckle prevents the collar from becoming loose around your pet's neck.



The ridges must be facing up; the collar will slip if it is not properly threaded.



Receiver Collar Batteries

The PetSafe® Outdoor Pet Barrier Receiver Collar uses two 3-volt Lithium coin cell batteries, size CR2032 (RFA-35-11). Replacement batteries can be found at many retailers or directly through PetSafe®. Contact the Customer Care Center at 1-800-732-2677 or visit our website at www.petsafe.net to locate a retailer near you.

To replace the batteries:

1. Using the Test Light Tool, turn the battery door to the OPEN(🔓) position.
2. Lift the battery door out and turn the door over. The two 3-volt Lithium coin cell batteries are stored inside the door.
3. Remove the old batteries and insert new batteries with the positive (+) side facing the battery door lid.
4. Insert battery door back into the Receiver Collar and turn to either the OFF(O) or ON(I) position to lock the door in place.

Battery life will vary depending on how often your pet tests the system and receives a Static Correction. Check the Receiver Collar and Barrier Transmitter every month to ensure the system is working properly. To prolong battery life, it is recommended that you turn the Receiver Collar and Barrier Transmitter OFF when not in use.

Operating Guide - Wire Option

You can customize the size and shape of your barrier. This section discusses laying an external wire which attaches to the Barrier Transmitter. The signal will transmit through the wire, instead of through the Barrier Transmitter, at a range up to 12 feet from the outside of the wire.

You can create a barrier using up to 150 feet of Boundary Wire. Use wire that is rated for direct burial. PetSafe® Boundary Wire can be purchased in 150 foot spools through the Customer Care Center.


Step 1 Determine Placement of Barrier Transmitter & Wire Layout

Basic Planning Tips

⚠️ WARNING

Underground cables can carry high voltage. Have all underground cables marked before you dig to bury your wire. In most areas this is a free service. Avoid these cables when you dig.

When determining your wire layout it is important to remember that you will need to set the range to a minimum of 3 segments (5A) when using the wire option. The segments indicate the barrier range. If the range is set to 1 or 2 segments, the signal will not be great enough to be picked up by the Receiver Collar. Refer to the chart below for the approximate range of the signal from the outside of the wire for each segment.

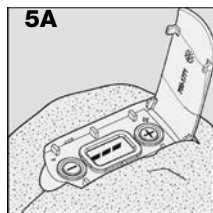


Segment	Range from Wire
3	3 feet
4	5 feet
5	8 feet
6	12 feet

The range will vary depending on the type of layout. Once you lay out your desired barrier continue to Step 2 and 3 before burying the wire. It is important that you test the system and make adjustments to your layout before burying the boundary wire. This will make any layout changes easier. Work carefully. A nick in the wire insulation can diminish the signal strength and create a weak area where your pet can enter the barrier area.

Additional tips for laying out your boundary wire:

Always use gradual turns (**5B**) at the corners with a minimum of 3 foot radius to produce a more consistent boundary. Do not use sharp turns (**5C**), as this may cause gaps in your boundary.



- Avoid making passageways too narrow for your pet to move about freely (e.g., along the sides of a house).

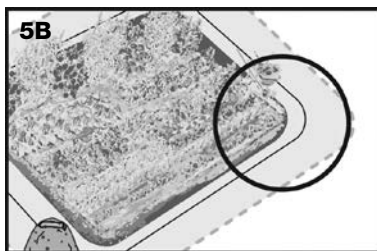

Sample Layouts

Perimeter Loop (Single Loop)

The Perimeter Loop is the most common layout. This will allow your pet to freely and safely roam your entire property while protecting gardens (**5D**), children's play areas (**5E**) and landscaping.

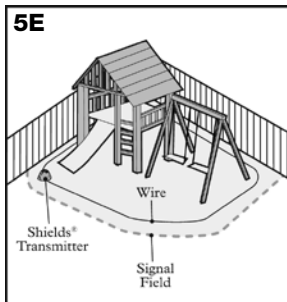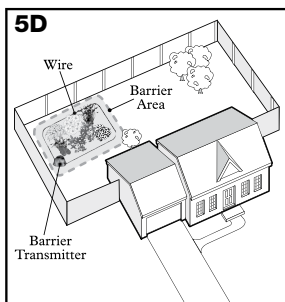

Step 2 Connect the Wires to the Barrier Transmitter

1. Remove the battery door from the Barrier Transmitter by loosening the 4 Phillips head screws. Remove the 4 D-batteries if you had already placed them inside the transmitter.
2. Locate the switch inside the battery cavity. This switch allows the Barrier Transmitter to operate as a wireless (internal antenna) or wired (external antenna) unit. Move the switch to the "External" option so that the radio signal is sent through the wire (6A).
3. Using the wire stripping pliers, strip about ¼ inch of insulation from the ends of the Boundary Wire. Use pliers to bend each end of the wire to form a 90 degree angle (6B).
4. Place one end of the Boundary Wire into the Boundary Wire Channel on the Barrier Transmitter. The wire should touch the threads of one of the screws in the channel. Once you have placed the wire, tighten the screw (6C).





Repeat this step to connect the other end of the boundary wire to the opposite side of the second screw. Make sure the bare wires do not touch each other.

5. Place the batteries back into the transmitter and carefully bend the wires so they fit through the groove on the battery door (6D).

Be careful not to pull or tug on the wires once you have placed them in the channels.

6. Screw the battery door in place and position the Barrier Transmitter in your landscape.

Under normal conditions, the batteries will operate the transmitter for up to one year. Test the system every month to ensure it is working properly.

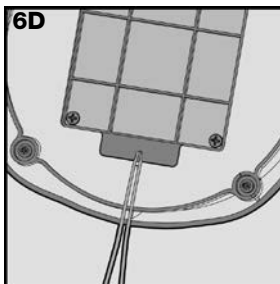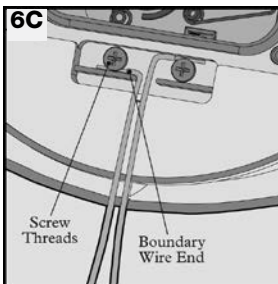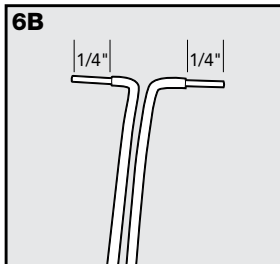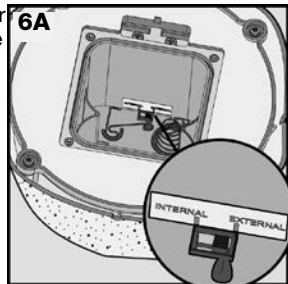

Step 3 Test the Barrier Area

Refer to Wireless Option Step 3 on page 7 for instructions on how to test the Barrier Area. Keep the following in mind when testing the range using the wire option:

- Start with the range set to 3 segments and adjust the range up to 6 segments to get your desired coverage. Press the (+) button 3 times to set the range to 3 segments.
- When holding the Receiver Collar to check the range, walk toward the Boundary Wire instead of the Barrier Transmitter.

Once you are satisfied that your system is functioning properly and you are receiving the desired barrier coverage, you are ready to bury the Boundary Wire. If the Receiver Collar did not beep or the Test Light did not flash, see the “Troubleshooting” section.

Step 4 Install the Boundary Wire

For best results, bury the Boundary Wire to protect it. The Boundary Wire can be placed under mulch, however, be sure that the Boundary Wire is placed in low traffic areas to reduce the risk of wire damage.


To Bury the Boundary Wire

1. Cut a trench 1-3 inches deep along your planned boundary.
2. Place the Boundary Wire into the trench maintaining some slack to allow it to expand and contract with temperature variations.
3. Use a blunt tool such as a wooden paint stick to push the Boundary Wire into the trench. Be careful not to damage the Boundary Wire insulation.

To Attach the Boundary Wire to an Existing Fence



The Boundary Wire can be attached to a chain link fence, split rail fence, or a wooden privacy fence. The Boundary Wire can be attached as high as needed. However, make sure the Boundary Range is set high enough for the pet to receive the signal.

- Chain Link Fence (**7A**): Weave Boundary Wire through the links or use plastic quick ties.
- Wooden Split Rail or Privacy Fence (**7A**): Use staples to attach Boundary Wire. Avoid puncturing the insulation of the Boundary Wire.

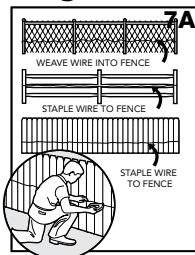

To Cross Hard Surfaces (sidewalks, pathways etc.)

Concrete Sidewalk (7B): Place the Boundary Wire in a convenient expansion joint or create a groove using a circular saw and masonry blade. Place the Boundary Wire in the groove and cover with an appropriate waterproofing compound. For best results, brush away dirt or other debris before patching. Gravel or Dirt Pathway (**7C**): Place the Boundary Wire in a PVC pipe or water hose to protect the Boundary Wire before burying.

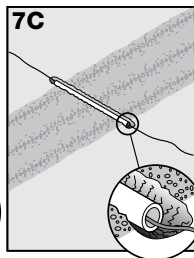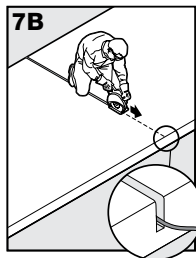

Step 5

Fit the Receiver Collar

Refer to Wireless Option Step 4 on page 8 in this guide for instructions on how to properly fit the Receiver Collar on your dog's neck.

Additional Feature

Time Out Feature

For your pet's safety, the Receiver Collar has a built in Time Out feature. If your pet stays in the Barrier Area for longer than 15 seconds the Receiver Collar will stop delivering the progressive Static Correction. The Receiver Collar will then administer a random single Static Correction every 5 to 10 seconds at the maximum level until the pet leaves the Barrier Area. Once your pet leaves the Barrier Area, the Receiver Collar resets itself and will deliver a progressive Static Correction the next time your pet enters the Barrier Area.

Training Guide

The PetSafe® Pawz Away® Outdoor Pet Barrier operates on the principle of positive and negative reinforcement. Your pet will learn to avoid the Barrier Areas you have set after receiving a progressive Static Correction (negative reinforcement) and your pet will learn that he is more comfortable when he avoids the Barrier Areas (positive reinforcement).

In some cases, it may not be necessary to train your pet. You can let your pet wander freely to determine the new boundaries. **Monitor your pet during his first session.** Pets learn at different rates and it may take several times for your pet to successfully understand and honor the Barrier Areas.

Begin Your Pet's First Session

1. Move your pet away from the Barrier Area.
2. Activate the Receiver Collar by turning the battery door to the ON position. Place the Receiver Collar around your pet's neck. Be sure that the Receiver is directly under your pet's neck.
3. Allow your pet to wander freely to learn the new boundaries.

Further Training

If your pet is confused or unsure how to avoid the Barrier Areas then you may need to teach your pet how to do so by following these easy training steps:

1. Place a second non metallic collar on your pet ABOVE the Receiver Collar and attach a long leash.

CAUTION

Be sure the extra collar does not put pressure on the Contact points of the Receiver Collar.

2. Walk your pet toward the Barrier Area. As soon as you hear the tone or you see that your pet is receiving a Static Correction, gently pull him away from the Barrier Area and back into the safe zone.
3. Reward your pet with praise each time he leaves the Barrier Area.
4. Practice this technique a few times until you feel that your pet is mastering avoidance of the Barrier Areas.

If your pet is having trouble recognizing the barrier you may need to provide a temporary visual aid. PetSafe® Boundary Flags can be placed around the perimeter of the Barrier Area to help your pet understand where he is not allowed to roam. Once your pet is trained to respect the barrier, the flags can be removed. Boundary Flags can be purchased through the Customer Care Center.

Important: Be sure to never force or entice your pet to enter the Barrier Areas.

Additional Information

- The system should only be used with healthy pets. Contact your veterinarian if you have concerns about the medical condition of your pet (medication, pregnant, heart conditions, etc).
- This system is not for vicious or aggressive pets. If your pet may pose a threat to others, **DO NOT USE THIS SYSTEM.** If you are unsure if your dog is aggressive, please consult your veterinarian or a certified trainer.

Accessories

To purchase additional accessories for your PetSafe® Pawz Away® Outdoor Pet Barrier System, contact the Customer Care Center at 1-800-732-2677 or visit our website at www.petsafe.net to locate a retailer near you.

Component	Part Number
Battery – 3 Volt Lithium (two pack - size CR2032)	RFA-35-11
Replacement Collar	RFA-308
Extra Receiver Collar	PWF00-13664
Extra Barrier Transmitter	RFA-378
Replacement Short and Long Contact Points	RK-17
Receiver Collar Battery Door	RFA-379
Boundary Wire, 150 feet	RFA-394
Boundary Flags	RFA-2

Troubleshooting

Barrier Transmitter does not appear to work	<ul style="list-style-type: none">• Check segment indicator on Barrier Transmitter.• Check/replace batteries in Barrier Transmitter.• Increase the Barrier Area range on the Barrier Transmitter.
Barrier Area range is too low	<ul style="list-style-type: none">• Check/replace batteries in Receiver Collar.• Adjust Barrier Transmitter range to increase Barrier Area size.
Barrier Area range is too high	<ul style="list-style-type: none">• Adjust Barrier Transmitter range to decrease Barrier Area size.
Pet seems to receive no stimulation	<ul style="list-style-type: none">• Check/replace batteries in Receiver Collar.• Use Test Light Tool to check for static correction.• Check Receiver Collar fit to ensure Contact Points have direct skin contact.
Unable to hear Receiver Collar tone	<ul style="list-style-type: none">• Check/Replace batteries in Receiver Collar.• Pets easily hear tone but it may be a volume level that is difficult for you to hear.• Use the Test Light Tool to check Receiver Collar for static correction.
No segments on Barrier Transmitter	<ul style="list-style-type: none">• Press the UP (+) arrow button.• Check/replace batteries in Barrier Transmitter.
Black bar(s) appear next to range segment on Barrier Transmitter display	<ul style="list-style-type: none">• Contact the Customer Care Center for assistance.
Pet receives stimulation while indoors	<ul style="list-style-type: none">• Remove Receiver Collar before bringing dog indoors.• Adjust Barrier Transmitter range to decrease Barrier Area size.• Move Barrier Transmitter or Boundary Wire further from house.
Receiver Collar is not picking up signal (wire option only).	<ul style="list-style-type: none">• Check/replace batteries in Receiver Collar.• Use Test Light Tool to check for static correction.• Change switch inside transmitter to Internal and check transmitter. If transmitter works and the receiver collar is picking up the signal, then it is likely that there is an issue with the Boundary Wire. Turn off the transmitter. Check the wire connection to the transmitter to ensure connection has not come loose or is corroded. If there is corrosion, cut out the corroded wire and reconnect the wire to the transmitter. If the connection is secure and there is no corrosion then you have a break in the Boundary Wire. To locate the break, check the boundary for any signs of damage (i.e. recent digging, aerating, rodent burrowing or any other noticeable disturbance in your yard next to the Boundary). If there are no signs of damage, you will need to carefully pull up the wire to determine where the break is. Once you have found the break, replace the damaged section of Boundary Wire with new Boundary Wire. Turn the transmitter on and test the system before re-installing the Boundary Wire.

Terms of Use and Limitation of Liability

1. Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this Product implies acceptance of all such terms, conditions, and notices.

2. Proper Use

This Product is designed for use with pets where training is desired. The specific temperament of your pet may not work with this Product. We recommend that you not use this Product if your pet is less than 5 pounds or if your pet is aggressive. If you are unsure whether this is appropriate for your pet, please consult your veterinarian or certified trainer.

Proper use includes reviewing the entire Guide provided with your Product and any specific Caution statements.

3. No Unlawful or Prohibited Use

This Product is designed for use with pets only. This pet training device is not intended to harm, injure or provoke. Using this Product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation® be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

5. Modification of Terms and Conditions

Radio Systems Corporation® reserves the right to change the terms, conditions and notices under which this Product is offered.

Compliance

FCC/Canada

This Class B digital apparatus complies with Canadian ICES-003. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a practical installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the interfered receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different to that to which the receiver is connected.
- Contact the Customer Care Center at 1-800-732-2677.

This device complies with Industry Canada Rules. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modifications to the equipment, not approved by Radio Systems® Corporation, could result in not meeting compliance with FCC regulations and could void the user's authority to operate the equipment.

Australia

This device complies with the applicable EMC requirements specified by the ACMA (Australian Communications and Media Authority).

Customer Care International

USA & Canada - Tel: 800-732-2677

Monday - Friday 8 AM - 8 PM / Saturday 9 AM - 5 PM

Australia - Tel: 1800 786 608

Monday - Friday 7:30 AM - 5 PM

New Zealand - Tel: 0800 543 054

Monday - Friday 10:30 AM - 7 PM

This product has the benefit of a limited manufacturer's warranty. Details of the warranty applicable to this product and its terms can be found at www.petsafe.net and/or are available by sending a stamped addressed envelope to Radio Systems PetSafe Europe Ltd. 2nd Floor, Elgee Building, Market Square, Dundalk, Co. Louth, Ireland, +353 (0) 42 942 1811

Perchlorate Battery

Perchlorate Material – special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Warranty

One Year Non-Transferrable Limited Warranty

This Product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this Product and its terms can be found at www.petsafe.net.

Australia/New Zealand - In compliance with the Australian Consumer Law, Warranties Against Defects, effective January 1, 2012, warranty details of this Product are as follows:

One Year Non-Transferrable Limited Warranty

What is covered: Radio Systems Australia Pty Ltd (hereinafter referred to as “Radio Systems”) warrants to the original retail purchaser, and not any other purchaser or subsequent owner, that its Product, when subject to normal and proper residential use, will be free from defects in material or workmanship for a period of one (1) year from the purchase date. An “original retail consumer purchaser” is a person or entity who originally purchases the Product, or a gift recipient of a new Product that is unopened and in its original packaging. When serviced by Radio Systems Customer Service, Radio Systems covers labor and parts for the first year of ownership; after the first year, a service or upgrade charge will apply relative to replacement of the Product with new or refurbished items at Radio System’s sole discretion.

The limited warranty is non-transferrable and shall automatically terminate if the original retail consumer purchaser resells the Radio Systems Product or transfers the property on which the Radio Systems Product is installed. This Limited Warranty excludes accidental damage due to dog chews; lightning damage; or neglect, alteration, and misuse. Consumers who purchase Products outside of Australia, New Zealand, or from an unauthorized dealer will need to return the Product to the original place of purchase for any warranty issues.

Please note that Radio Systems does not provide refunds, replacements, or upgrades for change of mind, or for any other reason outside of these Warranty terms.

Claims Procedure:

Any claim made under this Warranty should be made directly to Radio Systems Australia Pty Ltd Customer Care Centre at:

Radio Systems Australia Pty Ltd
PO Box 765, Mudgeeraba QLD 4213
Australia Residents: 1800 786 608
New Zealand Residents: 0800 543 054
Email: info@petsafeaustralia.com.au

To file a claim, a proof of purchase must be provided. Without a proof of purchase, Radio Systems will not repair or replace faulty components. Radio Systems requests the Consumer to contact the Radio Systems Customer Care Centre to obtain a Warranty Return number, prior to sending the Product. Failure to do so may delay in the repair or replacement of the Product.

If the Product is deemed to be faulty within 30 days from date of original purchase, Radio Systems will organise for a replacement to be sent in advance of returning the faulty Product. A Post Bag will be included with the replacement Product for the return of the faulty Product. The Product must be returned within 7 days of receiving the replacement. If the Product is deemed to be faulty after 30 days from the date of original purchase, the consumer will be required to return the Product to Radio Systems at the consumer’s own expense. Radio Systems will test and replace the faulty unit or its components and return to the consumer free of charge, provided the Product is within its said warranty period. This warranty is in addition to other rights and remedies available to you under the law. Radio Systems goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you have any queries or require any further information, please contact our Customer Care Centre on 1800 786 608 (Australia) or 0800 543 054 (New Zealand).

Radio Systems® Corporation
10427 PetSafe Way
Knoxville, TN 37932
1-800-732-2677
www.petsafe.net

Covered by US Patents 7,046,152; 7,068,174;
7,117,822; 7,204,204; 7,278,376; 7,495,570;
8,342,135; 8,430,064.
400-1424/2

©2014 Radio Systems Corporation