

SAFETY INFORMATION

To reduce the likelihood of injury please follow the guidelines as outlined in this instructions. You can visit our website www.mandmsalesinc.com to review the instruction manual in the future or keep this instruction sheet for reference: Free Spirit Travel Swing Models MM00126-PUR and MM00126-BLU.

The installation instructions above are reflective of the U.S. Consumer Product Safety Commission's Outdoor Playground Safety Handbook. For a complete description of installation instructions and warnings for outdoor playground equipment you can visit our website www.mandmsalesinc.com to link to the current CPSC handbook and review in its entirety.

Our products are tested to ensure safety and compliance with Consumer Product Safety Improvement Act of 2008 (CPSIA) including specifications for lead paint and phthalates and ASTM International F1148 Standard Consumer Safety Performance Specifications.

INSPIRING *outdoor* ADVENTURES

JOIN OUR MISSION TO INSPIRE CHILDREN
TO GET UP, GET OUT, AND PLAY!

M&M

M&M SALES ENTERPRISES, INC.
Dubuque, Iowa 877.242.0154
mandmsalesinc.com

Ages
3+

Free Spirit
travel swing™

TAKE IT WHERE
YOU GO!



SAFETY RATED

250
LBS.

QUICK AND SIMPLE SETUP!



CLIP
INCLUDED SPRING CLIPS TO
EXISTING SWINGSET HARDWARE

OR



LOOP AND CLIP
OVER TREE BRANCH

FREE SPIRIT TRAVEL SWING™ - STARGAZER PURPLE • MM00126-PUR
FREE SPIRIT TRAVEL SWING™ - SKY BLUE • MM00126-BLU


INSTRUCTIONS

INSTALLATION • OPERATION • MAINTENANCE • SAFETY

M&M

INSTALLATION INSTRUCTIONS

CHILDREN MUST NOT RIDE SWING UNTIL PROPERLY INSTALLED.

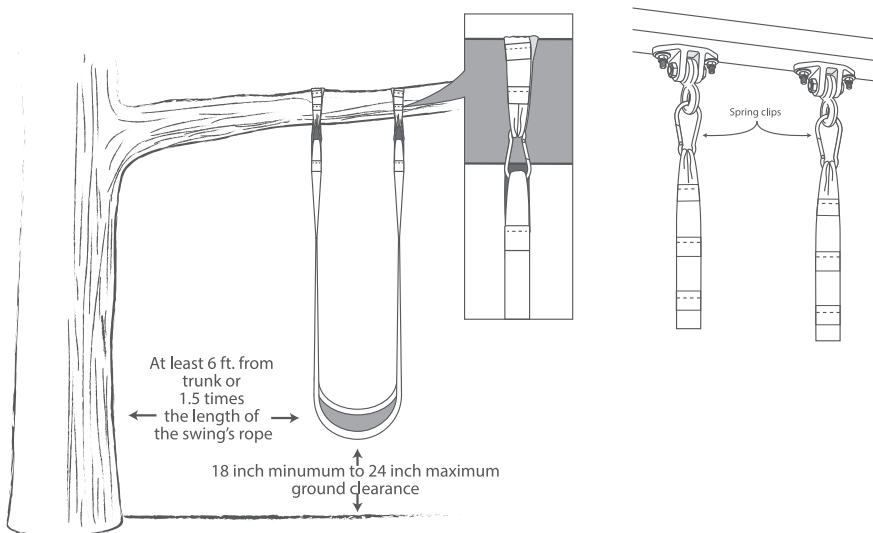

LOOP (TREE LIMB OR HORIZONTAL BEAM): Loop spring clips around limb (healthy, minimum 8 in. diameter) or beam and attach spring clip to a designated hanging loop on the same strap so swing seat when rider occupied is 18-24 in. above the ground surface.

CLIP (SWING SET): Attach swing to a swing set by securing spring clips to installed swing set hanging hook hardware.

1. Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
2. Swing should hang over level ground from a structure that has a minimum height of 7 ft. and is no less than 6 ft. from obstacles in the travel path of the swing. If hanging swing next to another component, a minimum clearance of at least 8 inches from adjacent swinging elements or any play equipment support structure is required.
3. Adjust swing hanging length so when rider is seated the swing hangs evenly balanced. Bottom of swing should be no more than 24 in. and no less than 18 in. from the ground.

OPERATION INSTRUCTIONS

1. An adult should supervise play on this product for children of all ages.
2. Examine the swing regularly with use. If any sign of fraying or deterioration is identified it is recommended to replace the swing.

3. Only for family residential domestic use. Design for single-rider use. 250 lb. maximum load. Maximum fall height 7 ft. (determined by maximum strap hanging length and 24 in. above ground surface).
4. Riders should be dressed appropriately including wearing well-fitting shoes that fully protect feet. Remove articles before swinging that create hazards when they get tangled and caught (examples include: ponchos, scarves, and other loose-fitting clothing, bike or sports helmets).
5. **INSTRUCT CHILDREN:** Not to swing higher than hook attachment • Get off swing only after it has completely stopped and hold onto the rope or chain until both feet are planted firmly on the ground • Not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope • To avoid swinging empty seats • Not to walk close to, in front of, or behind, or between moving items • To sit in center of the swings with their full weight on the seats • Not to use the equipment in a manner other than intended • Not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard • To remove their bike or other sports helmet before playing on the playground equipment. Do not ride swing when it is wet.

MAINTENANCE INSTRUCTIONS

1. At the **BEGINNING** of each play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed; Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303; Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary
2. **TWICE A MONTH DURING** play season: Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
3. **ONCE A MONTH DURING** play season: Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
4. At the **END** of each play season or when the temperature drops below 32°F: Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use; Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate dept h. Replace as necessary;
Owners shall be responsible for maintaining the legibility of the warning labels.
5. When you are ready to dispose of swing, make sure that all swing components are disposed of in accordance with local waste ordinances.
6. Swing should disassembled and disposed of in such a way that no unreasonable hazards exist at the time the swing is discarded.
7. **WARNING:** Failure to carry out these checks and inspections could result in fall or injury.