
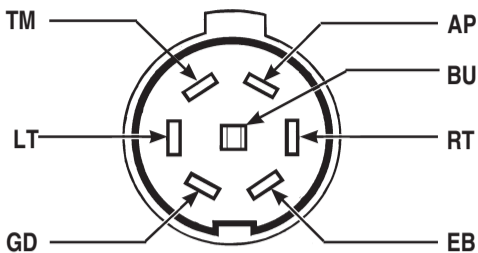


# #47435

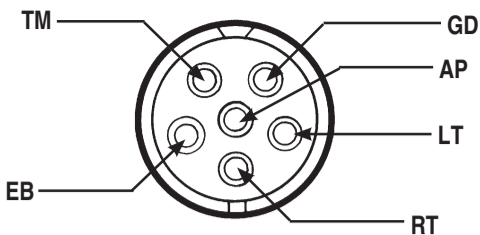

**GD = Ground**

**LT = Left turn**

**AP = Auxiliary power lead**

● Connect to fuse box or fused battery lead.

**EB = Electric brakes**

● Attach to electric brake control.

**BU = Reverse**

**TM = Tail**

**RT = Right turn**

## TIPS:

Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.

A heavy duty flasher may be required to eliminate rapid flashing.

Always unplug boat trailer connector before backing trailer into the water.

**NOTE: To change wiring functions, on the 6 round plug remove screws and switch black and blue wires.**

**NOTE: Locate wires and pin location by function only. Color coding is not standard among all manufacturers.**

---

**GD = Conexión a tierra**

**LT = Direccional izquierda**

**AP = Conductor de alimentación auxiliar**

● Conecte a la caja de fusibles o al conductor de la batería con fusible.

**EB = Frenos eléctricos**

● Una al control del transmisor eléctrico del freno.

**BU = Reversa**

**TM = Traseras**

**RT = Direccional derecha**

## CONSEJOS:

La aplicación regular de grasa a las terminales de los cables del remolque ayudará a prevenir la corrosión.

Se puede requerir una señal de destello de alta potencia para eliminar que las luces destellen rápidamente.

Siempre desconecte el conector del remolque de botes antes de retroceder el remolque dentro del agua.

**NOTA: Para cambiar la función de los cables, en el conector de 6 ronda remueva los tornillos invierta los cables negro y azul.**

**NOTA: Localice los cables y pasadors por función solamente. El código de colores no es la norma entre**