CODO
PROGAMABLE AND INTERACTIVE ELEPHANT
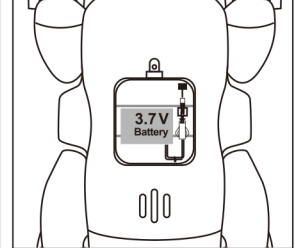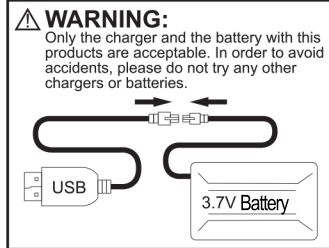
INSTRUCTIONS Item# 17005

Keep this instruction sheet for future reference, as it contains important information.
Adult supervision required . Contains small pieces.
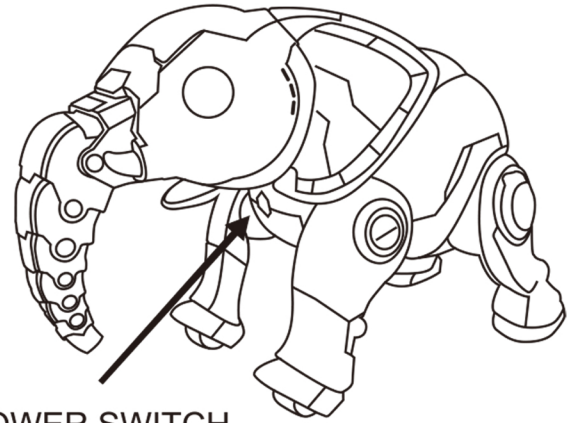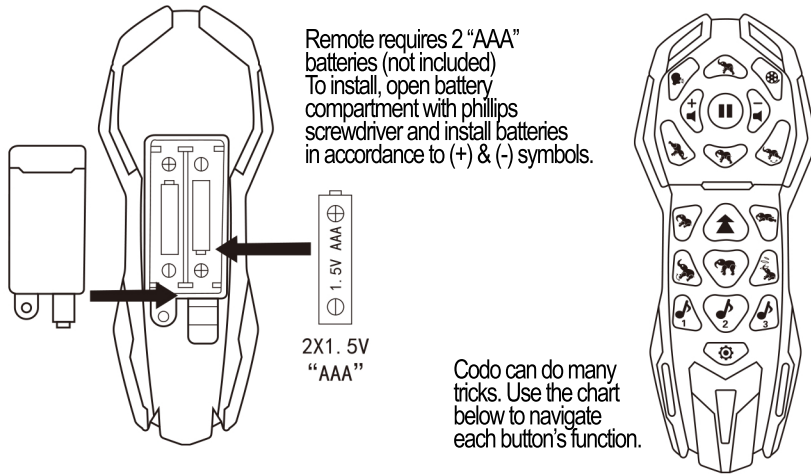
Jupiter Creations

⚠ **WARNING:** All instructions and warnings must be strictly observed. Improper disposal of polymer batteries may lead to: Fire accidents, physical injuries, or property loss.

1. Adult supervision required to handle lithium battery and charger.
2. If you notice the battery bulge at any time, stop using this product immediately. If you continue to use a bulging battery, it may cause a fire accident.
3. Store batteries in dry places with room temperature.
4. Do not leave battery exposed under direct sun light. This may cause damage to the battery and it can also cause a fire accident.
5. Do not charge battery with other chargers. Only use the desiganted charging USB cable to charge.
6. Keep battery and product away from chemicals.
7. Avoid contact with water. This product is not water-proof. Water vapor can also cause damage to the product.

⚠ CAUTION	⚠ WARNING	⚠ WARNING	⚠ WARNING	⚠ WARNING	⚠ WARNING
Always use a charger compatible with batteries.	Always charge Batteries away from flammable materials.	Never leave charging Batteries unattended.	Never charge damaged Batteries.	Never Alter Batteries.	Never touch or use hot Batteries.

⚠ **WARNING:**
Only the charger and the battery with this products are acceptable. In order to avoid accidents, please do not try any other chargers or batteries.

USB — 3.7V Battery

3.7 V Battery

Charge time for batteries: 4 hours. To install charged battery: Use phillips screwdriver to open battery compartment and connect battery to unit.

Remote requires 2 "AAA" batteries (not included) To install, open battery compartment with phillips screwdriver and install batteries in accordance to (+) & (-) symbols.

1.5V AAA

2X1.5V "AAA"

Codo can do many tricks. Use the chart below to navigate each button's function.

POWER SWITCH

CONTROL BUTTONS:

ADVANCE:
Codo will take a step forward.

STOP:
Codo will stop his current action. Use this button to stop voice command feature.

DEMO MODE:
Codo will perform a pre-programed routine showcasing all of his tricks.

PROGRAMMING:
1. Codo can do a sequence of tricks. Press the programing button.
2. Press up to 5 of Codo's tricks in the order you want him to perform.
3. Once you selected the sequence, press the progaming button again.
4. Codo wil perform the tricks you selected in the order you programmed.
5. You can hit the STOP button at any time to pause and reset.

STAND:
Codo will stand on his four legs.

TRUNK UP:
Codo will move his trunk up.

TRUNK DOWN:
Codo will move his trunk down.

LAY DOWN:
Codo will lay down stretching his legs out.

HAND STAND:
Codo will stand on his front two legs and head.

PUSH UPS:
Codo will get down and do 3 push ups.

VOICE COMMANDS:

Codo recognizes seven voice commands. Press this button and speak one of the following commands loudly at Codo's head, and he will perform the trick.

RING TOSS:
Codo wil sit and begin to raise and lower his trunk so you can throw rings and try to have him catch them.

SIT DOWN:
Codo will sit on his back legs.

SAY HELLO:
Codo will sit and move his head and trunk as to say hello.

"SING A SONG"   "SAY HELLO"
"SIT DOWN"   "STAND"
"HANDSTAND"   "LEAN OVER"
"PUSH UPS"   "STAND"

VOLUME CONTROL:
Turn volume up or down.

DANCE:
Codo has three pre-programmed dance routines. You can hit the stop buton to pause.